

Sharper Image Dual Smartphone Charging Station User Manual

Home » Sharper Image » Sharper Image Dual Smartphone Charging Station User Manual




USER MANUAL

Thank you for purchasing the Sharper Image Dual Smartphone Charging Station. Please take a moment to read this guide and store it for future reference.

Contents

- 1 IDENTIFICATION OF PARTS
- **2 HOW TO USE THE USB CHARGER**
 - 2.1 HOW TO USE THE WIRELESS CHARGING PAD
- **3 COMPATIBILTY**
- **4 PRODUCT SPECIFICATIONS**
- **5 WARNINGS**
- **6 WARRANTY / CUSTOMER SERVICE**
- 7 Questions about your Manual? Post in the comments!
 - 7.1 Related Posts


IDENTIFICATION OF PARTS

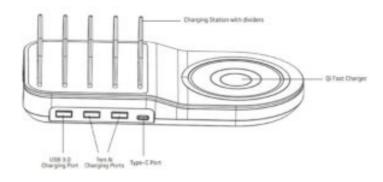

- · Place your smartphone into the divider.
- To charge non-Qi enabled smartphones: Connect a charger cable to your smartphone and connect the other end to the USB, Ai or Type-C port on the Dual Smartphone Charging Station.
- To charge Qi-enabled smartphones: Simply place your smartphone on the wireless charging pad.
- Your smartphone will automatically begin charging.

Note: Charger cables are not included. Please use the charging cable that is included with your smartphone or tablet devices.

 HOW TO USE THE WIRELESS CHARGING PAD



- Take your phone case off to achieve the best charging results. Leaving your phone case on can affect the charging speed or cause overheating.
- The built-in LED indicator will flash three times once your device is on the charging pad and a blue light will turn on when wireless charging begins.

Note: The temperature of your device might slightly rise while using the wireless charger. Using your device while charging or misaligning the device may cause higher temperatures.

COMPATIBILTY

- Qi-enabled smartphones: iPhone XR, XS, XS Max, X, 8, 8 Plus, Google Nexus 4/5/6, LG V30, Sony Xpriea
 XZ2, Samsung Galaxy S9/S9 Plus/Note 8/S8/S8 Plus/S7/S7 Edge/S6 Edge+/Note 5 and more.
- Smartphones/tablets compatible with the USB charger: iPhone XR, XS, XS Max, X, 8, 8 Plus, 7, 7 Plus, 6S Plus, 6S, 6 Plus, 6, SE, 5S, 4S, Samsung Galaxy S9/S9 Plus/Note 8/S8/S8 Plus/S7/S7 Edge/S6 Edge/Note 5/S5, Google Pixel XL, Pixel, Google Nexus 6P, 5X, iPad Mini 2, iPad Mini 4, iPad Air, iPad Air 2 and tablets up to 10 inches, power banks, PSP, Kindle and more.

PRODUCT SPECIFICATIONS

Input: 100-240V ~ 50/60Hz

QC3.0 Output: 3.6V ~ 6.5V 3A, 6.5V ~ 9V 2A, 9V ~ 12V 1.5A

Ai Output: 5V 0 ~ 2.1A Type-C Output: 5V 2.4A

Wireless Fast Charge Output: 10W

Output: 50W (Max)

WARNINGS

- Do not place smart phones that are not Qi-enabled on the wireless charging pad.
- Don't expose to the product to liquids.

- Don't dissemble the product.
- · Avoid dropping the product.
- · Avoid extreme temperatures.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from Sharper Image.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

Read More About This User Manuals...

Sharper-Image-Dual-Smartphone-Charging-Station-Manual-Optimized.pdf

Sharper-Image-Dual-Smartphone-Charging-Station-Manual-Orginal.pdf

Questions about your Manual? Post in the comments!

Manuals+,