


## Sharper Image Electric Drum Mat User Manual

[Home](#) » [Sharper Image](#) » Sharper Image Electric Drum Mat User Manual 

### USER MANUAL

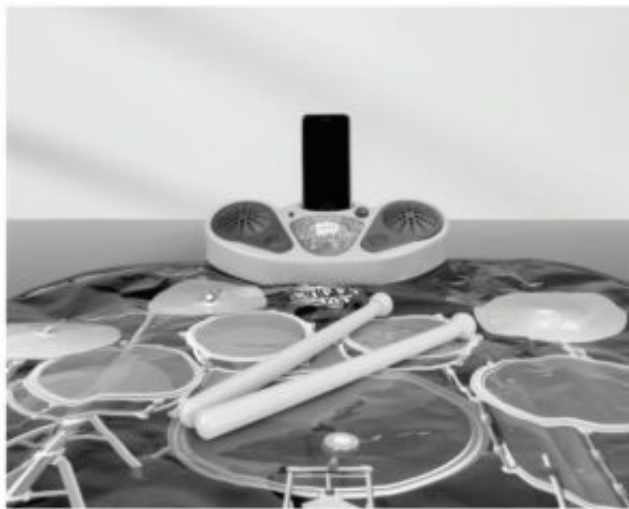

Get ready to rock... with the Sharper Image Rock 'N' Roll Electronic Drum Mat! Please take a moment to read this guide and store it for future reference.

#### Contents

- 1 FEATURES**
- 2 BATTERY INSTALLATION**
  - 2.1 OPERATING THE ROCK 'N' ROLL ELECTRONIC DRUM MAT**
- 3 BATTERY WARNING AND CAUTION**
- 4 WARRANTY / CUSTOMER SERVICE**
- 5 Questions about your Manual? Post in the comments!**
  - 5.1 Related Posts**

## FEATURES

- Touch sensitive mat
- 8 authentic drum sounds
- Adjustable volume
- Built-in “play-along” songs
- Plug in your MP3 to play along (MP3 player not included)
- Dual speakers
- LED lights on control box
- Includes drum sticks
- Includes headphone microphone
- Includes 3.5mm auxiliary audio cable
- Rolls up for storage
- Cordless and battery powered – 4 AA batteries (not included)
- Ages 3+

## BATTERY INSTALLATION

- Open the back battery compartment with a screwdriver and install 4 AA batteries (not included).
- Close the lid and flatten the mat.

## OPERATING THE ROCK ‘N’ ROLL ELECTRONIC DRUM MAT

- Press MODE 1/2 to select music mode:  
Mode 1 = drums only  
Mode 2 = play along with background music.  
Press “SELECT” to choose a built-in backup track.
- MP3 function: Connect an external device (MP3 player, tablet, smartphone, CD player, etc.) using the included 3.5mm audio cable. The drums will be able to play along with your favorite songs.  
**NOTE:** The built-in songs are disabled when an external music device is connected.
- Microphone function: Connect the included headset to the Rock ‘N’ Roll Electronic Drum Mat. Now you can sing along with the drums, and your voice will be heard on the built-in speakers.
- Adjustable volume: Turn the volume knob to find a comfortable volume level.

**PLAYING TIP:** For best results, place the Rock ‘N’ Roll Electronic Drum Mat on a hard surface — wood, tile, linoleum, etc.

## BATTERY WARNING AND CAUTION

- Battery replacement must be done by an adult.
- Be sure batteries are inserted with the correct polarity.
- Do not mix alkaline, standard and rechargeable batteries.
- Do not mix old and new batteries.

- Keep batteries out of the reach of children at all times.
- Do not use any sharp items on the mat.
- The mat is not washable. Spot clean only.

## **WARRANTY / CUSTOMER SERVICE**

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.

**Read More About This User Manuals...**

[Sharper-Image-Electric-Drum-Mat-Manual-Optimized.pdf](#)

[Sharper-Image-Electric-Drum-Mat-Manual-Original.pdf](#)

---

**Questions about your Manual? Post in the comments!**