



Sharper Image Electric S'mores Maker Instruction Manual

[Home](#) » [Sharper Image](#) » Sharper Image Electric S'mores Maker Instruction Manual 

USER MANUAL



Thank you for purchasing the Sharper Image Steering Wheel Bluetooth Speakerphone. This device is specially designed to help drivers dial or answer a call without compromising safety. Please read this instruction before using in order to know and use this product correctly.

Contents

1 IMPORTANT SAFEGUARDS

1.1 SAVE THESE INSTRUCTIONS – HOUSEHOLD USE ONLY

2 POLARIZED PLUG

3 DESCRIPTION OF PARTS

4 HOW TO ASSEMBLE

5 HOW TO USE

6 IMPORTANT WARNINGS:

7 HELPFUL HINTS

8 CARE AND CLEANING

9 WARRANTY / CUSTOMER SERVICE

10 Questions about your Manual? Post in the comments!

10.1 Related Posts

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the manufacturer for examination, repair or electrical or mechanical adjustment. All servicing, other than cleaning, should be performed by an authorized service representative. See Warranty section.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- The use of accessories or attachments not recommended by manufacturer may cause hazards.
- Do not move the appliance while it is still hot.
- Do not use outdoors.
- Do not use appliance for other than intended use.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not leave unit unattended while in use or when plugged into the wall outlet.
- NEVER melt chocolate or any other items directly on the S'mores maker base. Always use the sticks to roast marshmallows.
- Extreme caution must be used when moving an appliance containing hot liquids.

SAVE THESE INSTRUCTIONS – HOUSEHOLD USE ONLY

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

DESCRIPTION OF PARTS

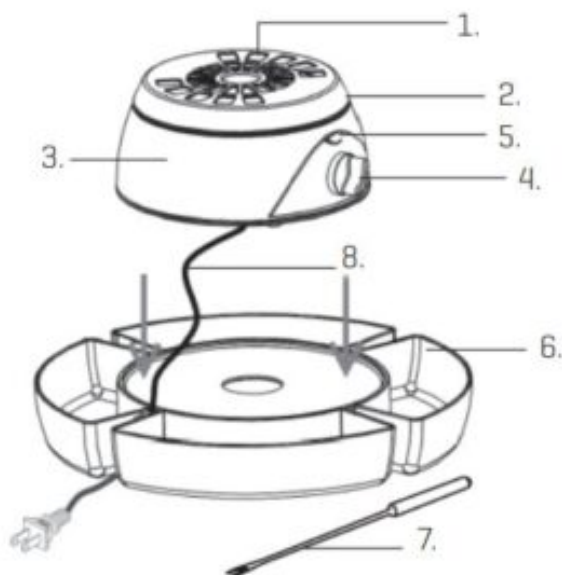

- Heating Element
- Stainless Cover
- Metal Base
- On/Off Control Knob
- Indicator Light
- Food Tray
- S'mores Sticks (4)
- Power Cord and Plug

HOW TO ASSEMBLE

- Center the Metal Base on the Food Tray. Ensure that the Power Cord fits in one of the gaps between the compartments in the Food Tray.
- Place the Stainless Cover over the Base.

HOW TO USE

- Fill the compartments of the Food Tray with graham crackers, chocolate and marshmallows.
- Turn the Control Knob to the ON position. The Indicator Light will illuminate.
- Preheat the appliance for at least 5 minutes for best results. **IMPORTANT NOTE:** The Stainless Cover and Base will be very hot. Ensure you do not touch these parts.

- Prepare graham sandwiches with a chocolate bar between 2 graham crackers.
- Pick a marshmallow using 1 of the sticks provided.
- Hold the marshmallow above the heater taking care not to touch the Stainless Steel Cover with the marshmallow. Rotate the marshmallow frequently until it browns and starts to melt.
NOTE: Toasting marshmallows should take approximately 2 minutes.
- When the marshmallow is golden brown and starts to swell, lift the top graham cracker off the prepared graham sandwiches and place marshmallow on the chocolate bar then replace the graham cracker on top. Lightly squish the ingredients together for a perfect S'mores sandwich!
- Turn the Control Knob to the OFF position.

IMPORTANT WARNINGS:

- Do not overcook the marshmallow as it may melt and fall off the stick onto the Stainless Steel Cover causing smoke or fire.
- If the marshmallow or any other food falls onto the Stainless Steel Cover turn the unit to the OFF position and allow it to cool completely before cleaning.
- NEVER touch the Stainless Steel Cover with your hands after the unit has been turned OFF. Always use oven mitts or potholders.

HELPFUL HINTS

- Have the graham cracker sandwiches ready before you start to toast the marshmallows.
- You can use a variety of combinations besides the traditional S'mores.
- Spread peanut butter on the graham crackers and add a slice of banana before adding the chocolate and marshmallow.
- Replace the graham cracker with a chocolate sandwich cookie. Split the cookie in half and add chocolate and the toasted marshmallow.
- Replace the graham cracker with butterscotch chip cookies. Use butterscotch chips instead of chocolate and add a toasted marshmallow drizzled with butterscotch sauce. Top with the butterscotch cookie.

CARE AND CLEANING

- Turn the Control Knob to the OFF position.
- Unplug from the wall outlet and allow to cool for at least 20 minutes. DO NOT touch until cool.
- Remove the Stainless Steel Cover from the Metal Base.
- Wipe the Metal Base with a damp, non-abrasive cloth. DO NOT immerse the base in water or any other liquid.
- Wipe with a dry cloth before storing.
- Wash the Stainless Steel Cover, Sticks and Food Tray in warm soapy water, not in the dishwasher.
- Rinse and dry.
- Never use abrasive cleaners on the Metal Base or Cover.
- All other servicing, other than cleaning, should be performed by an authorized service representative.

A short supply cord is provided to reduce the hazards of becoming entangled in or tripping over a long cord.

Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounded 3-wire cord. The extension cord should be arranged so that it will not drape over the counter top or table top, where it can be pulled on by children or tripped over.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

S H A R P E R I M A G E ®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

Read More About This User Manuals...

[Sharper-Image-Electric-Smores-Maker-Instruction-Manual-Optimized.pdf](#)

[Sharper-Image-Electric-Smores-Maker-Instruction-Manual-Original.pdf](#)

—

Questions about your Manual? Post in the comments!

[Manuals+](#).