



Sharper Image Heated Base Layer 206950 User Guide and Care Instructions

[Home](#) » [Sharper Image](#) » Sharper Image Heated Base Layer 206950 User Guide and Care Instructions

Contents [[hide](#)]

1 SHARPER IMAGE®

1.1 FEATURES

1.2 HOW TO USE

1.3 TEMPERATURE SETTINGS

1.4 CLEANING AND MAINTENANCE

1.5 BATTERY USE AND CARE

1.6 SAFETY WARNINGS

1.7 ALWAYS

1.8 NEVER

1.9 SPECIFICATIONS

1.10 WARRANTY / CUSTOMER SERVICE

2 Related Posts

SHARPER IMAGE®

HEATED BASE LAYER
Item No. 206950



Thank you for purchasing the Sharper Image Heated Base Layer. Please take a moment to read this guide and store it for future reference.

FEATURES

- Moisture-wicking long sleeve fitted shirt
- Heated technology (chest, back, arms and wrists)
- Wrist cuffs with thumb holes
- Four heat levels: High, Medium, Low and Smart Pre-Heat
- Machine washable
- Lightweight
- Available in Small, Medium, Large and X-Large
- Front of shirt made of polyester and spandex
- Back of shirt made of polyester, cotton and spandex
- 6-hour continuous run time
- Runs on 3 rechargeable lithium-ion batteries
- Includes a USB charging cable and AC adapter

HOW TO USE

- Plug the AC adapter into an outlet.
- Connect the rechargeable batteries to the battery connect wire until it is fully charged.
- The red light will illuminate while charging. When it is fully charged the light will turn green.

Note: Do not force the plug into the battery. Connect all 3 batteries with the wire when charging. Fully charge the Heated Base Layer battery before using for the first time. Failure to fully charge the battery prior to the first use may reduce battery life.

- When fully charged, disconnect the batteries from the charger and wire.
- Locate the input plugs inside the small pouches in the Heated Base Layer and connect the charged battery.

- Place the batteries into the pouch once connected. There are two pouches, one the left side and one pouch on the right side.
- Press and hold the control button in the Heated Base Layer to cycle through heat levels. Press and hold for three to five seconds or until the LED light flashes red to enter Pre-heat mode.

Note: Pre-heat is a battery saving mode. It occurs for the first five minutes of use and then automatically changes to medium heat to preserve battery life. You can bypass the Pre-heat level by pressing the button again.

- After approximately five minutes the light will change to solid white, indicating the Heated Base Layer is no longer in Pre-heat mode. The temperature can be adjusted by pressing the control button to cycle through high, medium and low.

TEMPERATURE SETTINGS

- Red- High heat: Average 102° F with approximate run time of 2.8 hours
- White- Medium heat: Average 95° F with approximate run time of 4.3 hours
- Blue- Low heat: Average 89° F with approximate run time of 8.6 hours

Note: Run times were tested under an average room temperature of 82.4° F.

- To turn off the Heated Base Layer press and hold the control button for three to five seconds or until the LED light turns off with one long vibration.
- Unplug the battery when the Heated Base Layer is not in use. Store battery inside the pouch of the Heated Base Layer when temporarily not in use.

Note: The Heated Base Layer should only be used with the included battery and charging cable.

- Wear the Heated Base Layer under a sweater, shirt, jacket or by itself.

CLEANING AND MAINTENANCE

- Always remove battery from the Heated Base Layer before cleaning.
- Spot clean with a damp cloth, hand wash in cold water with mild detergent or machine wash gently in cold water.
- Line dry only.
- Do not twist the garment as this can damage the cable.
- Do not dry clean or bleach.
- Do not tumble dry.
- Do not iron.

BATTERY USE AND CARE

- Do not use the battery if you notice a change of shape (lumps), overheating when charging, rust or corrosion on the battery connectors.
- Charge the battery regularly (recommended a minimum of once every 3 months).
- Charge between each use.
- The battery life is 300+ cycles before the battery will diminish in capacity output.
- The lithium-ion battery provides a diminished capacity output at extremely cold temperatures. Keep the battery

away from the cold to minimize damage.

- For best performance, it is recommended not to fully charge the batteries if the product is not being used for a longer period of time. Charge for 30 minutes only and after 3 months charge the batteries again for about 30 minutes. Charge the batteries completely before using the product again.
- When battery is not in use, keep it away from other metal objects like paper clips, coins, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery: avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help. Liquid ejected from the battery may cause irritation or burns.

SAFETY WARNINGS

- Do not expose product to rain. Water will increase the risk of electrical shock.
- Never use the cord for carrying, pulling or unplugging the heated product. Keep the cord clear from heat, oil, sharp edges or moving parts.
- Do not use on open wounds, sensitive skin areas or in the presence of poor circulation. Check skin frequently during use to ensure rashes or burns are not developing. The FDA and CPSC recommend the following precautions be taken to avoid hazards associated with the use of heated clothing.

ALWAYS

- Inspect heating unit before each use to assure it is in proper working order.
- Discard if it looks worn or cracked, or if the electrical cord is frayed.
- Read and follow all instructions prior to use.

NEVER

- Use on an infant.
- Use on a person who is paralyzed or has skin that is not sensitive to temperature changes.
- Use on a sleeping or unconscious person.
- Use in an oxygen enriched environment or near equipment that stores or emits oxygen.
- Sit on this device.
- Crush this device.
- Unplug this device by pulling its connecting cord.
- Use pins or other metallic fasteners to hold this device in place.
- Do not submerge product or battery into water while in use.
- Do not cut, puncture or tear into the lining of the product.
- Do not allow the battery to come into contact with water or other liquids. If water or liquids enter the battery interior, immediately disconnect the product from the battery. Allow the battery to dry completely before use.
- Do not penetrate, strike, short-circuit or disassemble battery.
- Keep all electronic components of your product away from fire and excessive heat.
- Do not leave product unattended while connected to the battery.
- Only use the charger and battery included with this product.

- If you experience any discomfort while using this product, remove it immediately and consult your physician before resuming use.
- Check with your physician if you are pregnant, have heart disease, a pacemaker, diabetes, circulatory problems, sensitivity to heat, or are under 13 years of age.

SPECIFICATIONS

Capacity: 2600 mAh

Voltage: 12V

Charge time: 2.5 hours

Battery type: Includes three 3.7V Li-ion rechargeable batteries

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

[Sharper-Image-Heated-Base-Layer-206950-User-Guide-and-Care-Instructions-Optimized](#)

[Sharper-Image-Heated-Base-Layer-206950-User-Guide-and-Care-Instructions-Original](#)