

Sharper Image Heated Blanket Instructions and Cleaning Manual

Home » Sharper Image » Sharper Image Heated Blanket Instructions and Cleaning Manual



USER MANUAL



Thank you for purchasing Sharper Image Heated Wearable Blanket. This cozy blanket is designed for a long life of enjoyment. Please take a moment to read this guide and store it for future reference.

Contents

- 1 FEATURES
- **2 INSTRUCTIONS FOR USE**
- **3 FIG. 1: ELECTRICAL CONNECTIONS**
- **4 FIG. 2: WIRED CONTROLLER CAUTION**
- **5 CAUTION**
- **6 CARE AND MAINTENANCE**
- **7 SPECIFICATIONS**
- **8 WARRANTY / CUSTOMER SERVICE**
- 9 Questions about your Manual? Post in the comments!

9.1 Related Posts

FEATURES

- · Soft and cozy electric blanket
- · Chest level heating panel
- · Sleeves allow arm and hand motion
- Adjustable heat (Low/Medium/High)
- · Wired controller
- 90 minute auto shutoff timer
- · One size fits most
- · Available in Tan or Dark Blue

INSTRUCTIONS FOR USE

- Attach the temperature controller to the connector in the front pocket (FIG.1).
- Plug the adapter to the temperature controller.
- Press the Power button to turn on the heat.
- Press the power button for 3 levels of heat (1->2->3)
- Press the Power button again to turn off the heat.

Note: The Heated Wearable Blanket features a 30-minute shutoff timer.

FIG. 1: ELECTRICAL CONNECTIONS

FIG. 1: ELECTRICAL CONNECTIONS

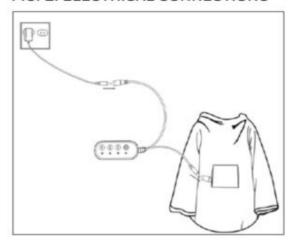


FIG. 2: WIRED CONTROLLER CAUTION

FIG. 2: WIRED CONTROLLER



CAUTION

- This item is not intended to be used by children.
- Excessive exposure to heat can lead to burns.
- Discontinue use if you see redness on the skin.
- Do not modify the unit or use it for any unintended purpose.
- Stop using the product immediately if you experience overheating or discomfort.
- Do not use the product when wet.

CARE AND MAINTENANCE

- Machine wash cold with similar colors.
- Do not bleach/Do not iron.
- Line dry/Do not dry clean.
- Unplug the heat blanket from the electrical outlet before cleaning.
- Store in a cool, dry place.

SPECIFICATIONS

• Adapter: Input: 100-240V~50/60Hz

• Output: DC 12V 2.0A

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

Read More About This User Manuals...

Sharper-Image-Heated-Blanket-Instructions-and-Cleaning-Manual-Optimized.pdf

Sharper-Image-Heated-Blanket-Instructions-and-Cleaning-Manual-Orginal.pdf

Questions about your Manual? Post in the comments!

Manuals+,