



Sharper Image Kodak Instant Camera Printer 207135 User Manual

[Home](#) » [Sharper Image](#) » Sharper Image Kodak Instant Camera Printer 207135 User Manual 

Sharper Image®

2X3 INSTANT CAMERA PRINTER
Item No. 207135



Thank you for purchasing the Sharper Image 2×3 Instant Camera Printer. Please take a moment to read this guide and store it for future reference.

FEATURES

- Prints 2×3 color photos

- Easy to use
- Compatible with Android and iPhone smartphones and iPads
- Includes printer paper (20 sheets) and one cartridge
- Extra printer paper and cartridges available for purchase

HOW TO DOWNLOAD THE APP TO YOUR SMARTPHONE

ANDROID


- Go to the Google Play Store on your smartphone
- Search “KODAK INSTANT PRINTER” and install it onto your smartphone

IPHONE


- Go to the App Store on your iPhone or iPad
- Search “KODAK INSTANT PRINTER” and install it onto your device

HOW TO CONNECT VIA BLUETOOTH

- Turn on the Bluetooth function on your device
- Turn the printer on
- Go to the Bluetooth setting in your smartphone or device and find “Kodak Instant-XXXX” (‘XXXX’ is a 4-digit combination of numbers and letters)
- Select the printer’s name to connect

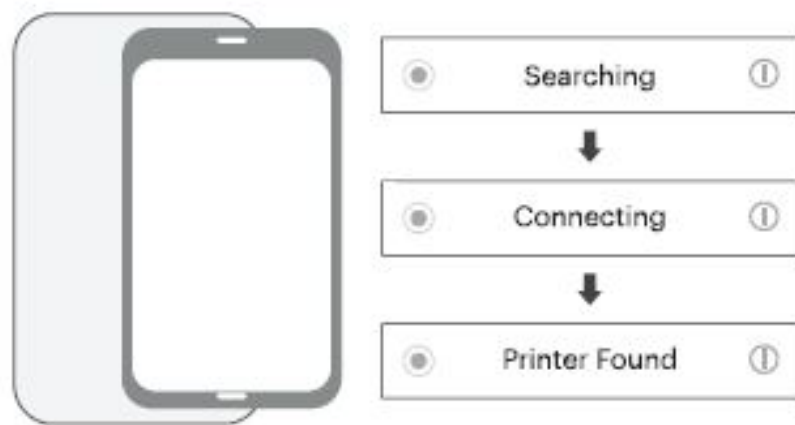

HOW TO CHANGE THE CARTRIDGE

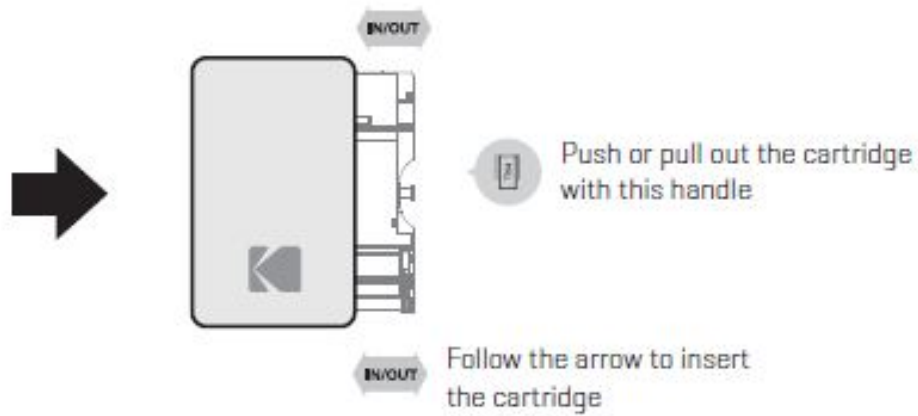

HOW TO PRINT USING THE APP

- Launch the Kodak Instant Printer app
- Click on “Gallery” to load your device’s photos in the app
- Select the photo you’d like to print
- Select the number of photos you’d like to make prints of
- Press the printer icon

WARNINGS

- The photo paper will go in and out 4 times (YMCO: Yellow, Magenta, Cyan and Overcoating)
- Don’t touch the paper during the printing process as this could affect image quality
- Do not pull the paper out by force during printing
- Do not place any objects in front of the paper exit slot
- Use the latest application for best printing quality. Check for the latest app version on the Google Play Store and the Apple App Store
- The printer has a built-in battery. Charge before using
- Handle with care while charging the printer to prevent electric shock
- Do not disassemble
- Avoid using the printer in humid areas and extremely cold conditions
- The higher resolution the image has, the higher quality the printed photo will be. Recommended image size is 1280 x 2448 pixels.
- Operating temperature is 0-104° F

POWER AND ACTIVE STATUS

Power On: White/Power Off (2 seconds)

Off/Printing: White Flickering

F.W. Upgrade: Pink Flickering

No Cartridge/Error: Red Flickering

Waiting/Cooling: White

CHARGING

Charging: Red

Charging Complete: Green
Connecting: Green Flickering
Bluetooth Complete: Green

TROUBLESHOOTING

SYMPTOM	CASE/SOLUTION
Problem	Power off and power on again. Paper will automatically be ejected. If not, please contact customer service.
Image quality is not good	Printer quality could be lower if your photo source has a low resolution. Recommended image size is 1280 x 2448 pixels for quality prints.
Printer is not responding	Press the reset button with a sharp tool like a pin.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

[Sharper-Image-Kodak-Instant-Camera-Printer-207135-Manual-Optimized](#)

[Sharper-Image-Kodak-Instant-Camera-Printer-207135-Manual-Original](#)