



Sharper Image LED Headband Cleaning and Instruction Manual

[Home](#) » [Sharper Image](#) » Sharper Image LED Headband Cleaning and Instruction Manual 

SHARPER IMAGE®
LED HEADBAND
Item No. 208954



Thank you for purchasing the Sharper Image LED Headband. Please take a moment to read this guide and store it for future reference.

FEATURES

- 3 light modes
- Made of 90% Polyester and 10% Spandex
- Built-in rechargeable LED light


- Operates on a 3.7V 250mAh rechargeable li-polymer battery

HOW TO USE

- Press the 'ON/OFF' switch on the LED light to cycle through the following functions: On / Normal Light / Blinking / Off.

HOW TO CHARGE

Before initial use, fully charge the battery, this typically takes 1.5 hours. Charge the LED Headband using a USB charger (not included).

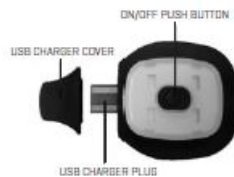

- To remove the lamp unit, pull the head lamp rim open and push the lamp out from the headband. Then pull off the USB charger cover.
- Plug the head lamp USB charger plug into the corresponding socket of the USB wall charger (not included) or 12V USB car charger socket (not included), power bank or similar device with minimum DC5V 1000 mAh output USB socket.
- The battery indicator light will illuminate white while charging. When the battery is fully charged, the indicator light will turn off.

LED LIGHT RUN TIME

- Low: Up to 6 hours
- Medium: Up to 3 hours
- High: Up to 1.5 hours
- Charge time: 100 minutes

CARE AND MAINTENANCE

- Switch the device off and disconnect the charger from the socket before cleaning.
- Charge the battery fully at regular intervals, when the device has not been in use to ensure optimum battery life.
- Clean the product with a soft, dry cloth. Do not use any form of abrasive cleaner or solvents to clean the unit. Never dip the head lamp into liquids.
- Store the device in a clean, dry and dark place. Do not expose it to temperatures of under 5° F for long periods of time.

DISPOSAL

Do not dispose of packaging or the product through your household waste! The product and packaging are made from recyclable materials (plastics, metals, paper).

If the product is no longer suitable for use dispose of it in an environmentally friendly manner in accordance with your local authority.

Warning: Dispose of used batteries in accordance with local authority regulations.

WARRANTY AND CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

S H A R P E R I M A G E ®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

[Sharper-Image-LED-Headband-Cleaning-and-Instruction-Manual-Optimized](#)

[Sharper-Image-LED-Headband-Cleaning-and-Instruction-Manual-Original](#)

Manuals+.