



## Sharper Image Nano RC Chopper 206080 User Manual

[Home](#) » [Sharper Image](#) » Sharper Image Nano RC Chopper 206080 User Manual 

### USER MANUAL



Thank you for purchasing the Sharper Image Nano RC Chopper. This is one of our smallest and most popular RC toys. Please take a moment to read this guide and get acquainted with its many features. Be sure to store this guide for future reference.

## Contents

### [1 FEATURES](#)

### [2 CHOPPER](#)

### [3 TRANSMITTER](#)

### [4 BATTERY INSTALLATION](#)

### [5 CHARGING YOUR NANO RC CHOPPER](#)

### [6 OPERATING INSTRUCTIONS](#)

### [7 DEMO MODE](#)

### [8 FLYING TIPS AND WARNINGS](#)

### [9 FCC STATEMENT](#)

### [10 WARRANTY / CUSTOMER SERVICE](#)

### [11 Questions about your Manual? Post in the comments!](#)

#### [11.1 Related Posts](#)

## FEATURES

 
- 3.5 channel RC helicopter
- Flies up/down, forward/backward and left/right
- Built-in gyroscope for stability
- Flashing LED running light / night light
- Infrared remote control
- Rapid charging (25 minutes)
- Includes USB charging cable
- 2 frequencies (A and B) for two-player fun

## CHOPPER






## TRANSMITTER

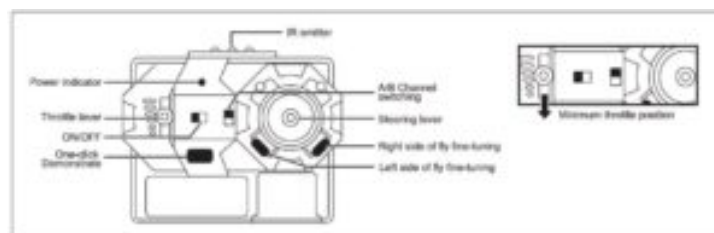


## BATTERY INSTALLATION

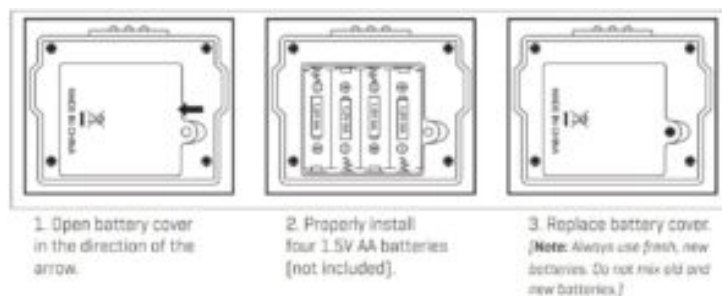 

## CHARGING YOUR NANO RC CHOPPER

- Insert one end of the USB cable into the Nano RC Chopper.
- Plug the other end into a USB port on your computer.  
**Note:** You may also use a phone charging adapter if you have one, and plug it into an AC outlet. (Adapter not included.)
- There is a red LED on the charging cable. When the LED is off, the chopper is charging. When the LED is illuminated, the chopper is fully charged.
- Charging time is approximately 25 minutes.
 
## OPERATING INSTRUCTIONS

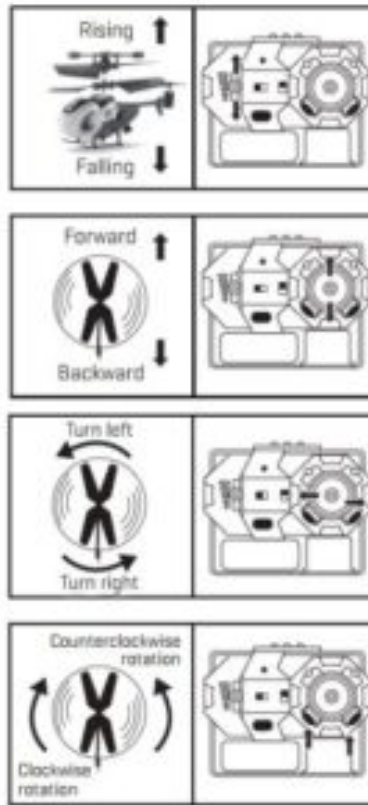

- Turn on the chopper power switch. The color-changing LED will light up.
- Turn on the transmitter power switch.
- To sync the transmitter with the Nano RC Chopper, push the throttle from maximum to minimum. When the frequency is detected, the chopper will be ready to fly.
- The A/B switch is for 2 players flying simultaneously. If two players are flying simultaneously, one must be on channel A, and the other must be on channel B.
- If the Nano RC Chopper pulls to one side, use the “L” and “R” fine tuning buttons to make it fly straight.
- See illustrations at right for flying instructions.

**NOTE:** After you finish flying the Nano RC Chopper, please wait 15 minutes before recharging it.

## DEMO MODE

Once the Nano RC Chopper is synced, press the “AUTO” button for a brief demonstration. The Nano RC Chopper will fly forward/backward/turn left/turn right 3 times.

## FLYING TIPS AND WARNINGS

- THIS CHOPPER HAS SMALL PARTS THAT CAN DETACH AND BECOME A CHOKING HAZARD. THIS TOY IS NOT FOR CHILDREN UNDER 3 YEARS OLD.
- For indoor use only.
- Do not fly near people or animals.
- Do not fly this chopper near streets or airfields.
- Do not touch vehicle while it is flying.
- Handle the chopper with care.
- Adult supervision is required at all times if young children are present.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.

**Read More About This User Manuals...**

[Sharper-Image-Nano-RC-Chopper-206080-Manual-Optimized.pdf](#)

[Sharper-Image-Nano-RC-Chopper-206080-Manual-Original.pdf](#)

---

**Questions about your Manual? Post in the comments!**