



# Sharper Image Portable Movie Theater Projector Instruction Manual

[Home](#) » [Sharper Image](#) » Sharper Image Portable Movie Theater Projector Instruction Manual 

## Contents

### [1 USER MANUAL](#)

### [2 FEATURES](#)

### [3 IDENTIFICATION OF REAR PANEL](#)

### [4 REMOTE CONTROL](#)

### [5 INSTALLATION INSTRUCTIONS](#)

[5.1](#) 1. Remove the shortest pole inside the fiber rod into the base of the upper tube.

[5.2](#) 2. Insert one end of the tee joint into the port of the fiber rod in Figure 1.

[5.3](#) 3. Insert one end of the fiber tube (which is the same height as the projection screen) into one end of the tee connection.

[5.4](#) 4. Take the fiber rod out and connect with the other rod (two pairs).

[5.5](#) 5. Insert the fiber rod (pictured in Figure 4) into the end of the tee joint (pictured in Figure 3.)

[5.6](#) 6. Insert the two-way connection into the upper fiber rod (pictured in Figure 3) and insert the other end into the fiber rod end (pictured in Figure 4).

[5.7](#) 7. Pull the curtain back along the fiber rod and the spring of the rope and through the curtain of the metal ring binding in the curtain bracket above. Adjust the curtain if it is uneven.

[5.8](#) 8. installation complete.

### [6 HOW TO CONNECT TO THE SPEAKERS](#)

#### [6.1](#) USB

#### [6.2](#) PHONE MHL LINE

#### [6.3](#) COMPUTER

### [7 SPECIFICATIONS](#)

### [8 WARNINGS](#)

### [9 WARRANTY/CUSTOMER SERVICE](#)

### [10 Questions about your Manual? Post in the comments!](#)

#### [10.1](#) Related Posts




Thank you for purchasing the Sharper Image Portable Drive-In Movie Theater. Please read this guide and store it for future reference.

## FEATURES


- 70" screen
- Watch movies, sporting events and more
- Features HDMI and USB inputs for projections
- Includes detachable stands, one remote control and one wireless microphone
- Includes an AC adapter



## IDENTIFICATION OF REAR PANEL

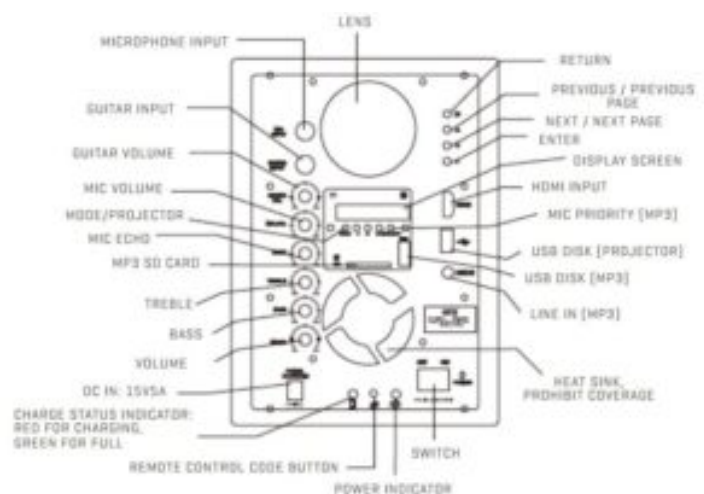


## REMOTE CONTROL

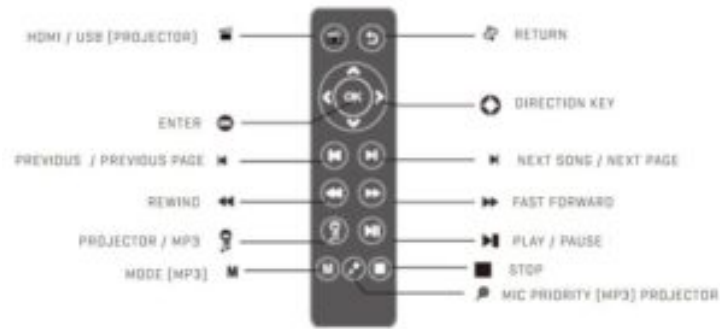


## INSTALLATION INSTRUCTIONS


1. Remove the shortest pole inside the fiber rod into the base of the upper tube.

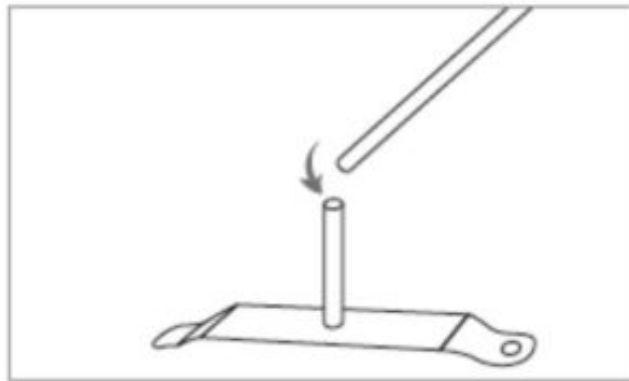


2. Insert one end of the tee joint into the port of the fiber rod in Figure 1.

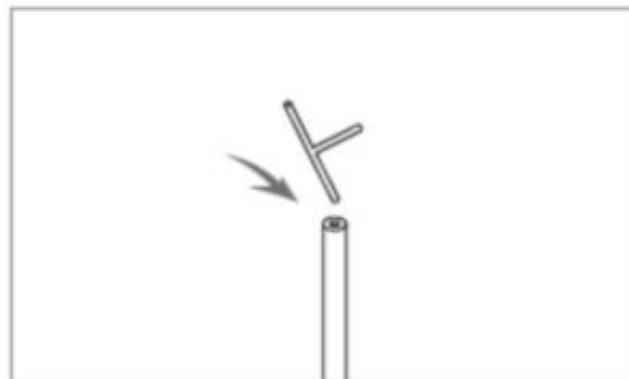


3. Insert one end of the fiber tube (which is the same height as the projection screen) into one end of the tee connection.

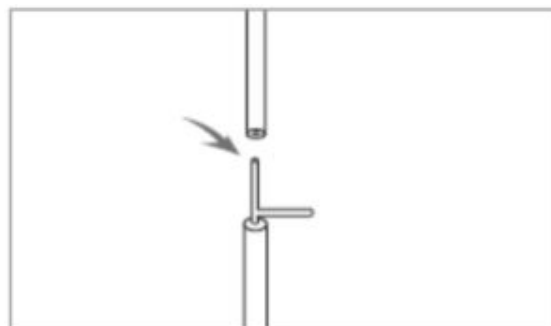


4. Take the fiber rod out and connect with the other rod (two pairs).

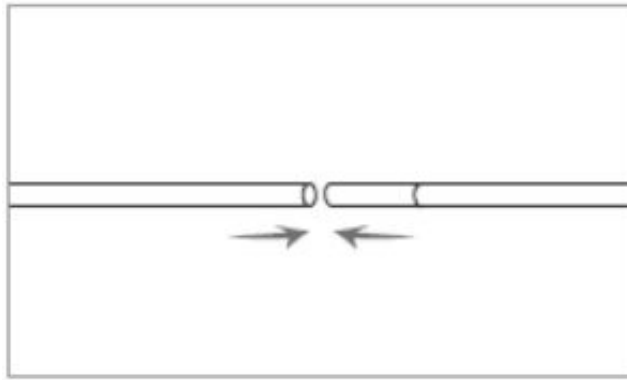


5. Insert the fiber rod (pictured in Figure 4) into the end of the tee joint (pictured in Figure 3.)

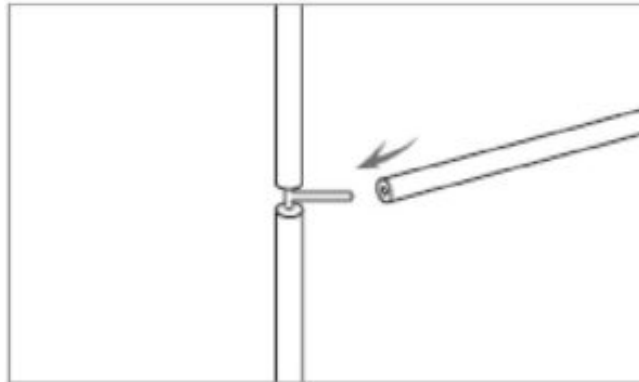


6. Insert the two-way connection into the upper fiber rod (pictured in Figure 3) and insert the other end into the fiber rod end (pictured in Figure 4).

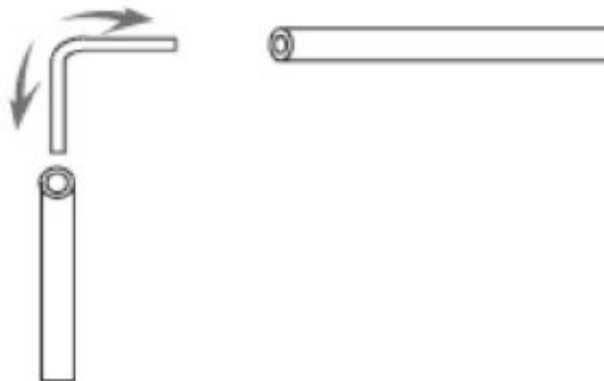

7. Pull the curtain back along the fiber rod and the spring of the rope and through the curtain of the metal ring binding in the curtain bracket above. Adjust the curtain if it is uneven.

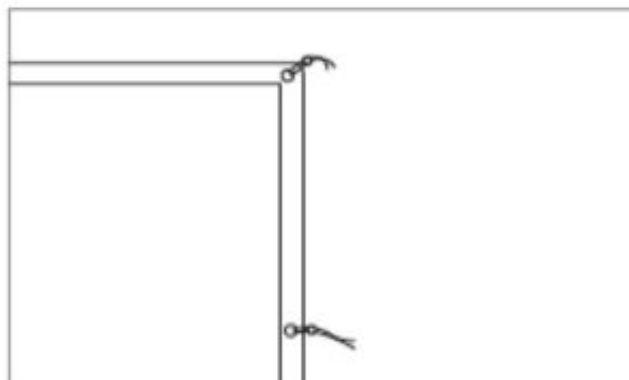


## 8. installation complete.

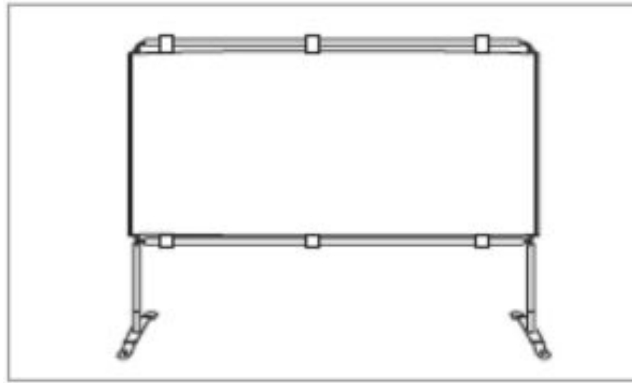

## HOW TO CONNECT TO THE SPEAKERS


### USB

Insert your USB (not included) into the USB slot to enter the video menu for selecting songs.

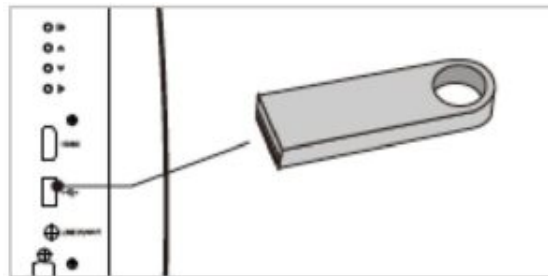


### PHONE MHL LINE

Connect the mobile MHL interface to the HDMI output. Note: cables are not included. Some phones do not support MHL.

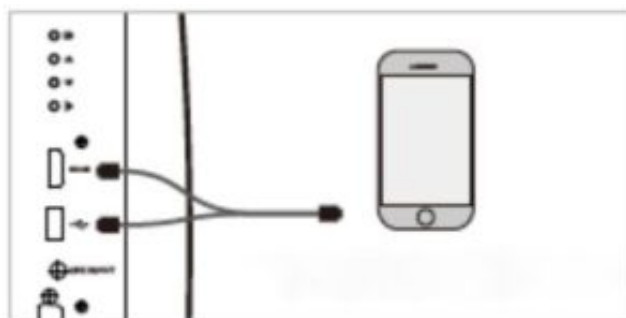

### COMPUTER

Connect a HDMI cable (not included) to your computer's HDMI interface to share the computer's screen so media will play on the projector.

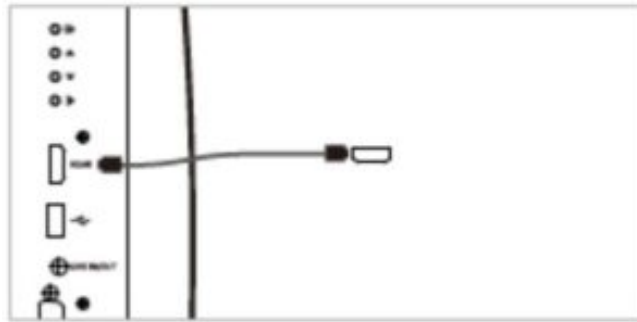

## SPECIFICATIONS

NO.		12A	POWER	OTHER SPECIFICATIONS
1	RESOLUTION	1280*720 PIXELS	S/N	±86DB
2	CONTRAST	5000:1	MIC	U WIRELESS MOVING COIL MICROPHONE
3	BRIGHTNESS	150 LUMENS	BATTERY	12V / 12AH
4	LAMP TYPE	LED	REMOTE CONTROL	INFRARED REMOTE CONTROL
5	LAMP LIFE	50000h	FREQUENCY RESPONSE	50HZ-20KHZ
6	PROJECTOR SIZE	38-200 INCH	POWER	16V / 4A
7	PLAYING TIME	3-4 HOURS	BASS	12 INCH
8	CHARGING TIME	4-5 HOURS	TREBLE	5 INCH
9	PROJECTOR DISTANCE	100-300 CM	WEIGHT	13.5 KG
10	IMAGING SCALE	16:9 / 4:3	EXTERNAL DIMENSION	13.4 x 11 x 20.5 INCHES
11	MENU LANGUAGE	ENGLISH	PACKING SIZE	15.8 x 13.4 x 37 INCHES
12	LINK PORT	AUDIO INPUT AND OUTPUT/HDMI/USB		
13	IMAGE FORMAT	JPG, JPEG, BMP, PNG		
14	MUSIC FORMAT	MP3, WMA, AAC		
15	VIDEO FORMAT	AVI, MP4, TS/TRP, MKV, MOV, MPG, DAT, VOB, RM, RMVB		
16	DOCUMENT FORMAT	TXT		

CURTAIN				
1	BRAND	GREENENERGY	BLACK BORDER AROUND	25MM
2	TYPE	QUICK RELEASE TYPE	LETTERBOX	25MM
3	MATERIAL	WHITE PLASTIC CLOTH	SIZE	16 INCH
4	ASPECT RATIO	16:10	AREA	1500*900MM
5	SCAFFOLD MATERIAL	FIBERGLASS PIPE		

## WARNINGS

- When transporting, place the speakers facing down.
- On your phone, switch the signal source to HD mode and then to the desired connection.
- The remote control has a built-in battery with a CR2032 battery.

## WARRANTY/CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a

1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**Read More About This User Manuals...**

[Sharper-Image-Portable-Movie-Theater-Projector-Manual-Optimized.pdf](#)

[Sharper-Image-Portable-Movie-Theater-Projector-Manual-Original.pdf](#)

—

**Questions about your Manual? Post in the comments!**