



Sharper Image Shaver Blade Replacement Instructions User Manual

[Home](#) » [Sharper Image](#) » Sharper Image Shaver Blade Replacement Instructions User Manual 

Item No. 207142



CHANGING THE FOILS

With normal use, the foils should last a long time. However, if the foils become damaged, you can replace them easily at home. For best performance, it is recommended to change the blades at the same time as the foils.



FIG. 1
HOLD THE SHIVER FIRMLY
WITH ONE HAND ON THE
SHAPER HEAD AND ONE HAND
ON THE BODY (FIG. 1).



FIG. 2
REMOVE THE SHAPER HEAD
FROM THE BODY (FIG. 2).



FIG. 3
USING A SMALL BLADE OR
SCREWDRIVER, CAREFULLY LIFT OUT
THE FOILS FROM THE SIDE, ONE AT A
TIME (FIG. 3-4).



FIG. 4

CHANGING THE BLADES

CHANGING THE BLADES



FIG. 5

USING YOUR HANDS ONLY, CAREFULLY INSERT THE NEW FOILS INTO THE SHAVER HEAD UNTIL THEY ARE PROPERLY SNAPPED IN PLACE. DO NOT USE TOOLS, AS THIS MAY DAMAGE THE FOILS [FIG. 5].

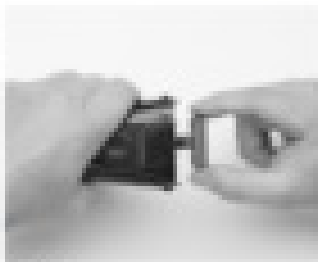


FIG. 6

WITH THE SHAVER HEAD DETACHED FROM THE BODY, GRASP ONE BLADE WITH YOUR THUMB AND INDEX FINGER. HOLD THE BODY FIRMLY WITH THE OTHER HAND [FIG. 6].



FIG. 7

ROCK THE BLADE SIDE TO SIDE, APPLYING GENTLE PRESSURE UNTIL IT LIFTS OFF THE BODY [FIG. 7]. REPEAT THIS STEP FOR THE OTHER BLADES.



FIG. 8

ATTACH THE NEW BLADES, USING FIRM BUT GENTLE PRESSURE [FIG. 8]. FINALLY, REPLACE THE SHAVER HEAD.

For World's Fastest Cordless Foil Shaver And Trimmer [Manual Optimized](#)

For World's Fastest Cordless Foil Shaver And Trimmer [Manual Original](#)