



Sharper Image Surround Sound Shower System User Manual

[Home](#) » [Sharper Image](#) » Sharper Image Surround Sound Shower System User Manual 

SHARPER IMAGE®

Surround Sound Shower System (Set of 2)

Item No. 206890

User Guide



Thank you for purchasing the Sharper Image Surround Sound Shower System (Set of 2). Please take a moment to read this guide and store it for future reference.

KEY FUNCTION



1. Hold the power button for 3 seconds to switch speaker on and off.
2. Short press for multi-color LED light:
 - Rotate colors
 - Select color

- No color/light



- Long press to play the previous song
- Short press to turn down the volume



- Long press to play the next song
- Short press to turn up the volume



1. Press to play or pause music or FM radio
2. Bluetooth mode: Long press the host speaker to connect or cut off the connections of two speakers
3. FM radio: Press and hold to search automatically
4. Press to answer or end phone call
5. Press and hold to reject incoming calls
6. Double press to redial



1. Short press to switch between wireless and FM radio
2. Long press the host speaker to cut off or reconnect the wireless connection with the device

FEATURES

- Wireless 5.0
- Waterproof IP grade: IP67
- Hands-free talking
- Strong suction cup
- FM radio
- Multi-color LED light
- Charges via USB-3-

SPECIFICATIONS

- Frequency Range: 100Hz-20KHz
- Operating Distance: 10 meters
- Microphone: Built in
- Power Rating: 5W
- SNR: 85+2 dB
- Charging Voltage: DC 5V
- Battery Capacity: 650mAh
- Charge Time: Approx. 4 hours
- Playback Time: Approx. 8 hours
- Housing Material: ABS + Silicone


WIRELESS PAIRING

Charge the speaker for 3 full hours prior to initial use.

1. Make sure that the speaker is powered off. Place your mobile phone or media player device next to it. Press and hold the power button for 3 seconds to enter pairing mode. If Bluetooth disconnects, the speaker will shut down automatically after 10 minutes.
2. Activate the wireless feature on your media player device and search the list for "SI AUDIO." Enter "0000" if prompted for a password.
3. If pairing fails, refer to your media player device's user manual. Remove paired devices from the list and start over at step 1.

TWS CONNECTION

Follow these instructions when first using the TWS function:

1. Turn on one of the speakers and pair your device to the host speaker.
2. Turn on the second speaker in Bluetooth mode.
3. In Bluetooth mode, press and hold  on the host speaker. Stop pressing after you hear the connection sound.

IN TWS MODE

You can control volume, change previous song/next song, play/pause, power off, etc. from either of the two speakers.

Press and hold  to cut off the TWS connection between them.

NOT E: TWS only works with Bluetooth

1. In FM mode, two speakers can't be used as TWS. FM radio functions individually.

2. When answering an incoming call, the caller's voice can only be heard through the host speaker.

RECHARGING



The wireless speaker is powered by a built-in rechargeable lithium battery. To charge:

1. Release the DC 5V charging port cover.
2. Connect the USB charging cable to a standard USB charging port.


PACKAGE CONTENTS

- Shower Speakers
- USB Charging Cable
- Dedicated Suction Cup

PRODUCT FEATURE

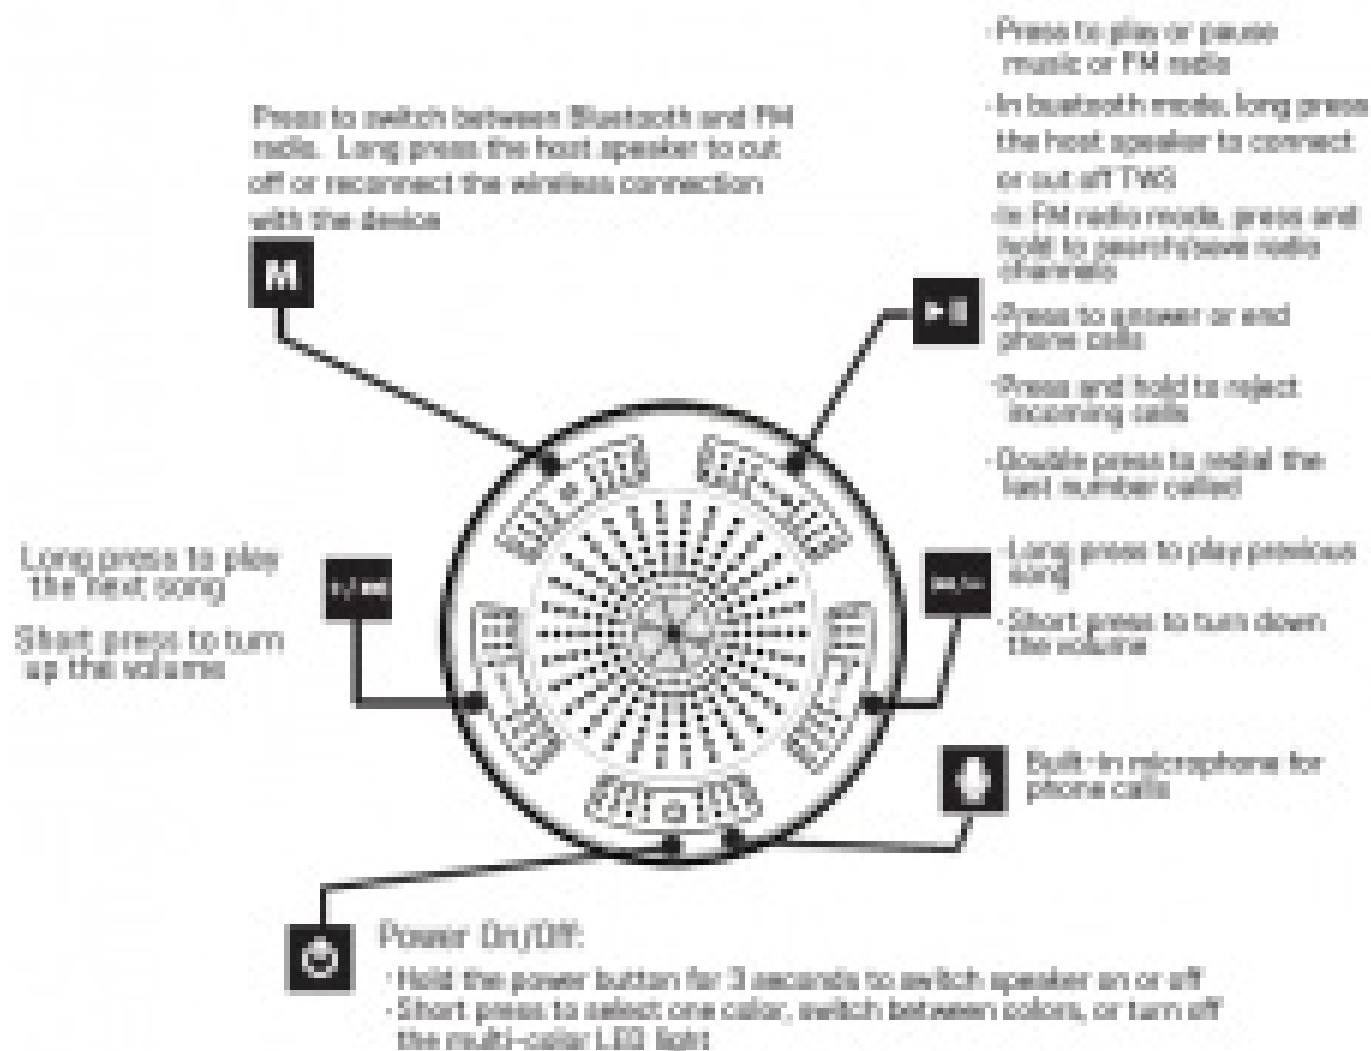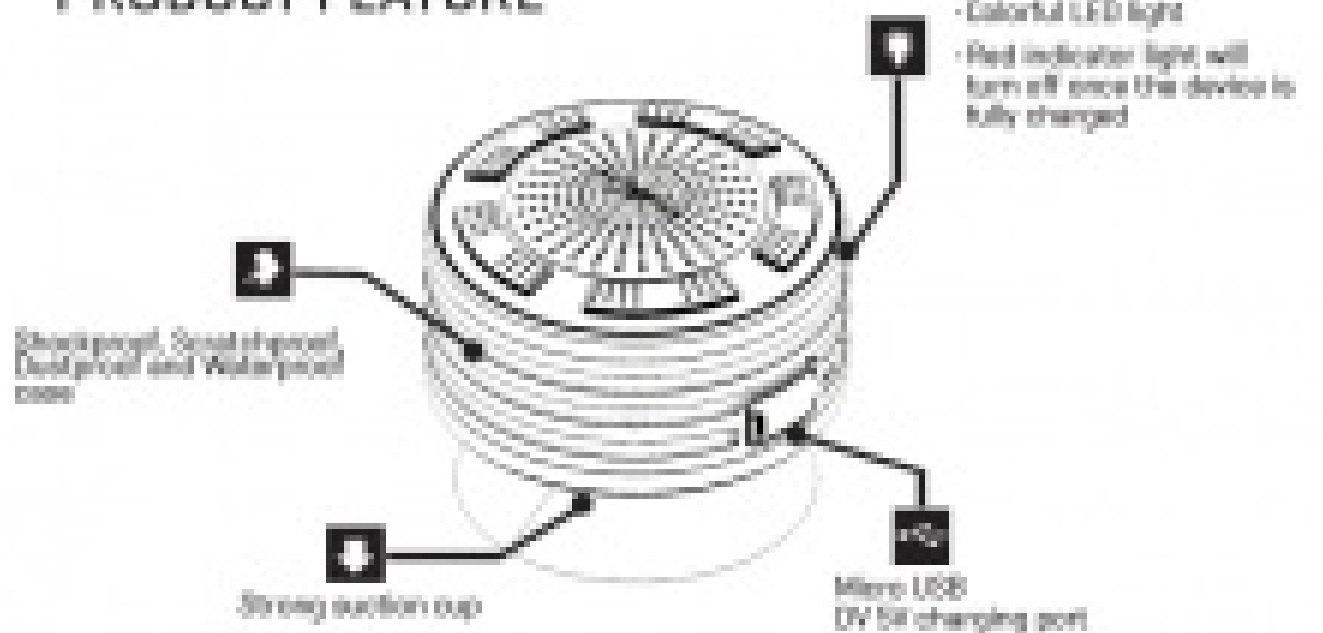

TROUBLESHOOTING

Symptoms	Causes	Solutions
Speaker Can't be powered on	Low battery level	Recharge the battery 
Not able to pair with the speaker	Speaker is already on or not in pairing mode.	Refer to "Wireless pairing section"
Volume too low	Battery is not charged up or volume is not set the max on both the speaker and media player.	1.Increase the volume by pressing and holding the volume up button. 2.Increase the volume on your media player.
FM Radio Signals	1. To receive optimal FM radio signals, relocate your speakers to an open environment. Move it away from other electronic devices to reduce the interference. 2. If applicable, use an external antenna to possibly increase the signal strength.	

SAFETY INSTRUCTIONS

1. Please make sure the plug cover is tight before you place the device around water.
2. Keep the device away from extreme weather to prevent electric shock, explosion or bodily injury.
3. Do not use the device in or around excessive heat: Direct sunlight, near stovetops or open flames, etc.
4. Keep device out of the reach of children. Do not operate at excessive volume levels as this may damage hearing.
5. Clean the product with a soft cloth free of harsh or corrosive chemicals. Always unplug from the power source before cleaning.
6. Do not puncture or disassemble the exterior surface of the device in any way.
7. Do not insert metal objects into the device as this could cause electrical shock.

FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference

(2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.

Contents

- [1 Read More About This Manual & Download PDF:](#)
- [2 Related Posts](#)

Read More About This Manual & Download PDF:

Sharper Image Surround Sound Shower System User Manual – [Optimized PDF](#)
Sharper Image Surround Sound Shower System User Manual – [Original PDF](#)