



Sharper Image Tabletop Round Fireplace User Manual

[Home](#) » [Sharper Image](#) » Sharper Image Tabletop Round Fireplace User Manual 

Contents

1 SHARPER IMAGE®

1.1 HOW TO USE:

1.2 WARNINGS:

1.3 WARRANTY / CUSTOMER SERVICE

2 Related Posts

SHARPER IMAGE®

TABLETOP ROUND FIREPLACE

Item No. 206908

Thank you for purchasing the Sharper Image Tabletop Round Fireplace. Please take a moment to read this guide and store it for future reference.

Please note: This fireplace is for decorative purposes only and is not suitable for continuous operation. Do not use the fire to heat or boil water, or as a cooking appliance. Do not put charcoal, paper, wood or other combustible objects into the fire. Also note that you should not refill the burner until the flame is out and the burner is cool.

HOW TO USE:

1. Remove the extinguish cover from the burner. Make sure the burner is clean and free of dirt or packing debris.
2. Fill the burner with the approved bio ethanol; watch carefully till you reach just under the level of the "Max" line.
Do not overfill or spill. The burner should be no more than 2/3 full.
3. Use a long match or a long-end lighter to ignite. When igniting, keep a safe distance at arm's length.
4. Put the tempered glass on the steel base to help contain the fire.
5. Extinguishing: Put the extinguish cover on the burner for 3 seconds and the flame will burn out.

WARNINGS:

1. Only use bio-ethanol fuel to run your fireplace.
2. Do not add fuel when fireplace is lit or warm.
3. Do not use for cooking or roasting marshmallows.
4. Do not place near flammable objects or chemicals.
5. Fireplaces can be used outdoors, but it is not recommended to leave them outdoors after use.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

S H A R P E R I M A G E ®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.

[Sharper-Image-Tabletop-Round-Fireplace-Manual-Optimized](#)

[Sharper-Image-Tabletop-Round-Fireplace-Manual-Original](#)