



Sharper Image Wall Climbing RC Car User Manual

[Home](#) » [Sharper Image](#) » Sharper Image Wall Climbing RC Car User Manual 

Contents

[1 SHARPER IMAGE®](#)

[1.1 WALL CLIMBING RC CAR](#)[Item No. 207146](#)

[2 Related Posts](#)

 
SHARPER IMAGE®

WALL CLIMBING RC CAR
Item No. 207146




Thank you for purchasing Sharper Image Wall Climbing RC Car. Please read this guide and store it for future reference.

IDENTIFICATION OF PARTS

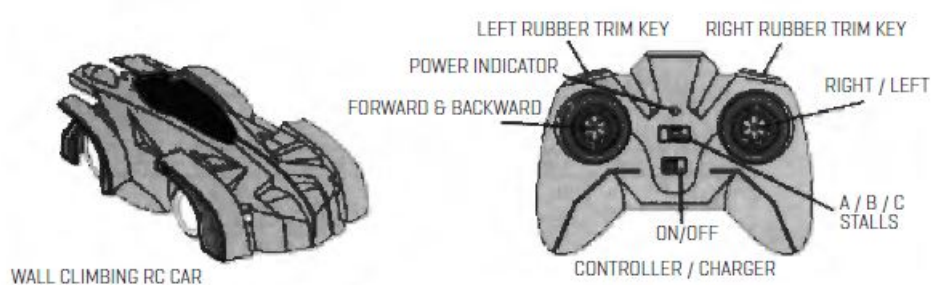

BATTERY INSTALLATION

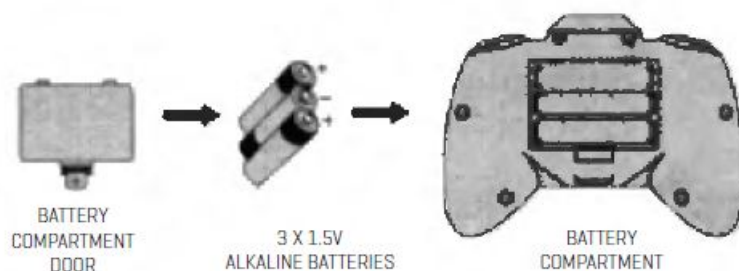


1. Loosen screw and remove the battery compartment door.
2. Install six 1.5V alkaline batteries (not included) in the battery compartment as shown. Make sure to match batteries to their corresponding polarities (+) & (-).
3. Reinstall the battery compartment door and tighten the screw.

CHARGING INSTRUCTIONS


1. Make sure the RC car's WALL/FLOOR/OFF switch is in the OFF position. The car can only be charged when the vehicle is in the OFF position.



2. Make sure the controller switch is in the ON position.

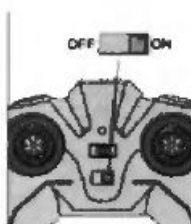

3. Plug the charging cable into the port in the back of the car.

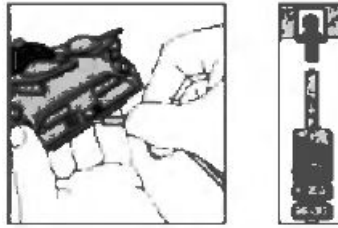


Charging should take an average of 20-40 minutes depending on how much charge resides in the battery.


NOTE: Do not charge the battery immediately after using. Let the battery cool for at least 10 minutes. If charging is not complete after a long period of time, replace the charger batteries. The charging indicator will turn green when charging and will turn off once it's fully charged.

DRIVING ON THE GROUND


Make sure the vehicle's WALL/FLOOR/OFF switch is in the "FLOOR" position.

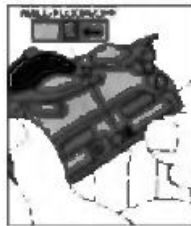

The left joystick controls
Forward and Reverse.

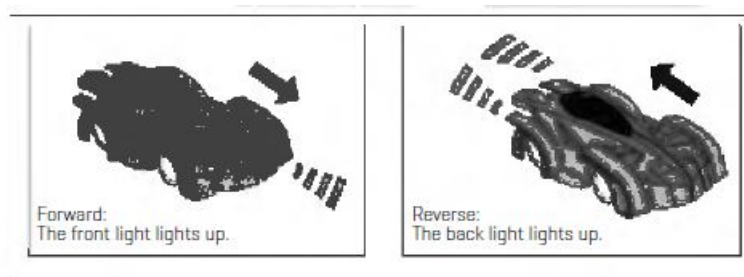


Push the left joystick forward and the right joystick left or right to control the vehicle's direction.

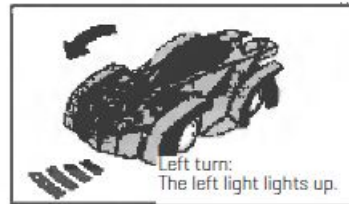


DRIVING ON THE WALLS

Make sure the vehicle's WALL/FLOOR/OFF switch is in the "WALL" position.

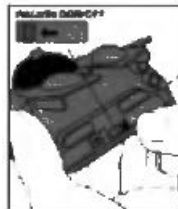

Turn the controller/charger "ON"

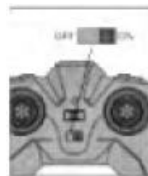


The fabric strips can be adjusted upward at a 45° angle to ensure the car sticks properly to the wall.



Place the vehicle on the wall as shown.



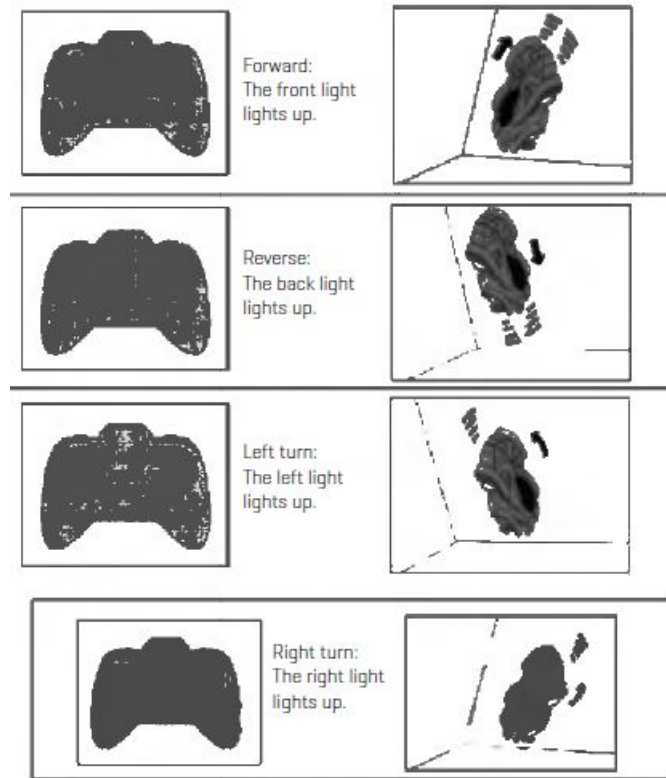


TROUBLESHOOTING

PROBLEM	SOLUTION
Vehicle will not start	1. Power switch is turned off. Turn power switch to the "On" position. 2. Controller battery is installed with incorrect polarity. Check the (+) & (-) markings to make sure the batteries are aligned properly. 3. Batteries are drained. Charge the batteries and/or install new batteries.
Vehicle does not climb	1. Over-current protection is engaged. Turn vehicle off for 30 seconds, then restart.
Vehicle does not drive straight	1. Make sure the surface is clean and free of dirt/dust. 2. Make sure the surface is neither too rough or too smooth. 3. Make sure the surface is flat.
Vehicle slips climbing the walls	1. Clean the tires with a damp rag. 2. Fold up the fabric skirts for a better seal prior to use.
Vehicle falls off the wall	1. Make sure to discharge, then charge again for 20-40 minutes. 2. Clean tires and make sure your wall and floor are clean. 3. Check the fabric skirts for damage. If they have been pulled loose, tape them back on with flexible tape. Make sure surface is flat.
Vehicle will not climb walls	1. Suction is jammed.

ADULT SUPERVISION RECOMMENDED

NOTE: USE ON SMOOTH, CLEAN SURFACES ONLY!

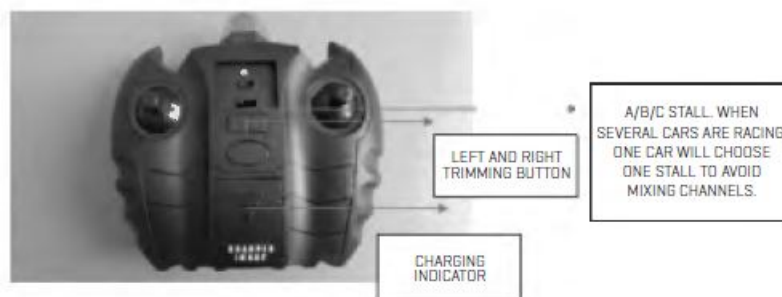

WARNING

- Adult supervision is required at all times
- Do not stand under the vehicle when it is driving on the ceiling, as it may fall
- Not suitable for young children (choking hazard)
- Remove all batteries if vehicle will not be used for a long period of time

- Do not expose vehicle to water

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

[Sharper-Image-Wall-Climbing-RC-Car-Manual-Optimized](#)

[Sharper-Image-Wall-Climbing-RC-Car-Manual-Original](#)

Manuals+.