

[Skip to content](#)

Manuals+

User Manuals Simplified.



SHARPER IMAGE Smart Track Key Finder + Storage User Manual

[Home](#) » [Sharper Image](#) » SHARPER IMAGE Smart Track Key Finder + Storage User Manual

SHARPER IMAGE Smart Track Key Finder + Storage User Manual



Contents [hide](#)

[1 GETTING STARTED](#)

[2 MOUNTING THE REMOTE](#)

[3 PARTS](#)

[4 OPERATION](#)

[5 INSTALLING BATTERIES](#)

[6 FCC STATEMENT](#)

[7 Documents / Resources](#)

[8 Related Posts](#)

 
GETTING STARTED

The Smart Track Key Finder + Storage makes it easy to keep everything together. The magnetic fobs attach to the tray lid whether it's on the catchall tray in your drop spot or mounted to the wall. And if you still forget to put your keys in their spot, simply pick up the lid – it doubles as a wireless remote with a range of 45 feet, triggering distinctive alarms from each fob. It's never been easier to find your keys.

MOUNTING THE REMOTE


- There are 2 Options

1. Stick the mount on the wall with the included sticky pad.
2. Lock the mount on the wall with the included screws.
 - Slide down the remote into the lock position.

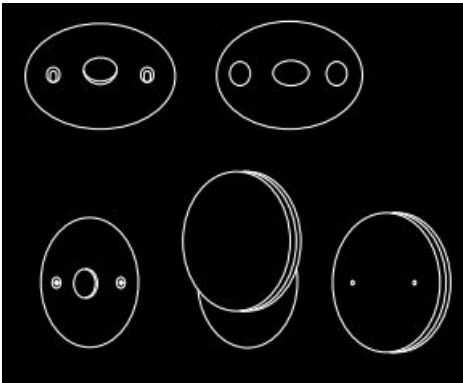

PARTS

 - 2 Key fobs
- 1 Wireless remote
- 1 Tray
- 3 Button cell batteries
- 1 Wall mount
- 1 Sticky pad
- 2 Key rings
- 2 Wall screws
- 1 Pin tool

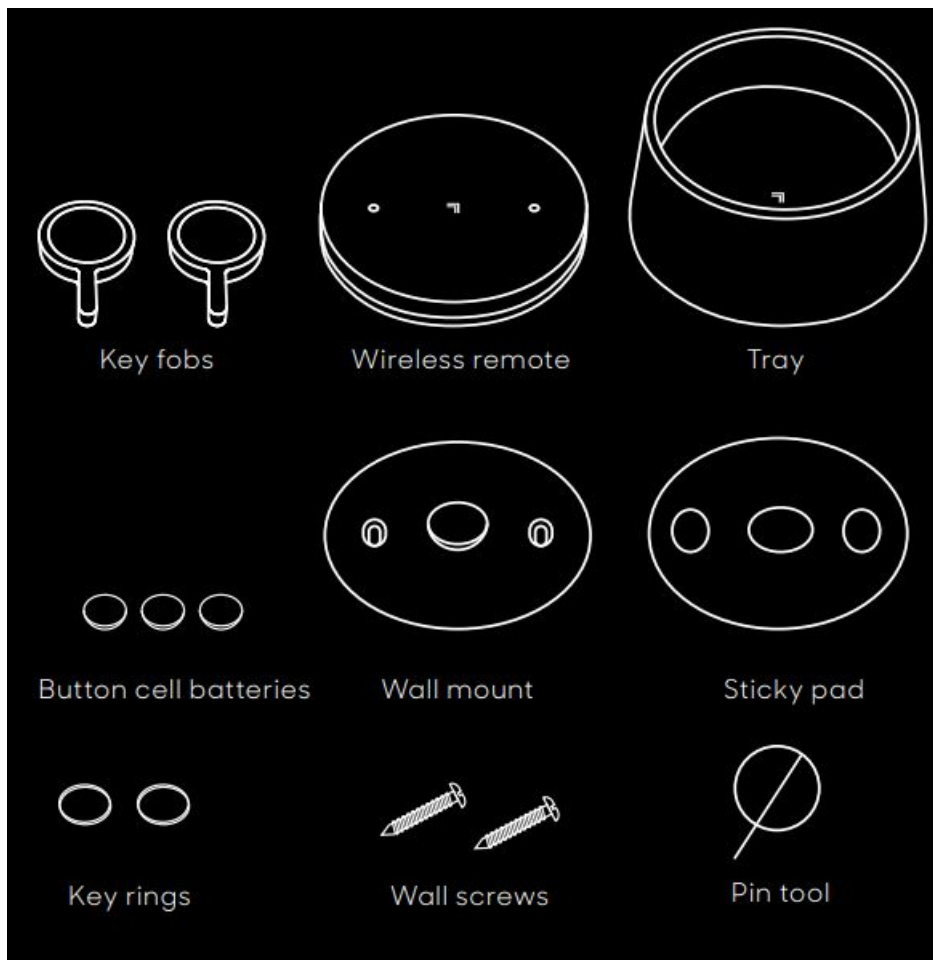

OPERATION

1. Attach the fob to the key ring and attach your keys to the key ring.
2. Press the corresponding button on the wireless remote in order to locate the desired fob.
3. If the fob is in range (55 feet in an open area), it will emit an audible beep for a few seconds when you press the corresponding remote button.
4. If no beep is heard, wait 4 seconds and press the corresponding button again. You may have to change your location if the beep is still not heard. Continue pressing the button every 4 seconds while moving to different areas.

 
NOTE: The wireless remote is portable, it can be removed from the provided Table top Cradle and carried with you to locate devices attached to a fob.

INSTALLING BATTERIES

FOBS

Each requires 1 CR2032 button cell battery (included).


1. Insert a pin into the hole on the fobs and push upwards to open the cover. See Figure A.
2. Insert a new battery into the metal slot, ensuring the “+” side of the battery is facing up. The FOB will make its characteristic beeping sound as it is inserted into the slot.
3. Align the arrow inside the cover to the hole position and press down to lock in the cover. See Figure B.

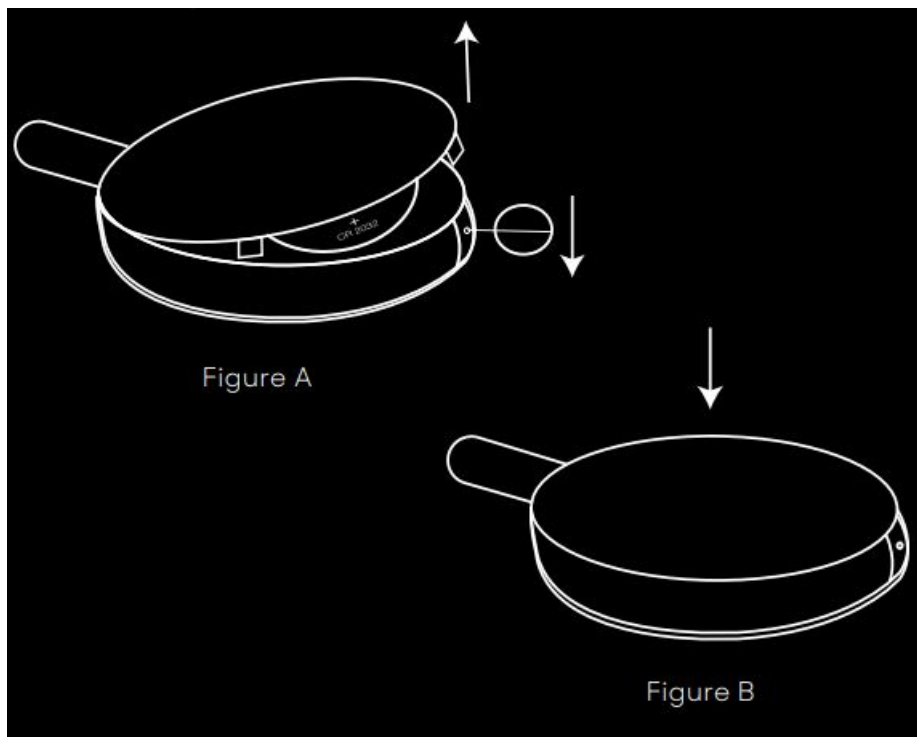

WIRELESS REMOTE

Requires 1 CR2032

 1. Using a coin, turn the battery cover counter clockwise to open it.
2. Insert the CR2023 battery cells according to the diagram instruction found on the inside portion of the tray.
3. Replace the battery cover and use a coin to secure it in place by turning it clockwise.

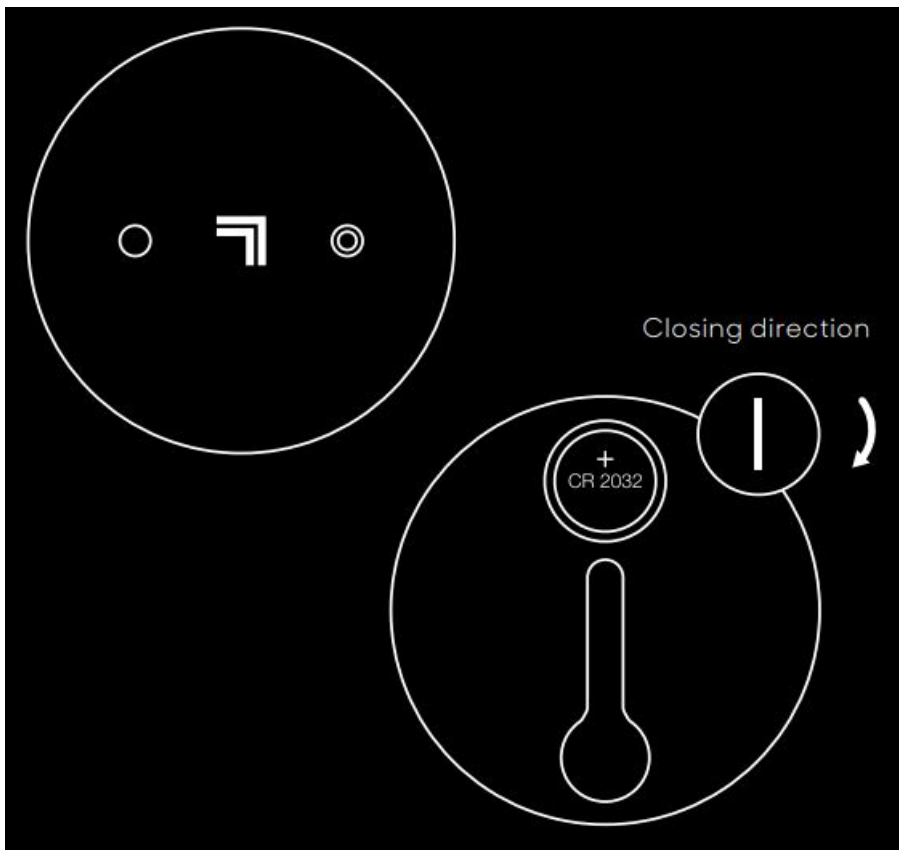

FCC STATEMENT

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAFETY INFORMATION AND WARNINGS

All of the safety and operating instructions should be read, understood and followed before the unit is operated.

SAFETY WARNINGS- PLEASE READ CAREFULLY

- This is not a children's product.
- Small parts, especially the button cell batteries, pose a choking hazard to young children.
- If the product appears cracked or broken in any manner, discontinue use and discard immediately

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.

- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

KEEP THIS PACKAGING FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

WARNING

Do not ingest the battery. Chemical burn hazard.

(The remote control supplied with) This product contains a coin / button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CONGRATULATIONS ON YOUR PURCHASE OF THE SMART TRACK KEY FINDER + STORAGE

Please read all instructions and warnings prior to use. Keep this sheet as it contains important information for future reference.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this manual.

SHARPER IMAGE® NAME AND LOGOS (INCLUDING THE 77 LOGO) ARE TRADEMARKS OR REGISTERED TRADEMARKS. DISTRIBUTED BY AND © 2020 MERCHSOURCE, LLC. IRVINE, CA 92618. ALL RIGHTS RESERVED.

FOR TECHNICAL SUPPORT, PLEASE CALL

1-800-374-2744

1012709 : Model Number

Printed in China

Documents / Resources



[SHARPER IMAGE Smart Track Key Finder + Storage](#) [pdf] User Manual
1012709, 2AEVM1012709, Smart Track Key Finder Storage

[Manuals+](#),

- [home](#)
- [privacy](#)