



SHARPER IMAGE SPIN 10 Oscillating Desktop Fan Owner's Manual

[Home](#) » [Sharper Image](#) » SHARPER IMAGE SPIN 10 Oscillating Desktop Fan Owner's Manual 

Contents

- 1 SHARPER IMAGE SPIN 10 Oscillating Desktop Fan
- 2 IMPORTANT SAFETY INSTRUCTIONS
- 3 Supplier's FCC Declaration of Conformity
- 4 PRODUCT INFORMATION
- 5 ASSEMBLY
- 6 HOW TO USE
- 7 REMOTE CONTROL
- 8 BATTERY REPLACEMENT
- 9 CLEANING
- 10 STORAGE
- 11 TROUBLESHOOTING
- 12 WARRANTY
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts

SHARPER IMAGE

SHARPER IMAGE SPIN 10 Oscillating Desktop Fan



IMPORTANT SAFETY INSTRUCTIONS

This owner's guide and any additional inserts are considered part of the product. They contain important information about safety, use, and disposal. Before using the product, please familiarize yourself with all operating and safety instructions. Please keep all documents for future reference and pass these documents on, together with the product, to any future owner. See sihomecomfort.com to view, download and print the most current version of these instructions.

INTENDED USE: This product is intended to circulate the air in indoor living spaces only in the United States and Canada. This product is not intended for commercial or industrial use. The manufacturer assumes no responsibility for damage or injury due to unauthorized use or product modification. Failure to follow these directions will void the product warranty.

WARNING: Risk to Children and Impaired Persons

Supervision is required during the installation, operation, cleaning, and maintenance of this product by children 12 years of age and younger and anyone with reduced physical, sensory or mental capabilities. Children should be supervised to ensure that they do not play with the appliance, its parts, and packaging material.

INSTALLATION WARNING—To reduce risk of fire, electrical shock and injury to persons, observe the following:

- Place this product away from curtains, draperies, tablecloths and other fabrics, since they may be drawn into the product, damage the motor and/or cause a fire.
- No part of this product (the appliance, power cord, plug, packaging, etc.) should be placed near furnaces, fireplaces, stoves or other high-temperature heat sources. Do not use this product in a window, on an uneven or unstable surface, or near water.
- The appliance, power supply, power cord, and plug cannot come into contact with water. Do not use this product on wet surfaces. Do not use this product in a bathtub or shower or position product where it may fall into a bathtub, laundry, swimming pool, or another water container. Do not use this product outdoors or expose it to weather or elements.
- Do not run cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Do not route the cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over. The cord should not hang over the edges of counters or be placed where it can be crimped or closed indoors. Place appliance near an easily accessible outlet so the product can be unplugged quickly during an emergency.

SAFE USE WARNING—To reduce risk of fire, electrical shock, and injury to persons, observe the following:

- **WARNING:** To reduce the likelihood of circuit overload, fire and electric shock, do not operate with a solid-state

speed device, such as a dimmer control switch.

- Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- Do not operate unit if the unit has been dropped or damaged. Do not use this product if it has a damaged power cord or plug. To avoid the risk of electrical shock, do not attempt to repair or replace parts. Only original replacement parts may be used.
- If the power supply or cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Contact (833.800.8669) or (help@sihomecomfort.com) for further instructions about replacement and repair.
- Risk of fire. Your appliance is equipped with a detachable external power supply and cord. The detachable external power supply and cord have no user-replaceable parts.
- Before plugging the power cord into an electrical outlet, be sure that all electrical information on the rating label, including voltage, is compatible with your outlet's power supply.
- Do not sit or stand on the product.
- Never use the cord as a handle or otherwise yank, strain or stretch the power cord.
- Do not set anything on the product or use as a table or shelf.
- While the product is plugged in, do not insert or allow foreign objects to enter any input or output opening as this may cause risk of electric shock or fire, or damage the product.
- A loose fit between the wall outlet (receptacle) and the plug may cause overheating and distortion of the plug. Discontinue use of the product in this outlet. Contact a qualified electrician to replace loose or worn outlets.
- Before moving, repositioning, servicing, cleaning and when not in use, use the product controls to turn off the power and then unplug. To disconnect from the outlet, grasp and pull only the plug. Also, power off and unplug if the product will be left unattended for an extended period of time or during electrical storms.

SERVICING WARNING—To reduce the risk of fire, electrical shock, and injury to persons, observe the following:

- Clean your product regularly, only as is instructed in this manual. Prior to cleaning, turn off the power on your product and unplug. Do not use gasoline, thinners, solvents, ammonia or other chemicals for cleaning. Refer to the CLEANING instructions provided.
- Do not open appliance housing while the product is plugged in. To avoid risk of shock, all service and/or repairs must be done by an Authorized Service Center.
- Risk of fire. Do not replace the attachment plug.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Contact Consumer Service or dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's FCC Declaration of Conformity

Unique Identifier: Sharper Image Models SPIN 10, SPIN 12

Responsible Party: Vornado Air LLC

Mailing Address : 415 E. 13th St., Andover, KS 67002

Contact: www.sihomecomfort.com

WARNING: Batteries may pose a choking hazard. Do not let children handle batteries.

BATTERY DISPOSAL: Please dispose of batteries according to the local laws and regulations of your region, and while keeping them away from children. Some batteries may be recycled and accepted for disposal at your local recycling center. **DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.** New and used batteries may cause injury. Keep new and used cells (or batteries) away from children.

SAVE THESE INSTRUCTIONS

PRODUCT INFORMATION



Your product includes the following :

1. Fan Body
2. Side Legs (2)
3. Back Leg (1) (not shown)
4. 24 VDC 1.0A Power Supply/Cord
5. Remote Control (Model SPIN 12 only)

ASSEMBLY


You will need to assemble your SPIN fan. There are two unweighted legs and one weighted leg with your fan.

1. Lay the SPIN on its side, facing forward. Install one unweighted leg on the front of the fan until it securely snaps into place.
2. Install the second unweighted leg on the front of the fan until it securely snaps into place.
3. Turn the fan over and install the weighted leg on the back side of the fan until it securely snaps into place.
4. Connect power supply to product input and wall outlet.

Your SPIN is now assembled and ready for use!



HOW TO USE

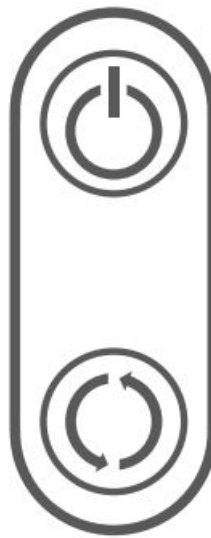

POWER ON / OFF

1. Press () to power unit on.
2. There are three speeds: LOW, MEDIUM, HIGH.
3. Press () to select desired speed or turn unit OFF.
4. Press () to turn Oscillation ON or OFF.
5. Press and hold () for three seconds to turn unit OFF.

REMOTE CONTROL



REMOTE FUNCTIONS

The remote requires a line-of-sight path to allow for the signal to be received by the circulator. Point the remote control at the control panel for best reception.

1. Press (power button) to power unit ON or OFF.
2. Press (restart) to turn Oscillation ON or OFF.
3. Press (+) to increase speed.
4. Press (-) to decrease speed.

BATTERY REPLACEMENT

The remote control requires 2 AAA batteries (included but not installed). To install the batteries, remove the cover located on the underside of the remote control. If necessary, clean the battery contacts and also those of the device prior to battery installation. Remove any plastic protection from the batteries. On the inside of the battery cover, there is a + and a – sign indicating which direction you should insert your batteries. Ensure the batteries are installed correctly with regard to polarity. Then replace the cover onto the bottom of the remote. For battery replacement, always use the correct size and grade of battery for this product.

Note: Remove batteries from the remote control when not in use for an extended period of time and always remove dead batteries immediately and replace them with fresh ones. Do not store dead batteries in remote.

CLEANING

WARNING: To reduce the risk of electrical shock and injury to persons, unplug the circulator before removing the grille or blade.

GRILLE REMOVAL (Screwdriver required)

1. Power off and unplug the unit.
2. Remove 6 screws located at the 12, 2, 4, 6, 8, 10 o'clock positions on the back of the fan head.
3. Remove the front grille.
4. Dust or wash Front Grille with mild dishwashing soap. Do not place the grille in the dishwasher. Excessive heat can distort the plastic.

BLADE REMOVAL

- 1. Power off and unplug unit.
- 2. Rotate blade nut clockwise until free.
- 3. Pull the blade straight out from the shaft.
- 4. Wipe the Blade with a damp cloth. If your fan is used in a greasy environment, such as a kitchen, mild soap or a common household cleaner may be necessary. Do not use solvents. Do not place blade in the dishwasher. The excessive heat can distort the plastic.

To reattach blade and front grille, follow the reverse of the instructions above.

Note: The motor is permanently lubricated and requires no oiling.

STORAGE

During the off-season or after extended periods of non-use, you may choose to store your fan. To ensure long life of the product, it is recommended to store your fan by following these instructions:

- 1. Unplug power cord and bundle loosely.
- 2. Cover, or place back in retail carton if available. This prevents fan from accumulating dust over time.
- 3. Store fan in cool and dry location.

TROUBLESHOOTING

The unit fails to power on.	Unit is not plugged in.
	Unit is damaged or in need of repair. Cease usage and unplug. Contact Consumer Service for assistance.
	Ensure unit is set to highest setting for maximum air circulation.

Unit is not producing sufficient amount of air.	Allow the unit to fully circulate the air throughout the room, this may take several minutes.
	Ensure all air inlets and outlet grille are unobstructed.
Remote Control is not working.	The battery is dead. Replace with 2 new AAA batteries. Refer to REMOTE CONTROL – Battery Replacement for instructions.
GFCI has tripped.	Under certain conditions, it is possible for a reset GFCI (Ground Fault Circuit Interrupter) outlet to trip when the user is changing speeds on a fan. In this event, change to an outlet that is not connected to a GFCI device. It could also indicate a weak or defective GFCI outlet. Contact a qualified electrician to check the GFCI outlet.

WARRANTY

If you're not satisfied with this product, let us know.

Vornado Air, LLC warrants to the original consumer or purchaser this Sharper Image® Fan ("Product") is free from defects in material or workmanship for a period of two (2) years from the date of purchase. If any such defect is discovered within the warranty period, Vornado, at its discretion, will repair or replace the Product at no cost. For warranty or repair service: Call 833-800-8669 or email help@sihomecomfort.com to obtain a Return Authorization ("RA") form. Please have or include your Product's model number and serial number, as well as your name, address, city, state, zip code and phone number when contacting Vornado for warranty service. After receiving the RA form, ship your Product to: Vornado Air LLC Attn: Warranty & Repair 415 East 13th Street Andover, KS 67002. For your convenience, please have your model number and serial number when contacting Vornado with service inquiries. To assure proper handling, packages must be clearly marked with the RA number. Packages not clearly marked with the RA number may be refused at the receiving dock. Please allow 1-2 weeks for repair and return of your Product after the Product is received. Repairs not covered by the warranty or outside

the warranty period will require a fee to cover the cost of materials, labor, handling and shipping. This warranty does not apply to defects resulting from abuse of the Product, modification, alteration, mishandling, improper maintenance, commercial use or repair or service of the Product by anyone other than Vornado; damages which occur in shipment or are attributed to acts of God. Improper product use, which includes using an external device that alters or converts the voltage or frequency of electricity, or shipping a Vornado product to a country not intended for use will void all warranties. Any unauthorized product modification, repair by unauthorized repair center, or use of non-approved replacement parts is not recommended and any consequences will not be covered by support services or product warranties. The product warranty will be honored only on models that are being used in the country intended. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. VORNADO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state. The manufacturer assumes no responsibility for damage caused by failure to follow these instructions or improper product use. Any such actions will invalidate the product warranty. All company names and product names are trademarks of their respective owners. © All rights reserved. All technical information, data, and instructions for the installation, connection, and operation contained in these instructions for use correspond to the latest available information at time of printing. The contents of this manual may differ slightly from the actual product. Observe any additional supplements.

©2021 Vornado Air LLC, Andover, Kansas 67002 USA Specifications subject to change without notice. Sharper Image® name and logo are registered trademarks. Manufactured, marketed and distributed under license by Vornado Air LLC, Andover, Kansas 67002 Manufactured in China. U.S. Patents Pending. Sharper Image® Distributed under license by Vornado Air LLC, Andover, Kansas 67002.

833.800.8669 | sihomecomfort.com | help@sihomecomfort.com

Documents / Resources

	SHARPER IMAGE SPIN 10 Oscillating Desktop Fan [pdf] Owner's Manual SPIN 10, SPIN 12, SPIN 10 Oscillating Desktop Fan, Oscillating Desktop Fan
---	--

References

-  [Home - Sharper Image Home Comfort](#)
-  [Home - Sharper Image Home Comfort](#)