



Sharper 208802 Cordless 3 In 1 Countertop Cleaner Instruction Manual

[Home](#) » [Sharper](#) » Sharper 208802 Cordless 3 In 1 Countertop Cleaner Instruction Manual 

Contents

- [1 Sharper 208802 Cordless 3 In-1 Countertop Cleaner](#)
- [2 Specifications](#)
- [3 Features](#)
- [4 Product Structure](#)
- [5 Installation & Disassembly](#)
 - [5.1 Operation Instructions](#)
- [6 Precautions](#)
- [7 Cleaning & Maintenance](#)
- [8 Trouble Shooting](#)
- [9 Documents / Resources](#)



Sharper 208802 Cordless 3 In-1 Countertop Cleaner




Specifications

Rated power:	12W
Battery capacity:	1800mA
Charging method:	Type-C
Charging time:	4 hours
Working time:	40-50min
Water tank capacity:	2 fl oz (60ml)
Input voltage:	5V
Output voltage:	3.7V
Material:	ABS
Net Weight:	1.75lbs (0.8kg)
Product size:	7.75"x 6.46"x 5.90" (197x164x150mm)

Features

- Novel appearance design, elegant and beautiful, small and flexible, when not in use. it can play a certain role in decoration and embellishment.
- Fully functional and equipped with multi-purpose components, such as spray nozzles, towels, vaper stros etc. which can easily adoor to different scenarios Strong suction, no matter if it is hair, soot, rice grains, and strains, it can be all removed.


Product Structure

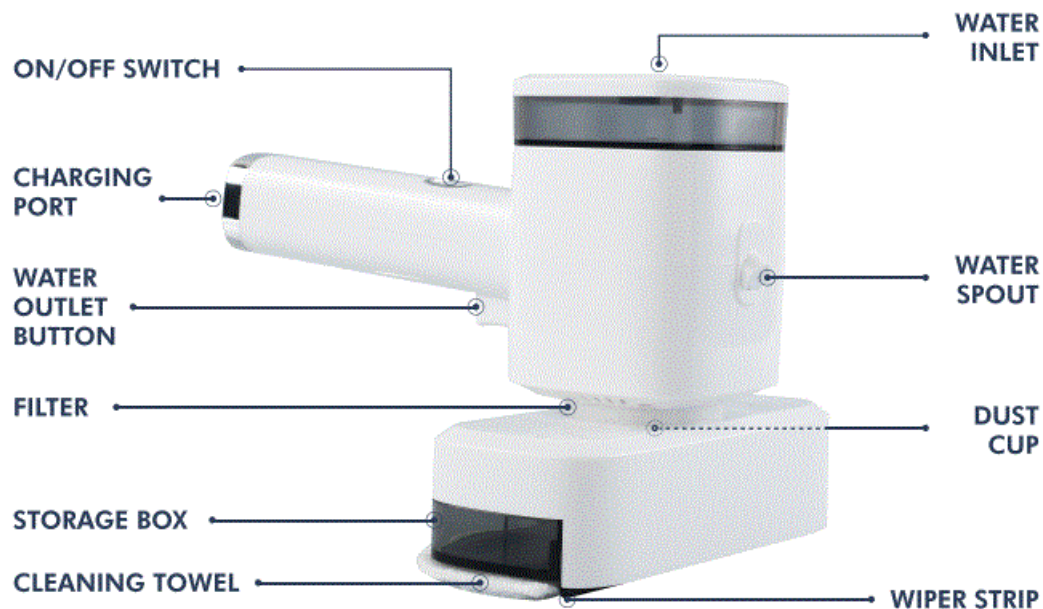


Installation & Disassembly

UNIT:

1. Open the storage box.
2. Place the filter into the dust cup.
3. Align the host with the dust cup and insert it into place, then, rotate the unit clockwise.
4. When disassembling, hold the main unit and rotate it counterclockwise, then, the filter can be removed from the dust cup.

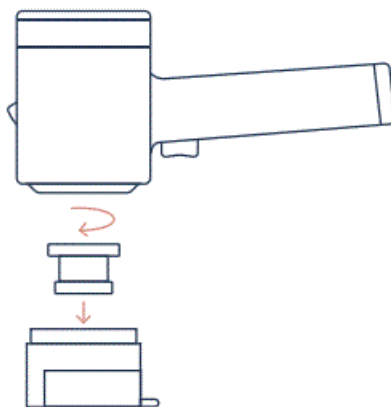

DUST CUP:

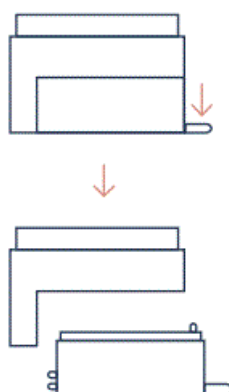

1. When disassembling the dust cup, remove the storage box from the main unit.
2. Remove the dust cup from the storage box by pushing it down. Take the bottom cover and wiper strip off the dust cup.
3. When installing, put the wiper strip in first, and then insert the bottom cover of the dust cup into place.

Operation Instructions

1. Follow installation instructions to prepare the product.
2. Press the ON/OFF switch to turn on the vacuum function.
3. Press the water outlet button to spray the water.
4. Drag the bottom cleaning towel back and forth for the mopping effect.

Precautions

- This hand-held product is a desktop cleaning appliance, which integrates suction, dragging, and scraping. It must be used in accordance with the operating conditions of the manual, and the manual should be properly stored for future reference.
- When using, a filter screen must be installed to prevent pollutants from being sucked into the motor to avoid causing damage to the product.
- When the product is working, the base must not be removed to avoid accidental injury.
- Do not immerse the main unit of the cleaning machine in water.
- Avoid placing the product close to heating appliances or exposure to the sun to avoid overheating.
- This product cannot be used for inhaling burning materials, such as burning paper scraps, etc. Otherwise, the product may be damaged or even catch fire.
- Please do not use the cleaning machine when it is damaged or is not working properly.
- This product is not a toy. It must be used in accordance with the manual. Anyone incapable of using the product should not use it. Children should not use this product.
- After adding water to the water tank, the cover of the water tank must be well sealed to avoid water leakage.
- Do not disassemble or repair the product without authorization. In order to avoid hazards, when the product needs to be repaired, please consult a professional.

Safety Precautions

- The rated charging current is 2A. When charging, please use a 2A adapter to avoid slow charging speed or function damage.
- It is recommended that the charging time should not exceed 6 hours.
- This product is for household use only, not for industrial use.
- This product is suitable for cleaning small particles, such as crumbs, rubber bands, rice grains, etc. Do not use it for cleaning larger stones, this can damage the product.
- Do not add rust remover to the water tank, this may cause damage to the water tank.

Cleaning & Maintenance


- Before cleaning the product, make sure the product is off and cut off from any power supply.

- Open the dust cup, and pour the dust out of the cup into a trash can.
- Please use a clean damp cloth to wipe off the dust on its surface, and place the unit in a dry place until next use.
- When necessary, the filter can be cleaned with clean water, and then installed after drying to prolong its life; keep away from eyes when cleaning the filter.
- Remove the towel from the bottom cover of the dust cup, and dry it naturally after cleaning.

Trouble Shooting

Issue	Reason	Solution
The product does not work when I turn it on.	Battery is empty.	Charge the unit.
The product won't absorb dust.	Filter is soaked in water.	Dry the filter.
	Filter is clogged.	Clean the filter.
When I press the water outlet button no water sprays out.	Water tank needs to be refilled.	Add water to the tank.

Documents / Resources

	Sharper 208802 Cordless 3 In 1 Countertop Cleaner [pdf] Instruction Manual 208802 Cordless 3 In 1 Countertop Cleaner, 208802, Cordless 3 In 1 Countertop Cleaner, 3 In 1 Countertop Cleaner, Countertop Cleaner, Cleaner
---	---