



# Sharper 208859 Digital Temperature Display Fry Pan User Guide

[Home](#) » [Sharper](#) » Sharper 208859 Digital Temperature Display Fry Pan User Guide 

## Contents

- [1 208859 Digital Temperature Display Fry Pan](#)
- [2 Digital Temperature Display Fry Pan](#)
- [3 Product Features](#)
- [4 Operating Instructions](#)
- [5 Documents / Resources](#)

# SHARPER

208859 Digital Temperature Display Fry Pan



## Digital Temperature Display Fry Pan

Item No. 208859

Thank you for purchasing the Digital Temperature Display Fry Pan. Please read this guide carefully and store it for future reference.

### Product Features

- Digital temperature display for real-time monitoring
- Battery-powered with 2 AAA batteries (not included)
- Compatible with induction cookers and electric cooktops
- Not suitable for open flame cooking (gas stove, grill, etc.)
- Easy to clean with a hand wipe
- 9.5" nonstick cooking surface
- Digital temperature display shows cooking temperature in real time
- Alarm function when optimum temperature is exceeded
- Bakelite heat-resistant handle (up to 428°F)
- Requires 2 AAA batteries

### Operating Instructions

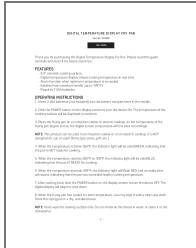
1. Insert 2 AAA batteries (not included) into the battery compartment in the handle.
2. Click the POWER button on the display screen to turn the device ON. The temperature of the cooking surface

will be displayed in real time.

3. Place the frying pan on an induction cooker or electric cooktop. As the temperature of the frying pan begins to rise, the digital screen temperature will increase accordingly.
4. **NOTE:** This product can be used in an induction cooker or on an electric cooktop. It is NOT designed for use on open flame (gas stove, grill, etc.).
5. After cooking food, click the POWER button on the display screen to turn the device OFF. The digital display will begin to shut down.
6. When the frying pan has cooled to room temperature, you may wipe it with a clean wet cloth. Store the frying pan in a dry, ventilated area.

**NOTE:** Hand wipe the cooking surface only. Do not immerse the device in water or clean it in the dishwasher.

## Documents / Resources

	<p><a href="#">Sharper 208859 Digital Temperature Display Fry Pan [pdf] User Guide</a> 208859 Digital Temperature Display Fry Pan, 208859, Digital Temperature Display Fry Pan, Temperature Display Fry Pan, Display Fry Pan, Fry Pan</p>
---	---