

Shelly B4823 Z Wave Smart Switch



Shelly B4823 Z Wave Smart Switch User Guide

[Home](#) » [Shelly](#) » Shelly B4823 Z Wave Smart Switch User Guide 

Contents

- 1 Shelly B4823 Z Wave Smart Switch
- 2 Product Usage Instructions
- 3 FAQ
- 4 LEGEND
- 5 USER AND SAFETY GUIDE
- 6 INSTALLATION INSTRUCTIONS
- 7 SPECIFICATIONS
- 8 OPERATIONAL INSTRUCTIONS
- 9 CONTACT
- 10 Documents / Resources
 - 10.1 References



Shelly B4823 Z Wave Smart Switch



Product Usage Instructions

The Device can control various types of loads in one electrical circuit. Follow these steps for installation:

1. Ensure breakers are turned off and there is no voltage on terminals.
2. Connect the load circuit to Device I and O terminals.
3. If using an AC power supply, connect the Live wire to the L terminal and the Neutral wire to N terminal as shown in Fig. 1.
4. Connect a switch or push-button to the SW terminal and Live wire.

FAQ

- **Q:** Where can I find the extended user guide for detailed instructions?
- **A:** For more detailed instructions, visit the extended user guide at: <https://shelly.link/Wave1-KB-ANZ>

LEGEND

Device terminals

- N: Neutral terminal
- L: Live terminal (110–240 V AC)
- SW: Switch/push-button input terminal (controlling O)
- I: Load circuit input terminal
- O: Load circuit output terminal

Wires:

- N: Neutral wire
- L: Live wire (110-240 V AC)

Button:

- S: S button (Fig. 2)

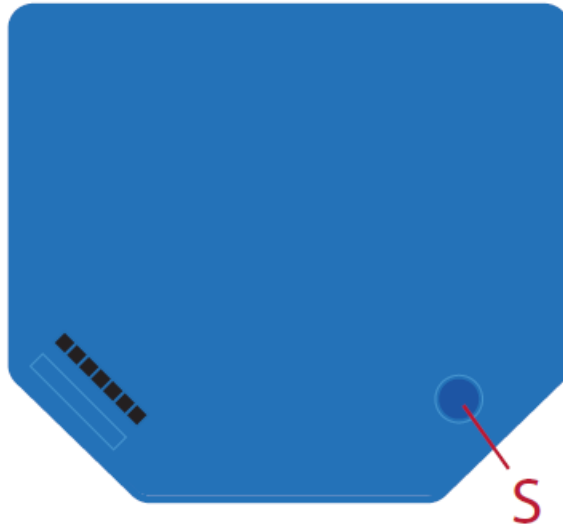


Fig. 2

USER AND SAFETY GUIDE

- Z-Wave® smart switch with potential-free contacts
- READ BEFORE USE
- This document contains important technical and safety information about the Device, its safe use and installation.

CAUTION! Before beginning the installation, please read carefully and entirely this guide and any other documents accompanying the device. Failure to follow the installation procedures could lead to malfunction, danger to your health and life, violation of law or refusal of legal and/or commercial guarantee (if any). Shelly Europe Ltd. is not responsible for any loss or damage in case of incorrect installation or improper operation of this Device due to failure to follow the user and safety instructions in this guide.

TERMINOLOGY

- Gateway – A Z-Wave® gateway, also referred to as a Z-Wave® controller, Z-Wave® main controller, Z-Wave® primary controller, or Z-Wave® hub, etc., is a device that serves as a central hub for a Z-Wave® smart home network. The term “gateway” is used in this document.
- S button – The Z-Wave® Service button, which is located on Z-Wave® devices and is used for various functions such as inclusion (adding), exclusion (removing), and resetting the device to its factory default settings. The term “S button” is used in this document.
- Device – In this document, the term “Device” is used to refer to the Shelly Qubino device that is a subject of this guide.

ABOUT SHELLY QUBINO

Shelly Qubino is a line of innovative microprocessor-managed devices, which allow remote control of electric

circuits with a smartphone, tablet, PC, or home automation system. They work on Z-Wave® wireless communication protocol, using a gateway, which is required for a configuration of devices. When the gateway is connected to the internet, you can control Shelly Qubino devices remotely from anywhere. Shelly Qubino devices can be operated in any Z-Wave® network with other Z-Wave® certified devices from other manufacturers. All mains-operated nodes within the network will act as repeaters regardless of vendor to increase the reliability of the network. Devices are designed to work with older generations of Z-Wave® devices and gateways.

ABOUT THE DEVICE

The Device controls the on/off function for one electrical appliance, such as a bulb, ceiling fan, IR heater, electrical lock, garage doors, and irrigation system. The output contact is potential-free (dry contact), so different power supply loads can be connected to the Device. It is compatible with push buttons and switches (default).

INSTALLATION INSTRUCTIONS

The Device can control a various type of loads (e.g., bulbs) in one electrical circuit. It can be retrofitted into standard electrical wall boxes, behind power sockets and light switches or other places with limited space.

CAUTION! Danger of electrocution. Mounting/installation of the Device to the power grid has to be performed with caution, by a qualified electrician.

WARNING! Danger of electrocution. Every change in the connections has to be done after ensuring there is no voltage present at the Device terminals.

CAUTION! Use the Device only with a power grid and appliances that comply with all applicable regulations. A short circuit in the power grid or any appliance connected to the Device may damage it.

CAUTION! Do not connect the Device to appliances exceeding the given max. load!

CAUTION! Do not shorten the antenna.

RECOMMENDATION: Place the antenna as far away as possible from metal elements as they can cause signal interference.

CAUTION! Connect the Device only in the way shown in these instructions. Any other method could cause damage and/or injury.

CAUTION! Do not install the Device where it can get wet.

CAUTION! Do not use the Device if it has been damaged!

CAUTION! Do not attempt to service or repair the Device yourself!

RECOMMENDATION: Connect the Device using solid single-core wires with increased insulation heat resistance not less than PVC T105°C (221°F).



- **CAUTION!** Before starting the mounting/installation of the Device, check that the breakers are turned off and there is no voltage on their terminals. This can be done with a phase tester or multimeter. When you are sure that there is no voltage, you can proceed to connect the wires.
- Connect the load circuit to the Device I and O terminals.
- If you are using an AC power supply for the Device, connect the Live wire to the Device L terminal, and the Neutral wire to the N terminal as shown on Fig. 1. Connect a switch or a push-button to the Device SW terminal and the Live wire.

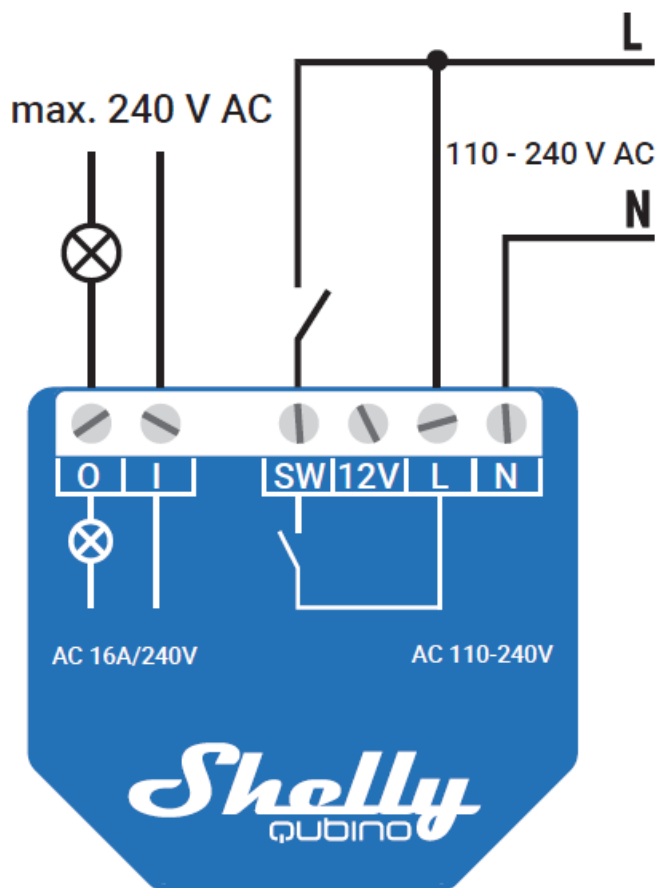


Fig. 1

- **RECOMMENDATION:** For inductive appliances that cause voltage spikes during switching on/off, such as electrical motors, fans, vacuum cleaners and similar ones, RC snubber (0.1 μ F / 100 Ω / 1/2 W / 600 VAC) should be connected parallel to the appliance.
- **CAUTION!** Do not allow children to play with the push buttons/ switches connected to the Device. Keep the devices for remote control of Shelly Qubino (mobile phones, tablets, PCs) away from children.

EXTENDED USER GUIDE

For more detailed installation instructions, use cases, and comprehensive guidance on adding/removing the Device to/from a Z-Wave network, factory reset, LED signalization, Z-Wave command classes, parameters, and much more, refer to the extended user guide at: <https://shelly.link/Wave1-KB-ANZ>.



SPECIFICATIONS

- **Power supply:** 110-240 V AC, 50/60 Hz
- **Power consumption:** < 0.3 W
- **Max. switching voltage AC:** 240 V
- **Max. switching current AC:** 16 A

- **Overheating protection:** Yes
- **Distance:** Up to 40 m indoors (131 ft.) (depends on local conditions)
- **Z-Wave® repeater:** Yes
- **CPU:** Z-Wave® S800
- **Z-Wave® frequency band:** 919,8 MHz
- **Maximum radio frequency power transmitted in the frequency band(s):** < 25 mW
- **Size (H x W x D):** 37x42x16 ±0.5 mm / 1.46x1.65x0.63 ±0.02 in
- **Weight:** 26 g / 0.92 oz.
- **Mounting:** Wall Console
- **Screw terminals max. torque:** 0.4 Nm / 3.5 lbin
- **Conductor cross-section:** 0.5 to 1.5 mm² / 20 to 16 AWG
- **Conductor stripped length:** 5 to 6 mm / 0.20 to 0.24 in
- **Shell material:** Plastic
- **Color:** Blue
- **Ambient temperature:** -20°C to 40°C / -5°F to 105°F
- **Humidity:** 30% to 70% RH
- **Max. altitude:** 2000 m / 6562 ft.

OPERATIONAL INSTRUCTIONS

- If the SW is configured as a switch (default), each toggle of the switch will change the output O state to the opposite state – on, off, on, etc.
- If the SW is configured as a push-button in the Device settings, each press of the push-button will change the output O state to the opposite state – on, off, on, etc.

SUPPORTED LOAD TYPES

- Resistive (incandescent bulbs, heating devices)
- Capacitive (capacitor banks, electronic equipment, motor start capacitors)
- Inductive with RC Snubber (LED light drivers, transformers, fans, refrigerators, air-conditioners)

IMPORTANT DISCLAIMER

Z-Wave® wireless communication may not always be 100% reliable. This Device should not be used in situations in which life and/or valuables are solely dependent on its functioning. If the Device is not recognized by your gateway or appears incorrectly, you may need to change the Device type manually and ensure that your gateway supports Z-Wave Plus® multi-channel devices.

ORDERING CODE: QNSW-001X16AU

CONTACT


MANUFACTURER:

- Shelly Europe Ltd.
- Address: 103 Cherni Vrah Blvd., 1407 Sofia, Bulgaria
- Tel.: +359 2 988 7435

- E-mail: zwave-shelly@shelly.cloud
- Support: <https://support.shelly.cloud/>
- Web: <https://www.shelly.com>
- Changes in the contact data are published by the Manufacturer on the official website:
<https://www.shelly.com>.



Documents / Resources

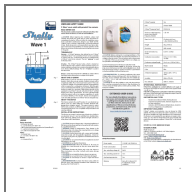

[Shelly B4823 Z Wave Smart Switch](#) [pdf] User Guide
B4823 Z Wave Smart Switch, B4823, Z Wave Smart Switch, Smart Switch, Switch

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.