

# **Shelly BLU Button Bluetooth Operated Action and Scene Activation Button User Manual**

Home » Shelly » Shelly BLU Button Bluetooth Operated Action and Scene Activation Button User Manual



Shelly BLU Button Bluetooth Operated Action and Scene Activation Button User Manual



#### **Contents**

- 1 Read before use
- **2 Product Introduction**
- 3 Installation Instructions
- 4 First steps
- **5 Using Shelly BLU Button**
- 1
- **6 Initial Inclusion**
- 7 Replacing the battery
- 8 Troubleshooting
- 9 Specifications
- 10 Declaration of conformity
- 11 Documents / Resources
  - 11.1 References
- **12 Related Posts**

#### Read before use


This document contains important technical and safety information about the device, its safety use and installation.

CAUTION! Before beginning the installation, please read carefully and entirely this guide and any other documents accompanying the device. Failure to follow the installation procedures could lead to malfunction, danger to your health and life, violation of law or refusal of legal and/or commercial guarantee (if any). Shelly Europe Ltd. is not responsible for any loss or damage in case of incorrect installation or improper operation of this device due to failure of following the user and safety instructions in this guide.

Shelly devices are delivered with factory-in-stalled firmware. If firmware updates are necessary to keep the devices in conformity, including security updates, Shelly Europe Ltd. will provide the updates free of charge through the device Embedded Web Interface or the Shelly mobile application, where the information about the current firmware version is available. The choice to install or not the device firmware updates is the user's sole responsibility. Shelly Europe Ltd. shall not be liable for any lack of conformity of the device caused by failure of the user to install the pro-vided updates in a timely manner.

### **Product Introduction**

Shelly BLU Button 1 (the Device) is a Blue-tooth button, which helps you easily activate and deactivate any device or scene with just a click. (fig. 1).

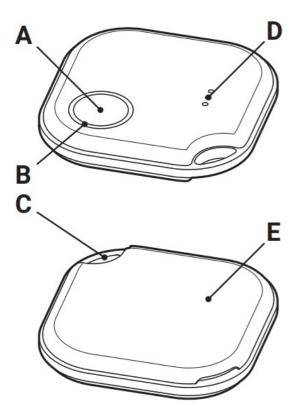

• A: Button

• B: LED indication ring

• C: Key ring bracket

• D. Buzzer

· E: Back cover

## **Installation Instructions**

CAUTION! Keep device away from liquids and moisture. The device shouldn't be used in places with high humidity.



**CAUTION!** Do not use if the Device has been damaged!



**CAUTION!** Do not attempt to service or re-pair the Device yourself!

CAUTION! The Device may be connected wirelessly and may control electric circuits and appliances. Proceed with caution! Irresponsible use of the Device may lead to malfunction, danger to your life or violation of the law.

# First steps

Shelly BLU Button 1 comes ready to use with the battery installed.

However, if pressing the button does not trigger a light indication or a beep, you might need to insert a battery. See the Replacing the battery section.

# **Using Shelly BLU Button 1**

Pressing the button will cause the Device to start transmitting signals for one second in compliance with the BT Home format. Learn more at <a href="https://bthome.io">https://bthome.io</a>.

Shelly BLU Button 1 has advanced security feature and supports encrypted mode.

Shelly BLU Button 1 supports multi-click-single, double, triple and long press.

The LED indication will emit the same number of flashes as the button presses and the buzzer – the corresponding number of beeps. To pair Shelly BLU Button 1 with another Blue-tooth device press and hold the Device button for 10 sec.

The device will await connection for the next one minute. The available Bluetooth characteristics are described in the official Shelly API documentation at:

https://shelly.link/ble

Shelly BLU Button 1 features beacon mode. If enabled, the Device will emit beacons every 8 second, and can be discovered or used for presence detection.

This mode allows also remote activating of the Device buzzer for 30 seconds (e.g. to find a lost Device nearby).

To restore the device configuration to factory settings, press and hold the button for 30 seconds shortly after inserting the battery.


#### **Initial Inclusion**

If you choose to use the Device with the Shelly Smart Control mobile application and cloud service, instructions on how to connect the Device to the Cloud and control it through the Shelly Smart Control app can be found in the mobile application guide.


The Shelly mobile application and Shelly Cloud service are not conditions for the De-vice to function properly. This Device can be used standalone or with various other home automation platforms and protocols.

## Replacing the battery


1. Open gently the Device back cover using your thumb nail, screwdriver or another flat object as shown on **Fig. 2(1)**.

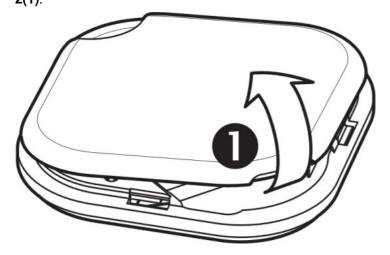


2. Extract the exhausted battery using your thumb nail, screwdriver or another flat object. as shown on Fig. 2(2).

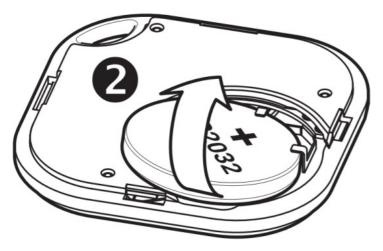


 3. Slide in a new battery as shown on Fig. 2(3).



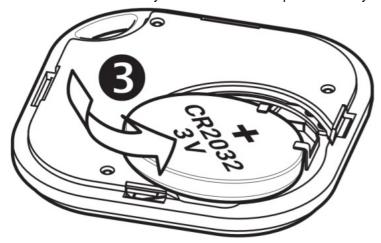

4. Replace the back cover by pressing it to the Device as shown on Fig. 2(4) until you hear a clicking sound.

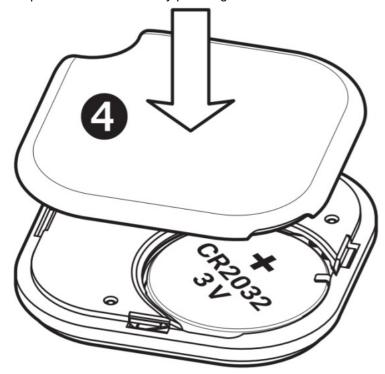

# **Troubleshooting**

In case you encounter problems with the installation or operation of Shelly BLU But-ton 1, please check its knowledge base page: <a href="https://shelly.link/ble">https://shelly.link/ble</a>

## **Specifications**

• **Dimensions:** 36x36x6 mm/1.44×1.44×0.25 in

• Weight with battery: 9 g / 0.3 oz

• Working temperature: -20°C to 40°C Humidity 30% to 70% RH

Power supply: 1x 3 V CR2032 battery (in-cluded)

• Battery life: up to 2 years

• Multi-click support: Up to 4 possible actions

Radio protocol: Bluetooth
RF band: 2400-2483.5 MHz
Max. RF power: 4 dBm
Beacon function: Yes

• **Encryption**: AES encryption (CCM mode)

Operational range (depending on local conditions):

up to 30 m outdoorsup to 10 m indoors

### **Declaration of conformity**

Hereby, Shelly Europe Ltd. (former Allterco Robotics EOOD) declares that the radio equipment type Shelly BLU Button 1 in compliance with Directive 2014/53/EU, 2014/35/EU, 2014/30/EU, 2011/65/EU. The full text of the EU declaration of conformity is available at the following internet address:

https://shelly.link/blu-button-1\_DoC

Manufacturer: Shelly Europe Ltd.

Address: 103 Cherni vrah Blvd., 1407 Sofia, Bulgaria

Tel.: +359 2 988 7435

E-mail: support@shelly.cloud

Official website: <a href="https://www.shelly.com">https://www.shelly.com</a>

Changes in the contact information data are published by the Manufacturer on the official website.

https://www.shelly.com

All rights to the trademark Shelly® and other intellectual rights associated with this Device belong to Shelly Europe Ltd.













**Documents / Resources** 



# Shelly BLU Button Bluetooth Operated Action and Scene Activation Button [pdf] User

Manual

BLU Button Bluetooth Operated Action and Scene Activation Button, BLU Button, Bluetooth Operated Action and Scene Activation Button, Operated Action and Scene Activation Button, Scene Activation Button, Activation Button, Button

## References

- Shelly BLE devices
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.