

# Shenzhen Holatek PJQ4 Bluetooth Remote Control Instructions

Home » Shenzhen Holatek » Shenzhen Holatek PJQ4 Bluetooth Remote Control Instructions

#### Shenzhen Holatek PJQ4 Bluetooth Remote Control Instructions

#### **Contents**

- 1 Instructions
- 2 Bluetooth pairing
- 3 LED indicator display
- 4 FCC warning
- 5 Documents /

Resources

**6 Related Posts** 

### Instructions

You need to perform Bluetooth pairing to enable the voice function.

Use the remote control power key to turn on the projector.



# **Bluetooth pairing**

When the projector is turned on to enter the system, press and hold the [Shortcut Center Key]





Keyl on the remote control at the same time for more than 2 seconds.

When the indicator light starts to flash, it enters the pairing mode, and the remote control will automatically pair and connect. After the pairing is successful, the system interface will have a corresponding prompt.

If the indicator light goes out and there is no prompt, the pairing fails and you need to pair again.

After the Bluetooth pairing is successful, you can use the voice function.

After successfully pairing, turn on the projector again without repeating pairing, it will automatically pair. If it fails to automatically pair or replace the projector, you need to manually perform the pairing operation again.

## **LED** indicator display

Touch the button and the LED light will turn on.

Long press the button, the LED light keeps on.

When pairing, the LED light flashes for 0.5 seconds, the pairing successful LED is always on for 2 seconds, and the pairing timeout indicator is off.

When the battery level is less than 10%, the indicator light flashes twice at an interval of 1.5 seconds, and flashes cyclically, with an interval of 0.5 seconds.

When charging, the LED light is a breathing light effect.

# **FCC** warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

#### **Documents / Resources**

ENERGY AND POPP PRINTING CONTROL
SPECIAL PRINTING
SPECIA

# <u>Shenzhen Holatek PJQ4 Bluetooth Remote Control</u> [pdf] Instructions PJQ4, SMC-PJQ4, SMC-PJQ4, PJQ4 Bluetooth Remote Control, Bluetooth Remote Control

Manuals+,