



Shenzhen Hugsun Technology x88 Pro 10 Smart Android 11 TV Box With Remote Control User Manual

[Home](#) » [Shenzhen Hugsun Technology](#) » Shenzhen Hugsun Technology x88 Pro 10 Smart Android 11 TV Box With Remote Control User Manual 

Contents

- [1 Shenzhen Hugsun Technology x88 Pro 10 Smart Android 11 TV Box With Remote Control](#)
- [2 Basic operations](#)
- [3 WIFI Function](#)
- [4 Ethernet Function](#)
- [5 File Browser](#)
- [6 Troubles Warning hooting](#)
- [7 FCC Warning Statement](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



SHENZHEN

Shenzhen Hugsun Technology x88 Pro 10 Smart Android 11 TV Box With Remote Control



Basic operations

Power on/ off and sleep

1. Connect the device to the TV with HD cable, connect device to the power adaptor, connect mouse, air mouse or other input devices with USB port
2. After the device and cables connected, power LED turns into blue
3. After disconnect the device from the power adaptor, Power LED turns off.
4. Under power on mode, press remote control's power button, device is entering into sleep mode, Power LED turns into red
5. Under sleep mode, device will be wake when you press remote control's power button, power LED turns from red to blue

Open applications

Use remote control's arrow keys to choose the wanted program, click OK button to open the selected program


Boot into the wizard page Language selection



1. Language -Screen Zoom -WiFi -Launcher -Remote control
2. Complete the above steps to confirm junior into the interface

Switch in the applications

Click “My Apps” to view recently used programs, click the program icon to switch applications arbitrarily

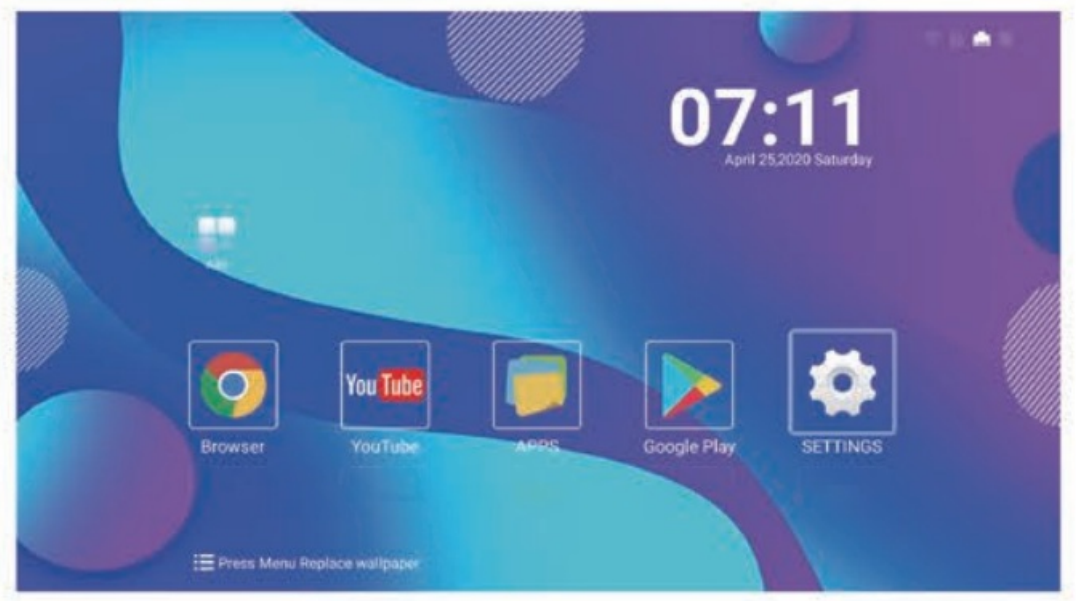


Close Applications

Click the right key of the mouse to back up the last step procedure to close the application directly.

MyApps


Move to “My Apps”, Press OK to enter in. You can see icons referring to different functions on the picture. Back To Home Screen

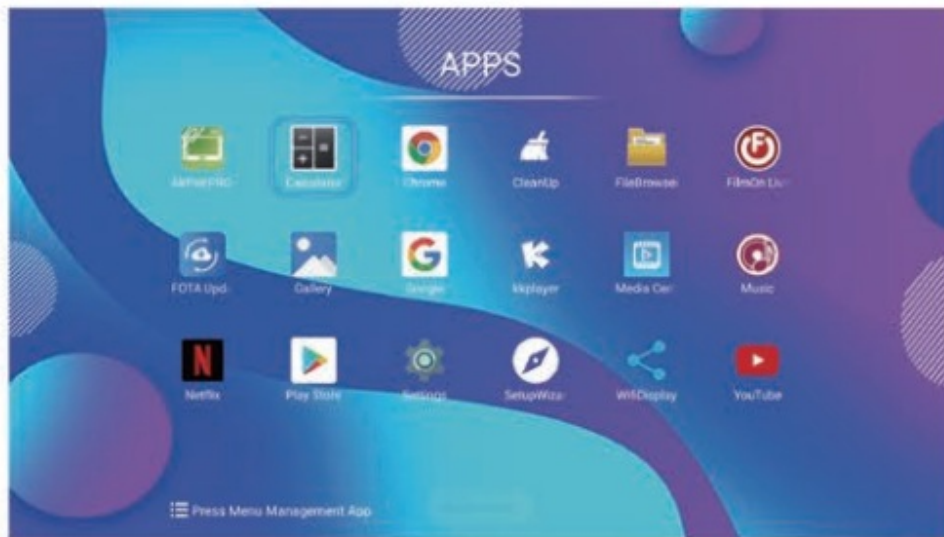

- Click icon @ to return to the home screen
- Click icon @ on remote control to return to the home screen

WIFI Function

1. Home Screen-+SETTINGS-Network-Select “Wi-Fi” to open WIFI function
2. Choose Hotspot->Input Password-Connect to the network

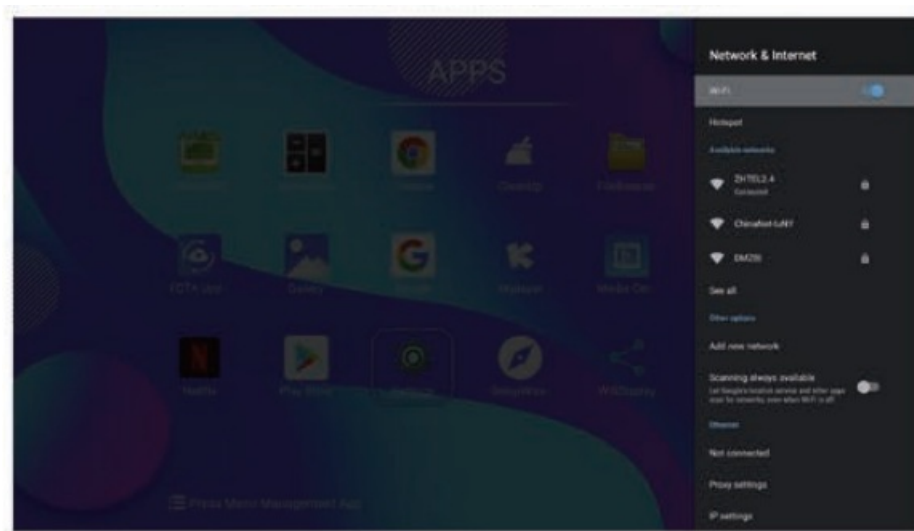

Ethernet Function

1. Home Screen-+ SETTINGS-+Network-+Select “Ethernet” to open Ethernet function
2. Insert network cable, network will be connected automatically

File Browser

Move to “File browser”. Press OK to enter into the device list. When inserting with USB device or SD/SDHC/MMC cards, the sign “Device is mounting” will be shown on the screen. Here you can cut, copy, paste and move the files and folder between the local disk and external storage card.

Read TF card:

Insert TF card into the device in the status of power on, when icon appears in top left corner of the desktop, open “File Browser”, the Identified External Storage Card will appear under “Local Disk”, TF card’s operation is available now.

Troubles Warning hooting

Under no circumstances should you try to repair the TV BOX by yourself, as this will invalidate the warranty. Do not open the TV BOXes there is a risk of electric shock. If a fault occurs, first check with points listed below before taking the TV BOX for repair. If you are unable to remedy the problem by following hints, consult your dealer for help.

Problem	Solution
No power	-Check if the power adaptor is properly connected to the power and the TV BOX. -Press the power on the remote controller to turn on the power.
No picture	-Re-connect with HDTV cable or AV cable. -Check if the TV is switched on.
No sound or distorted sound	-Adjust the volume. -Check if the speakers are connected correctly.
No audio or digital output	-Check the digital connections. -Check if your amplifier is set correctly.
The player does not respond to the Remote Control Player does not respond to some operating commands during playback	-Aim the remote control directly at the sensor on the front of the TV BOX. -Reduce the distance to the TV BOX. -Replace the batteries in the remote control. -Operations may not be permitted. Refer to the user manual. -Possibility of system halted, reconnect with power adaptor to restart.
No sound during movies playback	-The audio codec may not be supported by the TV BOX. You can change to the supported audio on playing menu. -Check the volume.
The contents of the USB flash drive cannot be read	-The USB flash drive format is not compatible with the box. -If one of the USB can not be read, please turn off the TV BOX for 30 seconds and restart the TV BOX.

Slow operation of the USB flash drive	-Big file size or high resolution USB flash drive takes longer time to read and display on the TV screen.
No sound with HDTV connection	-Check the connection between the TV and the HDTV jack of box. -Check your TV system setup. -Check the volume.
The TV screen is blank and the player LED is blinking	-Turn off your TV BOX, wait 30 seconds, turn it on again. -If under HDTV status, check if HDTV connection is correct or change another HDTV cable, set the output resolution of this TV BOX into 720p.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the Instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Documents / Resources

	Shenzhen Hugsun Technology x88 Pro 10 Smart Android 11 TV Box With Remote Control [pdf] User Manual X88PRO10, 2AH3J-X88PRO10, 2AH3JX88PRO10, x88 Pro 10 Smart Android 11 TV Box With Remote Control, 10 Smart Android 11 TV Box With Remote Control
---	--