



# Shenzhen Jiajianshiting Technology C30 Wireless Bluetooth Adapter Instruction Manual

[Home](#) » [Shenzhen Jiajianshiting Technology](#) » Shenzhen Jiajianshiting Technology C30 Wireless Bluetooth Adapter Instruction Manual



SHENZHEN

Jiajianshiting Technology C30 Wireless Bluetooth Adapter  
Instruction Manual

## Contents [ [hide](#) ]

 
- [1 Product Details](#)
- [2 Setup Instructions](#)
- [3 Remote Controller Navigation](#)
- [4 Replace Battery for Remote Controller](#)
- [5 Pairing Method](#)
- [6 Connect Two Devices](#)
- [7 LED Indicator](#)
- [8 Specification](#)
- [9 Troubleshooting](#)
- [10 Storage & Maintenance](#)
- [11 Product Warranty](#)
- [12 Warranty Terms](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)

## Product Details




## Setup Instructions

- Insert the adapter to Speaker Dock's connector, LED window side is frontal and face outward.
- Turn on the power of Speaker Dock and switch the input source channel to IPOD (no need to operate if IPOD is the only channel).
- Paired the device, adjust the volume of Speaker Dock and adapter to appropriate value (pairing step please refer to "Pairing Method").
- Music play and control can be operated on the cellphone or use a remote controller (please refer to "Remote Controller Navigation").

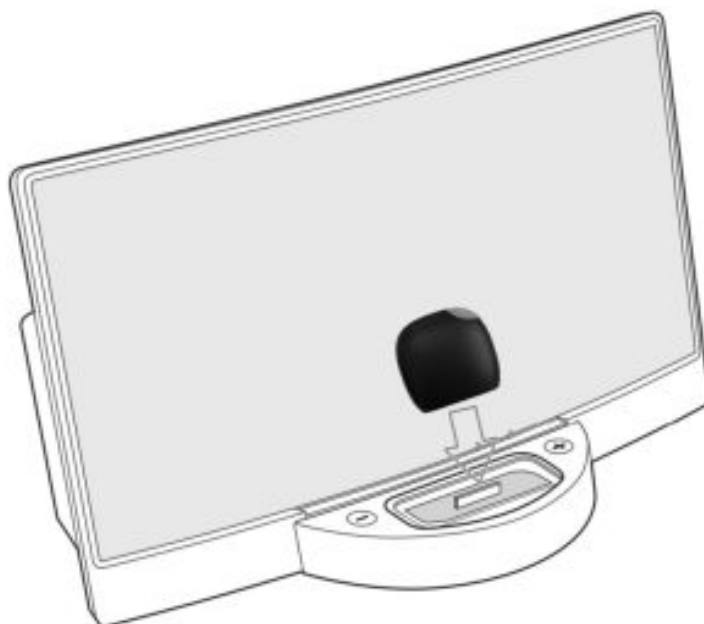


## Remote Controller Navigation

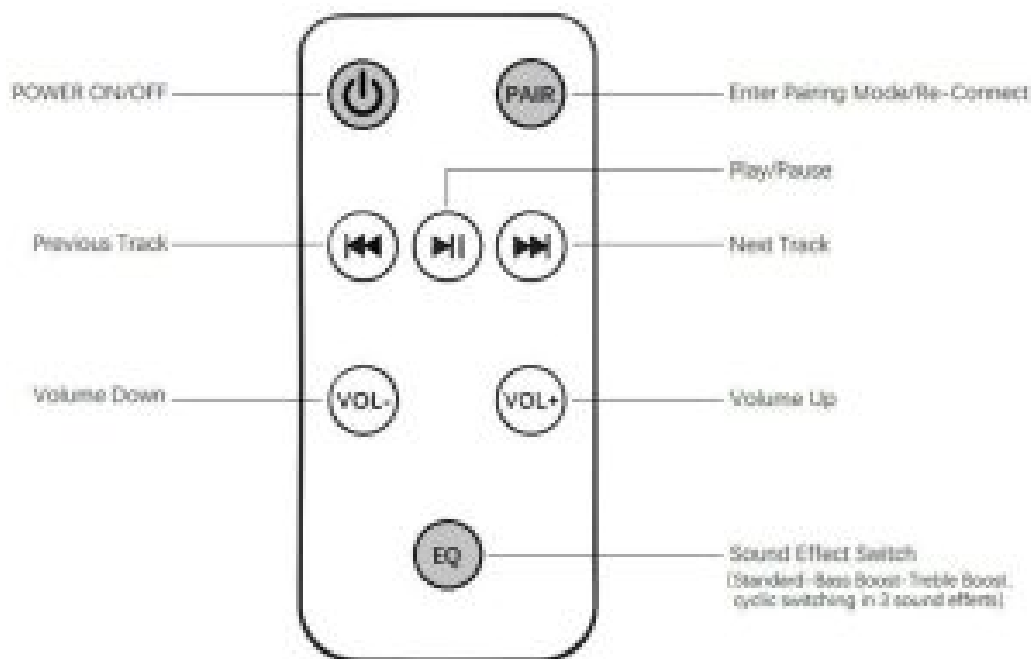

## Replace Battery for Remote Controller

With normal use, the battery (CR2025) should last for about 6months. When the remote controller no longer operates the unit, replace the battery with a new one.

If you are not going to use the remote commander for a long time, remove the battery to avoid any damage that causes by leakage and corrosion.

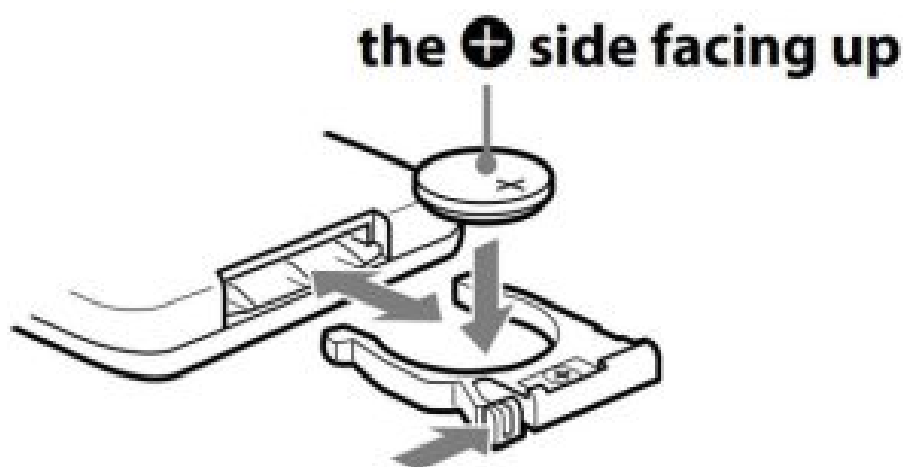

## Pairing Method

- When the first time uses the adapter it automatically enter pairing mode when power on (Red LED and blue LED flashing alternately). If it doesn't enter pairing mode, please press the "PAIR" key on the remote controller to make the adapter enter pairing mode.
- Open the BT setting on your cellphone or the devices with the BT function, then search the BT devices and choose the pairing name "C30", Enter "0000" pin code if needed.
- The Blue LED flashes slowly when it is paired successfully.

## Note

1. When the distance between the adapter and the BT devices is far than 10 meters (33 feet), the adapter may

disconnect from the devices. After that, once they are in the range of 10 meters (33 feet), they will automatically reconnect. But if the adapter disconnects from the device over 3 minutes it may enter timeout mode and cannot automatically reconnect, this time needs to press the "PAIR" key on the remote controller to reconnect or reconnect it at the cellphone BT setting menu.

2. If the adapter has paired, you can force the adapter "Enter pairing mode" again which another cellphone can find the adapter and connect it.

## **Connect Two Devices**

- Follow the pairing method, pair the first cellphone and then "Enter pairing mode" again to pairing the second cellphone.
- Enter the cellphone setting interface of the first cellphone, and connect the device C30 again.

## **LED Indicator**

- Red LED always on: Power off
- Red LED and Blue LED flashing alternately: pairing mode
- Blue LED flashing slowly: connected/playing music
- Red LED short light once: Remote controller's command received indicator.

## **Specification**

- BT effective range 10 meters (33 feet)
- Remote controller effective range 6 meters (20 feet)
- Remote controller battery CR2025

## **Troubleshooting**

Symptom	Possible Problem	Solution
Cannot power on	Check Speaker Dock whether power on or not, check whether the adaptor is firmly mounted to Speaker Dock's connector.	Power on Speaker Dock, pull, and insert the adaptor to Speaker Dock's connector again.
No sound	Speaker Dock input source not switch to IPOD channel.	Speaker Dock input source select to IPOD channel.
Cannot automatic connection	Adapter auto-connect timeout and enter standby mode.	Press the remote controller "PAIR" key, wait and it will reconnect in a few seconds; Also, use the remote controller "Power on/off" key to power off, and power on it again can force it to reconnect.
Cannot discover adapter	The adapter not enter pairing mode	Press remote controller "PAIR" key, then the Red LED and Blue LED flashing alternately, indicate it entered pairing mode.
Remote controller no function	Battery (CR2025) exhausted, remote distance or angle out of range	Replace a new battery (CR2025); Use the remote controller within an effective distance (about 6 meters).

## Storage & Maintenance

- Please store the wireless adapter in a cool and dry place. The working temperature is -10 45°C ( 14 113°F).
- Adapter is not waterproof, please don't put the adapter into water,
- please use soft cloth to wipe clean.
- Do not use any sharp objects in connect with adapters.
- Do not use in extremely high or low temperature or humid environment

**Note** Design and specifications are subject to change without notice.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received,

including interference that may cause undesired operation.


Product Warranty

Product Name: \_\_\_\_\_  
Product Model Number: \_\_\_\_ C30 \_\_\_\_\_  
Purchase Date: \_\_\_\_\_  
Invoice Number: \_\_\_\_\_  
Customer Name: \_\_\_\_\_  
Customer Phone: \_\_\_\_\_  
Customer Address: \_\_\_\_\_

Warranty Terms

- 1. There is a manual and warranty card in the package. User fills out the warranty card as the warranty certificate.
- 2. When adapter quality problems occur in normal use and not more than a year since the date of purchase, users can enjoy free repair services.
- 3. Which of the following do not belong to the scope of warranty:
  - A. Warranty card without dealer signature or seal.
  - B. Artificial or force majeure cause damage.
  - C. Machine to normal wear and tear.
- 4. Such as the failure of humans, more than the warranty period, and irresistible reasons, we will collect repair costs.
- 5. If the product is sent back to the factory for repair, please contact us, and fill the warranty cards with your name, address, telephone, and fault phenomena.

Documents / Resources



[Shenzhen Jiajianshiting Technology C30 Wireless Bluetooth Adapter](#) [pdf] Instruction Manual

C30, 2A2JM-C30, 2A2JMC30, C30 Wireless Bluetooth Adapter, Wireless Bluetooth Adapter, Bluetooth Adapter, Adapter