



Shenzhen Joyweaver Technology T30 Wireless Controller for M-NL User Manual

 
[Home](#) » [Shenzhen Joyweaver Technology](#) » Shenzhen Joyweaver Technology T30 Wireless Controller for M-NL User Manual 

Contents

- [1 Shenzhen Joyweaver Technology T30 Wireless Controller for M-NL](#)
- [2 Product Description](#)
- [3 Controller overview:](#)
- [4 Product Parameter](#)
- [5 Button Instructions](#)
- [6 Painng and Connecting](#)
- [7 Wired connection](#)
- [8 PC \(Windows \) mode](#)
- [9 TURBO Function Setting](#)
- [10 Motor Vibration Function](#)
- [11 How to Use NFC?](#)
- [12 How to Reset?](#)
- [13 Package Includes](#)
- [14 Power off/Charge/Low Battery Alarm/Reset](#)
- [15 Documents / Resources](#)
- [16 Related Posts](#)

SHENZHEN


Shenzhen Joyweaver Technology T30 Wireless Controller for M-NL

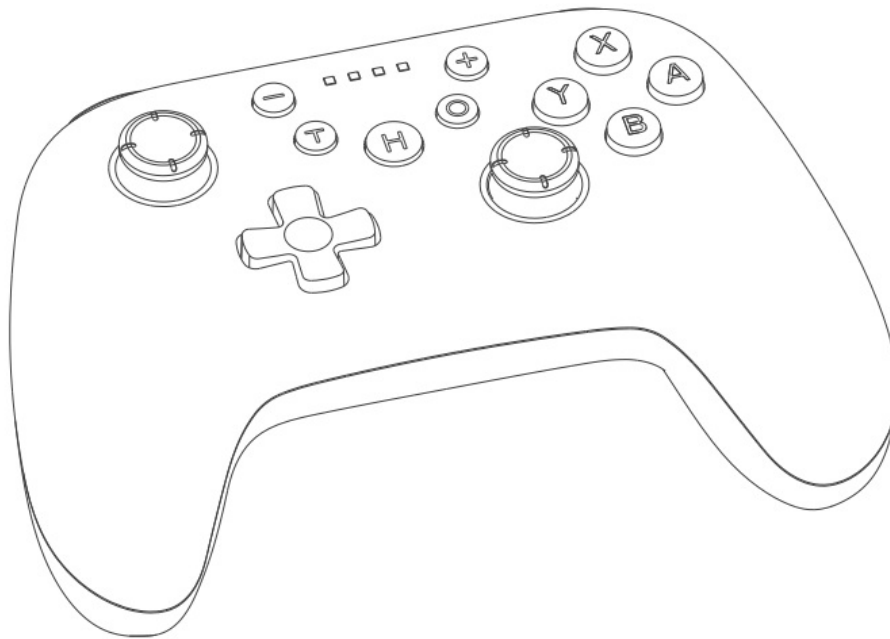

Product Description

This product is a mini wireless bluetooth gamepad with built-in NFC and TURBO, What is more distinctive is that it has a built-in linear motor similar to the official, the vibration effect is more delicate and realistic. Easy to use and highly performant. this joystick ensures precision and innovative gaming experience. It has an ergonomic and minimalist design with perform ant features that help you enjoy the game more. It can be used for N-SL and supports PC with USB cable.

Controller overview:

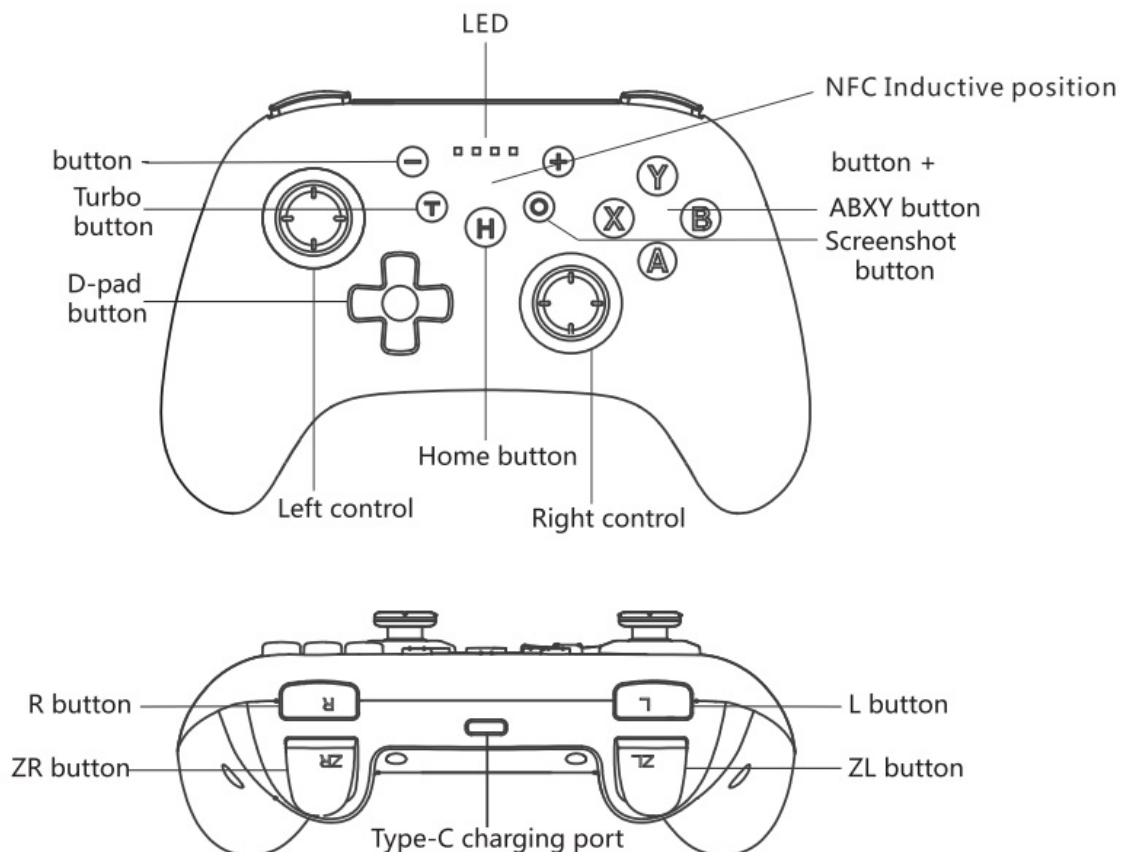

Product Parameter

- **Charging Voltage:** DC 5.0V
- **Working Current** <20mA
- **Sleep Current** 9uA
- **Battery capacity:** 800mAh
- **Usage time:** About 13 hours
- **Weight** 180g
- **Bluetooth 5.0 Transmission Distance:**< 10m
- **Vibration Current:** 70-120mA
- **Charging Current About** 450mA
- **Charging time:** About 3.5 hours
- **STANDYBY:** 30 Days
- **Dimensions:** 140 x 93.5 x 55.5 mm

Button Instructions

The gamepad consists of 19 digital buttons (UP, DOWN, LEFT, RIGHT, A, B, X, Y, L 1, R1, L2, R2, L3, R3, -, +, TURBO, HOME, screenshot); two analog 3D joystick composition.

Pairing and Connecting

- **Step 1:** Turn on the N-SL console, click the System settings menu button -> Airplane Mode -> Controller Connection (Bluetooth) -> Turn on
- **Step 2:** Enter the Bluetooth pairing mode of the console, click the Controllers menu button on the homepage -> Change Grip/Order option(The console will search for paired controllers).
- **Step 3:** Press and hold the "HOME" button for 3- 5 seconds to enter the Bluetooth pairing mode, LED1, LED2, LED3, LED4 flashes quickly. After the controller connects to the console will vibrate a bit.

Wired connection

- **Step 1:** Open the wired connection option of PRO controller on the console, click the System settings menu button-> Controllers and Sensors-> Pro controller Wired Communication-> on
- **Step 2:** Plug the USB cable to the controller and the console. Press any key on the controller will connect to the console. After the data cable is pulled out, controller connects back to the console with Bluetooth.

PC (Windows) mode

Turn off the controller, connect it to the PC with USB Type-C cable, Windows will automatically install the driver. The LED2 on the controller lights up when the controller is connecting to the console (The display name: Pro controller).

TURBO Function Setting

- To activate the turbo, hold turbo and press the button you want to assign it to, then let go of turbo, now when you hold the button it will act as if you were repeatedly pressing the button. Press the turbo & the button once more to deactivate the turbo function.

The turbo function is available for the fire buttons(A,B,X,Y,L 1,L2,R1 ,R2,L3,R3)

- **Adjust Turbo speed:**

1. Press the Turtle Button+ push Right Analog Stick up to change the Turtle speed in the following order : 5 times/second – 12 times/second – 20 times/second
2. Press the Turtle Button+ push Right Analog Stick down to change the Turtle speed in the following order :20 times/second -12 times/second- 5 times/second

Motor Vibration Function

- The 4 levels of vibration intensity that allow you to adjust the shockwave experience for more realistic video gaming, you can manually turn on or off the controller motor vibration via the console.

- **4 Levels of Vibration.**

100% strength(Default), 70% strength, 30% strength, 0% strength

- **Adjust the motor intensity:**

1. Press turtle + left Analog Stick up, the intensity is increase by one gear.
2. Press turbo+ left Analog Stick down, the intensity is reduced by one gear.


How to Use NFC?

When the game reminds you to use the NFC , please put the NFC feature on the sensing position.



How to Reset?

If your controller won't pair, won't respond, or is displaying a flashing light You'll need to reset the controller. To do this, just use a small tool and push the reset button. This will prompt the controller to resync.

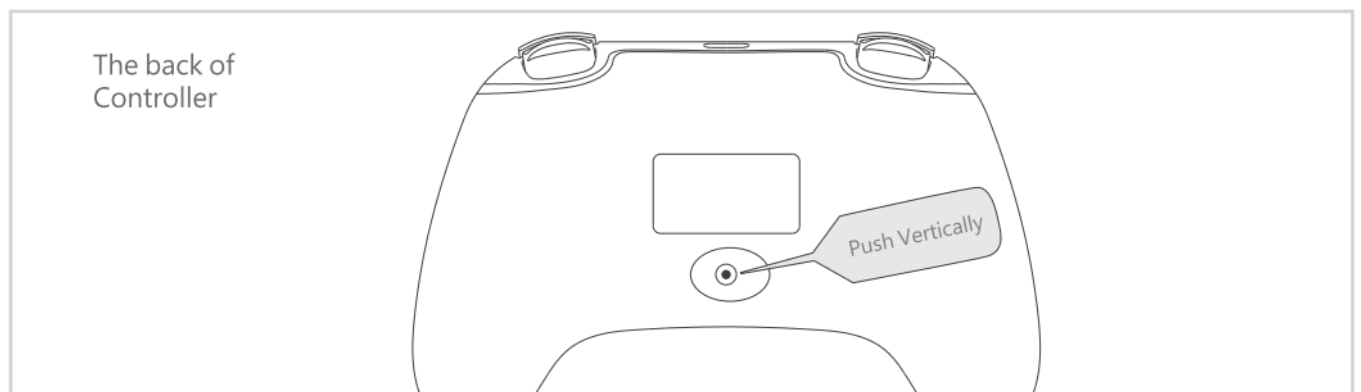


Package Includes



Controller x1



Charging Cable x1

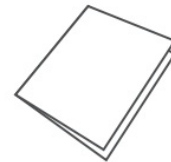

User Instruction x1

Power off/Charge/Low Battery Alarm/Reset

Status	Description
Power off	To turn off controller, press and the HOME button for 5S until the indicators light off.
	When the controller is in re-connecting status, it will be turned off if it failed to connect over 30 seconds
	When the controller is connecting with the console, it will enter into sleep mode when there is no operation over 5 minutes
Charge	When charging in the power-off, the LED Indicators flashes; When the battery is full, The LED indicators turn off;
	When charging in the power-on, the LED indicators flash; When the battery is full, the LED indicators stay blue.
Low Battery Alarm	When the LED indicators continues to flash, it will run out of power soon, and needs to be charged.

Documents / Resources

	Shenzhen Joyweaver Technology T30 Wireless Controller for M-NL [pdf] User Manual T30, 2A834-T30, 2A834T30, T30 Wireless Controller for M-NL, T30, Wireless Controller for M-NL
---	---