



## Shenzhen Kaadas Intelligent Technology ML2 Smart Door Lock Instruction Manual

[Home](#) » [Shenzhen Kaadas Intelligent Technology](#) » Shenzhen Kaadas Intelligent Technology ML2 Smart Door Lock Instruction Manual 

### Contents

- 1 Shenzhen Kaadas Intelligent Technology ML2 Smart Door Lock
- 2 INTRODUCTION
- 3 SPECIFICATIONS
- 4 DEFINITIONS
- 5 FACTORY DEFAULT SETTINGS
- 6 LOCK OPERATIONS
- 7 PROGRAMMING TREE FOR MASTER MODE MENU
- 8 HOW TO USE
- 9 Reset to factory default settings
- 10 ISED Statement
- 11 Documents / Resources
- 12 Related Posts



**Shenzhen Kaadas Intelligent Technology ML2 Smart Door Lock**




## INTRODUCTION


The Alfred ML2 door lock combines a modern look with durability that is perfect for a multi-family property, small business office space, retail space, hotels, airports, restrooms, or mixed-use commercial buildings. It is easy to use and install, and allow you to manage access with up to 250 unique PIN codes and 250 access cards. You can program, control, and monitor your door lock activities in the Alfred Home app, door position sensor detects the position of the door, open or closed. It also can be connected with the Smart Home&Security system via Z-wave (Module sold separately) or Zigbee(Module sold separately). It drives the deadbolt or clutch to lock and unlock the door. The inside lever or knob is always free for immediate exit.

## SPECIFICATIONS

Front assembly

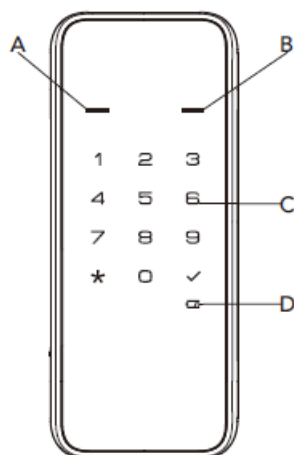

Back assembly

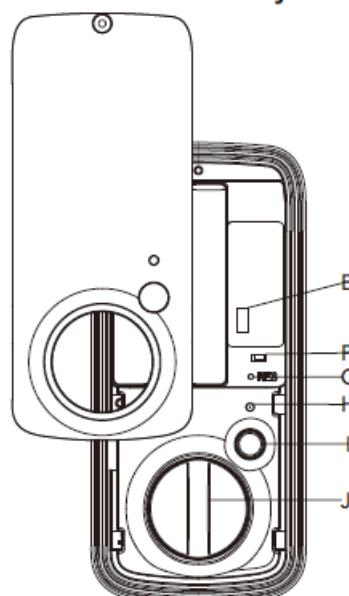

- A: A status indicator(Red)
- B: A status indicator(Green)
- C: Touchscreen keypad
- D: Low battery indicator
- E: Wireless module port
- F: Handing switch
- G: Reset the button
- H: Internal indicator
- I: Multi-functional button
- J: Thumb turn

## DEFINITIONS

### Master Mode:

The Master Mode can be entered by entering “\*\*+Master PIN Code+#” to program the lock.

### Master PIN code:

The Master PIN code is used for programming and for feature settings.

## CAUTION

The default Master PIN Code must be changed after installation.

The Master PIN Code will also operate the lock in Away Mode and Privacy Mode.

### Simple PIN Code Rule

For your security, we have set up a rule to avoid simple pin codes that can easily be guessed. Both the Master PIN Code and User PIN Codes need to follow these rules.

Rules for Simple Pin Code:

1. No consecutive numbers – Example: 123456 or 654321
2. No duplicated numbers – Example: 1111 or 333333
3. No other existing Pins – Example: You cannot use an existing 4 digit code within a separate 6 digit code

## **Manual Locking**

The lock can be locked by pressing and holding any key for 1 second from the outside or using a thumb turn from the inside or pressing multiple function buttons on the interior assembly from the inside.

## **Centered Control Platform**

The lock can be integrated with the Centered Control Platform by using a wireless module(Sold separately), the ML2 support Z-wave and Zigbee modules. For more information please refer to the instructions of the optional wireless module.

## **Auto Re-lock**

After the lock has been successfully unlocked, it will automatically re-lock after a preset time. This feature can be turned on through the Alfred Home App or through option #4 in the Master Mode menu at the Lock. This feature comes disabled in default settings. Auto re-lock time can be set to 30secs, 60secs, 2mins, and 3mins.

## **Away(Vacation) Mode**

This feature can be enabled in Master Mode or through Zigbee module(Sold separately). It restricts all User PIN Code accesses, Bluetooth Keys is disabled too.

The feature is designed to be used when all occupants are out of the house and no entry into the home should be made. Away(Vacation) Mode will be disabled when user disable the feature on centered control platform, or after entering the Master PIN code at the lock.

If someone unlocks the door by using the inside thumb turn or key override, the lock will sound an audible alarm for 1 min. Additionally when the alarm is activated, it will send a notification message to the account holders to notify them of the Alarm via Zigbee centered control platform.

## **Silent Mode**

When enabled, Silent Mode shuts off key tone playback for use in quiet areas. Silent Mode can be turned On or Off in Master Mode Menu Option #5 at the lock or through Language settings on the Alfred Home App.

## **Keypad Lockout**

The lock will go into KeyPad Lockout for a default of 5 mins after the wrong code entry limit has been met (10 attempts). Once the unit has been placed in shutdown mode due to the limit being reached the screen will flash and will prevent any keypad digits from being entered until the 5 min time limit has expired. The Wrong code entry limit resets after a successful Pin code entry has been entered or the door is unlocked from inside thumb turn or by Alfred Home App.

## **Status LED**

Located on Exterior Assembly. Green LED will illuminate when the door is unlocked or for successful settings change. Red LED will illuminate when the door is locked or when there is an error in the settings input.

## **User PIN code**

The User PIN Code operates the Lock. They can be created between 4 and 10 digits in length but must not break simple pin code rule. You can assign a User Pin code to specific members within the Alfred Home App. Please make sure to record set user Pin codes as they are NOT visible within Alfred Home App for security once set. The maximum number of user PIN codes is 250.

## **Access Card**

The Access Card operates the Lock. They can be added on the lock-in Master Mode Menu, and deleted in Master Mode Menu or in Alfred Home App. You can assign an Access Card to specific members within the Alfred Home App. The maximum number of Access Card is 250.

## **Privacy Mode(Inside Deadlock)**

Enable by holding the Multi-function button on the Back assembly of lock for 3 Seconds. Enabling this feature restricts ALL accesses, including Master PIN Code, User PIN Code, Alfred Home App Access and Wireless accesses(Zigbee or Z-wave). This feature is designed to be used when the User is home and within the house but

wants to restrict any other users from being able to unlock the door, for example when sleeping at night once everyone that is supposed to be home is within the house. The feature will disable automatically by unlocking door using thumb turn or override key.

### **Bluetooth Energy Saving Mode:**

Bluetooth Energy Saving Feature can be programmed in Settings options on the Alfred Home App or in Master Mode Menu at the Lock.

Enabling Energy Saving Mode – means Bluetooth will broadcast for 2min after keypad lights turn off on Touchscreen Panel, after the 2min expires the Bluetooth feature will go into energy savings Sleep mode to reduce some battery draw. The front panel will need to be touch to wake up the lock so the Bluetooth connection can be re-established.

Disabling Energy Saving Mode – means Bluetooth will stay active continuously to create quicker connection If user has enabled One Touch Unlock Feature in Alfred Home App, Bluetooth must be Enabled as the One Touch feature requires constant Bluetooth connect availability to function.

### **Reboot button**

In the case where your lock becomes unresponsive, the lock can be restarted by pressing the Reboot Button on the Front Assembly (see diagram on Page 14 for location) This will keep all lock settings in place but will restart the lock.

### **Reset button**

After Lock as been Reset, all User Credentials and settings will be deleted and returned to factory settings. Locate the Reset button on the Interior Assembly underneath Battery Cover and follow Reset instructions on Page 15 (see diagram on Page 3 for location). Connection with Alfred Home App will remained but will remove connection with Centered Control Platform.

## **FACTORY DEFAULT SETTINGS**

<b>Settings</b>	<b>Factory Defaults</b>
Master PIN Code	12345678
Auto Re-lock	Disabled
Speaker	Enabled
Wrong Code Entry Limit	10 times
Shutdown Time	5 mins
Bluetooth	Disabled(Energy saving)
Language	English

## **LOCK OPERATIONS**

### **-Enter Master Mode**

1. Touch the Keypad screen with your hand to activate the lock. (Keypad will illuminate)
2. Press “\*” twice
3. Enter Master PIN Code and followed by “√”

### **-Change the Default Master PIN code**

Changing Master PIN Code can be programmed in Settings options on the Alfred Home App or in Master Mode Menu at the Lock.

1. Enter Master Mode
2. Enter "1" to select Modify Master Pin Code.
3. Enter NEW 4-10 Digit Master PIN Code followed by "✓"
4. Repeat Step 3 to confirm NEW Master PIN Code

**CAUTION:** User must change Factory Set Master Pin Code before changing any other menu Settings when first installed. Settings will be locked until this has been completed. Record Master Pin Code in a safe and secure location as the Alfred Home APP will not show User Pin Codes for security purposes after it has been set.

### **-Add User PIN Codes**

User PIN Codes can be programmed in Settings options on the Alfred Home App or in Master Mode Menu at the Lock. Master Mode Menu Instructions:

1. Enter Master Mode.
2. Enter "2" to enter Add the User menu
3. Enter "1" to add User PIN code
4. Enter New User PIN Code followed by "✓"
5. Repeat step 4 to confirm PIN Code.
6. To continue adding new users, repeat steps 4-5.

When Registering User Pin Codes, the codes must be entered within 10 Seconds or the Lock will time out. If you make a mistake during the process, you can press the "\*" once to go back to the previous menu. Before entering New User PIN code, lock will announce how many User PIN codes already exist, and User PIN code number you are registering.

### **Add Access Card**

**Access Card can be added in Master Mode Menu at the Lock only.**

Master Mode Menu Instructions:

1. Enter Master Mode.
2. Enter "2" to enter Add User menu
3. Enter "3" to add Access Card
4. Swipe Access Card
5. To continue adding new Access Card, repeat steps 4

**CAUTION:** Before adding new Access Card, lock will announce how many Access Card already exist, and Access Card number you are registering.

### **-Delete User PIN code**

User PIN Codes can be programmed in Settings options on the Alfred Home App or in Master Mode Menu at the Lock.

## Master Mode Menu Instructions:

1. Enter Master Mode.
2. Enter “3” to enter delete User menu
3. Enter “1” to delete User PIN Code
4. Enter User PIN code number or User PIN code followed by “√”
5. To continue deleting User PIN code, repeat steps 4

### **-Delete Access Card**

Access Card can be deleted in the Settings options on the Alfred Home App or in Master Mode Menu at the Lock.  
Master Mode Menu Instructions:

1. Enter Master Mode.
2. Enter “3” to enter the delete User menu
3. Enter “3” to delete Access Card.
4. Enter the Access Card number followed by “√”, or swipe the Access card.
5. To continue deleting Access Card, repeat steps 4

### **-Auto re-lock settings**

Auto Re-Lock Feature can be programmed in Settings options on the Alfred Home App or in Master Mode Menu at the Lock.

Master Mode Menu Instructions:

1. Enter Master Mode
2. Enter “4” to enter Auto Re-lock menu
3. Enter “1” to Disable Auto Re-lock(Default)  
or Enter “2” to Enable Auto Re-lock and set the re-lock time to 30 secs. or Enter “3” to set the re-lock time to 60secs  
or Enter “4” to set the re-lock time to 2mins  
or Enter “5” to set the re-lock time to 3mins

### **-Silent Mode/Language Settings**

Silent Mode or Language Change Feature can be programmed in Settings options on the Alfred Home App or in Master Mode Menu at the Lock.


Master Mode Menu Instructions:

1. Enter Master Mode
2. Enter “5” to enter Languages Menu
3. Enter 1-5 to Enable a select voice guide language (see language choices in table to the right) or Enter “6” to enable Silent Mode

## **Languages**

1. English
2. Spanish
3. Portuguese
4. French
5. Chinese

## PROGRAMMING TREE FOR MASTER MODE MENU

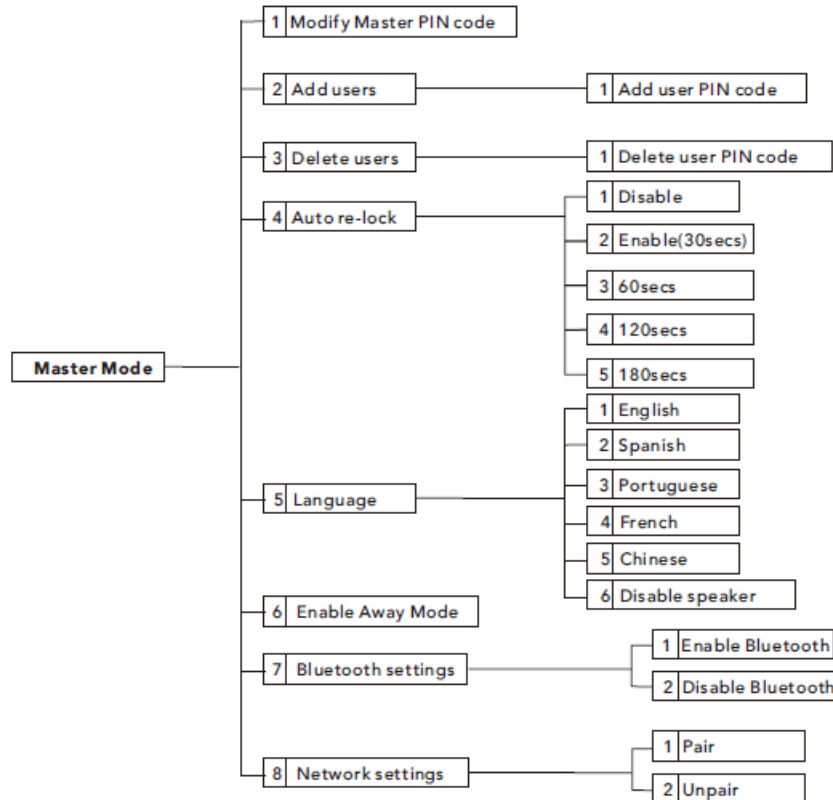

## HOW TO USE

### Unlock the door

1. Unlock the door from outside – Use PIN code key
  1. Place palm overlock to wake up the keypad.
  2. Input User PIN Code or Master PIN Code and press “√” to confirm.
2. Unlock the door from inside – Manual thumb turn
 

Turn the thumb turn on Back Assembly(Thumb turn will be in the vertical position when unlocked)

### Lock the door

#### 1. Lock the door from outside

##### 1. Auto Re-lock Mode

If Auto Re-Lock Mode is enabled, the latch bolt will be extended and locked automatically after approx. 30 seconds after being unlocked or the door closed.

##### 2. Manual Mode

Press and hold any key on keypad for 1 second.



## 2. Lock the door from inside

### 1. Auto Re-lock Mode

If Auto Re-Lock Mode is enabled, the latch bolt will be extended and locked automatically after approx. 30 seconds after being unlocked.

#### Manual Mode

In Manual Mode, the device can be locked by pushing the Multi-Function button on the Back Assembly or by turning the thumb turn. (Thumb turn will be in the horizontal position when locked)


## Enable Privacy Mode

To Enable Privacy Mode (Inside Deadlock), Push and HOLD the Multi-function button on Back Assembly for 3 Seconds.

When Privacy mode is enabled, it restricts ALL accesses, including Master Pin Code, User PIN Code, Access Card and Digital Bluetooth Keys sent through APP.



This feature will be disabled automatically after unlock the device with the lever handle from the inside or override key from the outside.

## Use Visual PIN Protection

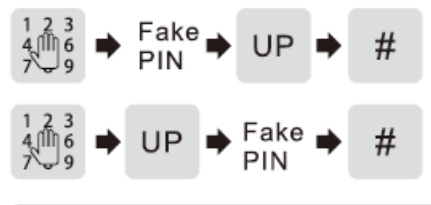

User can prevent PIN code exposure from strangers by entering additional random digits before or after their User Pin Code to unlock their device. In both cases the User Pin code is still intact but to a stranger it cannot easily be guessed.

## Use Emergency USB-C Power Port and Reboot Button

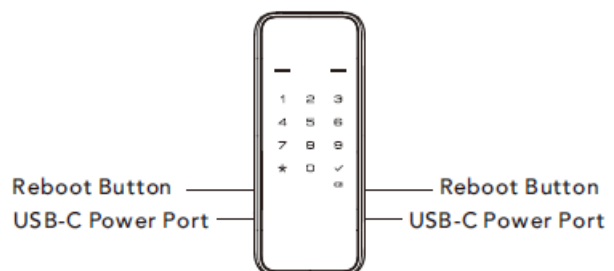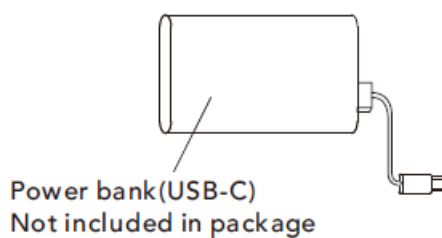

In the scenario where the Locks batteries are completely warn out and the lock will no longer turn on, you can connect any standard USB-C power banks to the Emergency Power port located on both side of the Touch screen Keypad. Connect with a USB-C cable to power lock to unlock latch bolt to get inside so you can charge your rechargeable battery.

In the scenario where the lock freezes or becomes unresponsive, the lock can be restarted by pressing the reboot button located on both side of the touch screen lock next to the Emergency USB-C Power port. This will keep all lock settings in place but will restart the lock.

## Reset to factory default settings

**Must be completed on Lock and cannot be done through the Alfred Home APP**

1. Open the door and keep the lock-in "unlock" status

2. Open the battery box and find the reset button.
3. Use a thin object to press and hold the reset button.
4. Keep holding the reset button and remove a battery from the battery box then replace it.
5. Keep holding the reset button down until you hear the lock beep (Can take up to 10 seconds).

**CAUTION:** Reset operation will delete all user setting and credentials, Master PIN code will be restored to default 12345678.

For support, please reach out to: [support@alfredinc.com](mailto:support@alfredinc.com)

You can also reach us at 1-833-4-ALFRED (253733)

[www.alfredinc.com](http://www.alfredinc.com)

## ISED Statement


English: This device complies with Part 15 of the FCC Rules [and contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS standard(s)]. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

The digital apparatus complies with Canadian CAN ICES-3 (B)/NMB-3(B).

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

## Documents / Resources

	<a href="#">Shenzhen Kaadas Intelligent Technology ML2 Smart Door Lock</a> [pdf] Instruction Manual ALFML2, 2AQY4-ALFML2, 2AQY4ALFML2, ML2 Smart Door Lock, Smart Door Lock
---	--