

Shenzhen Oubang Industrial BT214304 Game Controller Instruction Manual

Home » Shenzhen Oubang Industrial » Shenzhen Oubang Industrial BT214304 Game Controller Instruction Manual



Oubang Industrial BT214304 Game Controller Instruction Manual

Contents

- 1 Precautions
- 2 Safety
- 3 Documents /

Resources

4 Related Posts

Precautions

Before using this product, carefully read this manual and retain it for future reference. Parents and guardians of children should read this manual and make sure that children follow all safety precautions.

Safety

This product has been designed with the highest concern for safety. However, any electrical device. If used improperly, has the potential for causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guidelines:

1. Stop use and disconnect any other cables immediately if the device functions in an abnormal manner, produces unusual sounds or smells or becomes too hot to touch; Do not handle damaged or leaking lithium-ion batteries.

- 2. Do not allow the battery to come into contact with fire or subject it to extreme temperatures such as in direct sunlight in a vehicle exposed to the sun or near a heat source.
- 3. Keep the product out of the reach of small Children, Small children may swallow small parts or may wrap the cables around themselves, which may inflict injury or cause an accident or a malfunction.
- 4. If a battery is leaking, do not touch the material from the leaking battery with bare hands.
 - -If a battery is leaking, stop using the product immediately and contact Customer Support.
 - -If the material gets into the eyes, immediately flush the eyes with clean water and seek medical attention, it may cause blindness.
 - -If the material comes into contact with the skin or clothes, immediately rinse the affected area with clean water. Consult your doctor if inflammation or soreness develops.
- 5. If a battery is leaking, immediately move the leaking battery away from the fire. The material from the leaking battery or gas may ignite causing fire or explosion.
- 6. If you experience any of the following health problems, discontinue use of the product immediately: If symptoms persist, consult with your doctor.

Use and handing

- 1. Never disassemble or modify the product.
- 2. Do not allow liquid, small particles, or other foreign objects to get into the product.
- 3. Do not place the product on surfaces that are unstable, tilted or subject to vibration.
- 4. Do not use the product near water.
- 5. Do not touch the product during an electrical storm.
- 6. Do not stand on or put objects on the product.
- 7. Do not throw or drop the product or subject it to strong physical shock.
- 8. Do not place the product on the floor or in a place where it may cause someone to trip or stumble.
- 9. If the wireless controller is sitting on a flat surface, the vibration of the wireless controller during gameplay may cause it to fall, leading to injury or malfunction.
- 10. Do not touch the ports or insert any foreign objects into the product.
- 11. If you see dust or foreign objects on the connectors, wipe them with a dry cloth before connecting.
- 12. Do not touch the product with wet hands. When using the motion sensor function, be cautious of the following points. If the controller hits a person or object, this may cause an accident, injury, or damage.

Cleaning

Follow the instructions below to help prevent the product exterior from deteriorating or becoming discolored

- 1. Wipe with a soft, dry cloth.
- 2. Do not apply insecticides or other volatile substances.
- 3. Do not place any rubber or vinyl materials on the product exterior for an extended period of time.
- 4. Do not use solvents or other chemicals. Do not wipe with a chemically-treated cleaning cloth.

Storage conditions

1. Do not expose the product to high temperatures, high humidity, or direct sunlight during operation, transportation, and storage.

- 2. Do not leave the product in a car with the windows closed, particularly in hot weather.
- 3. Do not expose the product to dust, smoke, or steam.

Battery life and duration

- 1. The battery has a limited lifespan. Battery duration will gradually decrease with repeated usage and age. Battery life also varies depending on the storage method, conditions of use, and environmental factors.
- 2. Charge in an environment where the temperature range is between 10°C and 30°C. Charging may not be as effective when performed in other environments.

When not in use

When the wireless controller is not used for an extended period of time, it is recommended that you fully charge it at least once a year to help maintain battery functionality.

Pair the controller The first time you use the controller, you'll need to pair it with your P-4 console.

- 1. Turn on your console.
- 2. Connect the controller to your console using the USB cable included with your console. Press the PS button. The controller powers on. After the light bar blinks, the player indicator lights up.

If you have any problems, please contact us through the mail: gamepad@ioubang.com



http://www.facebook.com/groups/487299889137543/

Scan the QR code Enjoy lifetime warranty

Facebook ID: OUBANG service

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Documents / Resources



Manuals+,