



Shenzhen Sei Robotics BH13-J Remote Control User Manual

[Home](#) » [Shenzhen Sei Robotics](#) » Shenzhen Sei Robotics BH13-J Remote Control User Manual 

Contents

- 1 [Shenzhen Sei Robotics BH13-J Remote Control](#)
- 2 [Product function description](#)
- 3 [Functional requirements](#)
- 4 [Key code value](#)
- 5 [Google ATV voice function](#)
- 6 [Infrared learning function](#)
- 7 [SmartRCU function](#)
- 8 [Other functions](#)
- 9 [Power management](#)
- 10 [The remote control supports ota \(online\) upgrade](#)
- 11 [Software version number](#)
- 12 [Indicator light description](#)
- 13 [FCC](#)
- 14 [Documents / Resources](#)
- 15 [Related Posts](#)

SHENZHEN

Shenzhen Sei Robotics BH13-J Remote Control



Product function description

Function introduction

Bluetooth button , Google voice, infrared learning, SmartRCU , backlight

Second, the hardware part

- Main control chip: RTL8752CJF
- Indicator light: 1 LED red indicator light
- Backlight: 11 white backlights
- Launch tube: 1 launch tube
- Antenna form: PCB antenna


Functional requirements

Bluetooth pairing

step	operate
enter pairing mode	<p>Case 1 : When the remote control has no pairing information, press any button to enter the pairing mode (except the learning button)</p> <p>Case 2: Press and hold " HOME+BACK " at the same time for 3 seconds, clear the pairing information, and then send the pairing broadcast to enter the pairing mode</p>
Pairing time and indicator	<p>1: Enter pairing mode, the red light flashes quickly (5-6 times per second) 2: The pairing is successful, the indicator light is always on for 3s and then goes out</p> <p>3: Pairing fails, the indicator light flashes for 60 seconds and exits pairing mode</p> <p>4: When pairing by pressing the key combination, first clear the previous</p>

	pairing record
bluetooth device name	BH100J

Infrared code format and parameters

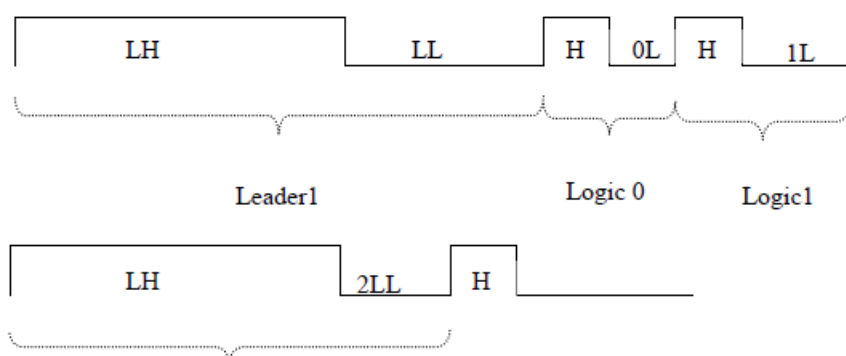

Note: NEC-N format IC: PT6121/2 UPD6121[T32DBA]; low byte read code first, duty ratio: 1:3;

Leader1	8B Custom		8B Custom		8B Data		8B Data/		Delay1	
©Leader2			Delay2				To © Cycle			
Name	KHz	LH		LL	H	0L		1L	2LL	C
T32DBA(NEC)	37.90k	9.00m		4.50m	560u	560u		1.69m	2.25m	108m

Key code value

Key function

When any key is pressed, the white backlight lights up, and if there is no more key press within 4s, the backlight turns off. When the backlight is on, the key appears again to start timing for 4s, and the backlight is also on for 4s after long-pressing the key .

Key code value:

key sequ ence	key name	IR code: NEC	Usage p age	Usage ID	NOTE
		User code: 0x 00, FF			
	TV POWER	0xF1	/	/	1: Support manual learning 2: Support SmartRCU
	TV SOURCE	0xF2	/	/	1: Support manual learning 2: Support SmartRCU
	BOX Power	/	0x0C	0x0030	
	REWIND	/	0x0C	0x00B4	
	PLAY/PAUSE	/	0x0C	0x00CD	
	FAST_FORWARD	/	0x0C	0x00B3	
	Live TV	/	0x0C	0x0063	
	Record/REC	/	0x0C	0x00b2	
	Option	/	0x0C	0x0083	
	Youtube	/	0x0C	0x000c	
	On Demand	/	0x0C	0x0200	
	UP	/	0x0C	0x0042	
	DOWN	/	0x0C	0x0043	
	Left	/	0x0C	0x0044	
	Right	/	0x0C	0x0045	
	Center/OK	/	0x0C	0x0041	
	VOL+	/	0x0C	0x00e9	Smrat RCU support
	VOL-	/	0x0C	0x00ea	Smrat RCU support
	CH+	/	0x0C	0x009c	
	CH-	/	0x0C	0x009d	
	BACK	/	0x0C	0x0224	
	Assistance	/	0x0C	0x0221	
	Home	/	0x0C	0x0223	

	Menu	/	0x0C	0x0040	
	All Apps	/	0x0C	0x01A2	
	1	/	0x07	0x001E	
	2	/	0x07	0x001F	
	3	/	0x07	0x0020	
	4	/	0x07	0x0021	
	5	/	0x07	0x0022	
	6	/	0x07	0x0023	
	7	/	0x07	0x0024	
	8	/	0x07	0x0025	
	9	/	0x07	0x0026	
	Mute	/	0x0C	0x00e2	
	0	/	0x07	0x0027	
	TV/RADIO	/	0x0C	0x001c	
	OK+BACK	/	0x0c 0x0041+0x0c 0x0224		Bugreport
	DOWN+BACK	/	0x0c 0x0043+0x0c 0x0224		

Google ATV voice function

1. Support Google voice 1.0 spec;
2. Use Google ATV standard voice interface; support long key recording, and key release recording;
3. Voice key Press the key, and send out the press and release together;
4. After Google Voice is turned on, if the host has not received the command to turn off Google Voice, the remote control will automatically exit after a timeout of 30 seconds

Infrared learning function

The learning function has a total of 2 buttons, the “TV POWER” and “TV SOURCE” buttons are the buttons for learning;

1. Press and hold the “learning button” for 3 seconds, the indicator light is always on, and the indicator light continues to be on when you let go to enter the learning function.
2. control to be learned at the infrared tube of the BH13J remote control, and press the button of the remote control to be learned.
3. After the learning is successful, the indicator light flashes three times quickly and then goes out and saves the learning data;
4. The learning failure indicator goes off immediately.

5. Press and hold the “VOL+ and VOL-” keys for 10 seconds, and the indicator light flashes 3 times to clear the infrared learning data and the infrared code configured by the SmartRCU .

Remark:

1. When learning, the transmitters of the two remote controllers should be on the same line, and the distance should be within 3cm.
2. After entering the learning function, if no learning is performed within 20 seconds, it will automatically exit the learning state.
3. repeatedly learning the same button, the previously learned code will be overwritten after learning, and the last learning signal will be retained; learning failure and learning overtime will not change the original learning data.
4. When pressing any non-learning key in the learning state , exit the manual learning function

SmartRCU function

1. details, please refer to the SmartRCU standard document
2. TV POWER, TV SOURCE, VOL+, VOL- support SMartRCU function
3. Press and hold “VOL+ and VOL-” at the same time for 10 seconds, the red light flashes 3 times, clearing the infrared code configured by the SmartRCU , and also clearing the infrared learning data.

Other functions

1. Entering sleep and waking up: When the link is disconnected, the remote control enters the low-power sleep mode within 7s, and enters the deep sleep mode after 20 seconds ; when the link is disconnected, it does not enter the sleep deep sleep mode;
2. Press any key to wake up the remote control, and use the Bluetooth low energy protocol to establish a quick connection with the set-top box that has been coded, and send the corresponding key value.
3. the case of abnormal disconnection of the remote control (except when the host actively disconnects), it will automatically send back a connection broadcast packet at intervals, with a timeout of 30s;
4. remote control is disconnected , after the power button sends a wakeup broadcast packet (2s), it sends a 7s return broadcast packet;
5. In the case of disconnection , the button sends back the connection broadcast packet (1s direct connection broadcast packet + 10s non-direct connection broadcast packet). During the broadcast process, it supports replying to the scan request of all devices. The scan response should contain the Bluetooth device name “BH100J”, but only Support connect request of devices in the whitelist;

Power management

Power supply	2 AAA dry batteries
low power	VBAT $\leq 2.3V \pm 0.2V$; when the battery is low, the indicator light flashes slowly (once in 1 second) during the key operation, and then goes out after flashing 3 times.
Power acquisition	Supports normal battery reading service for the host to read the battery level of the remote control.

The remote control supports ota (online) upgrade

In order to adapt to new needs or changes, the remote control needs to support ota upgrades. The upgrade package is sent to the Bluetooth remote control through the box side .

Software version number

Software version number: BH100J_Vx.xx Version number description: BH100J_ is a fixed format, after the software version is updated, the cumulative update Vx.xx

Indicator light description

state	Running light indication				cycle
	Press and hold for 3s to enter the pairing				
Manual	state, the indicator light will be on, and the				Flashing frequency: fast flashing (5-6 times per second)
pairing	indicator will flash quickly for 60s after				
	letting go, waiting for pairing				
	The pairing is successful, the indicator light				
Bluetooth					
	is always on for 3s and then turns off				
connection					
	Pairing failed, the light is off				
		Function	indicator	flashes	Frequency: Flashes 2 times in 1 second,
		slowly			and turns off after 6 flashes
	button click				
infrared key		The backlight is always on			
(Unpaired,		for 4s and then turns off			
disconnected		Function	indicator	flashes	Frequency: Flashes 2 times in 1 second,
)		slowly			and turns off after 6 flashes
	long press				
		The backlight is always on			
		for 4s and then turns off			
bluetooth		Function indicator does			

	succeeded)		for 4s and then goes off	
		long press	Function indicator does not light up	
			The backlight is always on for 4s and then goes off	
	Infrared low power	During key operation	The indicator light flashes slowly	Frequency: flashes once per second, flashes 3 times and then turns off
	bluetooth low power	During key operation	The indicator light flashes slowly	Frequency: flashes once per second, flashes 3 times and then turns off

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation . Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

Documents / Resources

15. Product function description	
1. Function introduction	
2. Function introduction	
3. Function introduction	
4. Function introduction	
5. Function introduction	
6. Function introduction	
7. Function introduction	
8. Function introduction	
9. Function introduction	
10. Function introduction	
11. Function introduction	
12. Function introduction	
13. Function introduction	
14. Function introduction	
15. Function introduction	
16. Function introduction	
17. Function introduction	
18. Function introduction	
19. Function introduction	
20. Function introduction	
21. Function introduction	
22. Function introduction	
23. Function introduction	
24. Function introduction	
25. Function introduction	
26. Function introduction	
27. Function introduction	
28. Function introduction	
29. Function introduction	
30. Function introduction	
31. Function introduction	
32. Function introduction	
33. Function introduction	
34. Function introduction	
35. Function introduction	
36. Function introduction	
37. Function introduction	
38. Function introduction	
39. Function introduction	
40. Function introduction	
41. Function introduction	
42. Function introduction	
43. Function introduction	
44. Function introduction	
45. Function introduction	
46. Function introduction	
47. Function introduction	
48. Function introduction	
49. Function introduction	
50. Function introduction	
51. Function introduction	
52. Function introduction	
53. Function introduction	
54. Function introduction	
55. Function introduction	
56. Function introduction	
57. Function introduction	
58. Function introduction	
59. Function introduction	
60. Function introduction	
61. Function introduction	
62. Function introduction	
63. Function introduction	
64. Function introduction	
65. Function introduction	
66. Function introduction	
67. Function introduction	
68. Function introduction	
69. Function introduction	
70. Function introduction	
71. Function introduction	
72. Function introduction	
73. Function introduction	
74. Function introduction	
75. Function introduction	
76. Function introduction	
77. Function introduction	
78. Function introduction	
79. Function introduction	
80. Function introduction	
81. Function introduction	
82. Function introduction	
83. Function introduction	
84. Function introduction	
85. Function introduction	
86. Function introduction	
87. Function introduction	
88. Function introduction	
89. Function introduction	
90. Function introduction	
91. Function introduction	
92. Function introduction	
93. Function introduction	
94. Function introduction	
95. Function introduction	
96. Function introduction	
97. Function introduction	
98. Function introduction	
99. Function introduction	
100. Function introduction	

Shenzhen Sei Robotics BH13-J Remote Control [pdf] User Manual

BH13-J, BH13J, 2AOVU-BH13-J, 2AOVUBH13J, BH13-J Remote Control, BH13-J, Remote Co ntrol