



Shenzhen Shengong Created Technology SG3 Music Alarm Clock User Manual

[Home](#) » [Shenzhen Shengong Created Technology](#) » Shenzhen Shengong Created Technology SG3 Music Alarm Clock User Manual 

Music Alarm Clock
SG3




User Manual

IT DE EN ES FR


Contents

- [1 whats inbox](#)
- [2 GETTING STARTED](#)
- [3 OPERATIONAL INSTRUCTIONS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

whats inbox

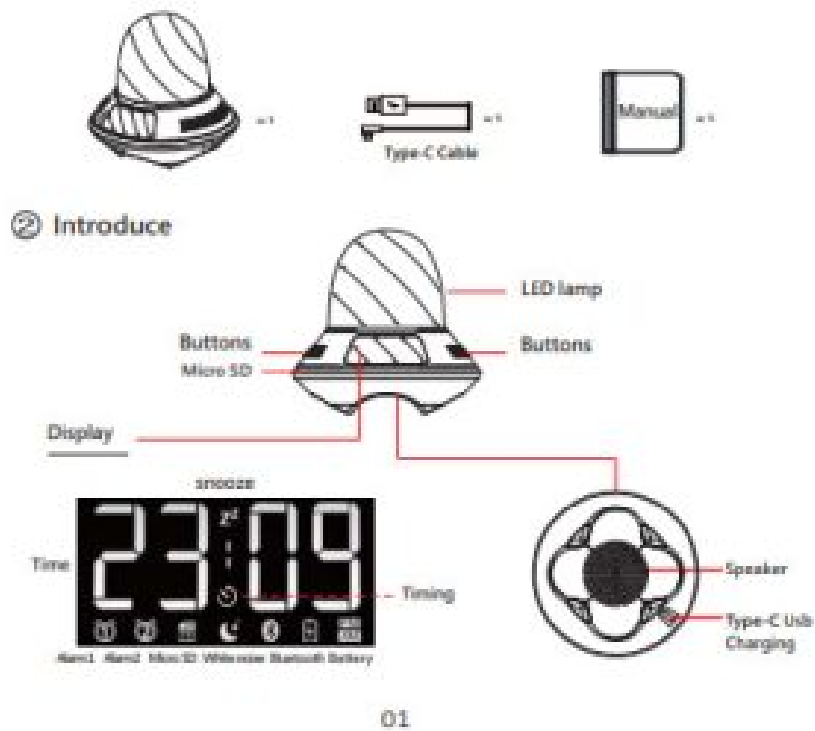

Buttons

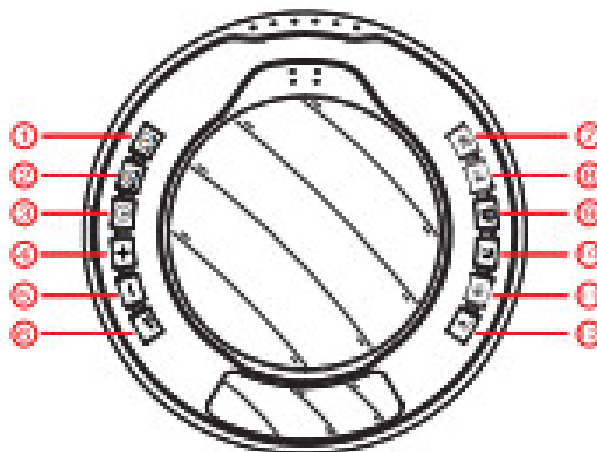

GETTING STARTED

1. Alarm 1 setting
2. Alarm 2 setting
3. Time setting
4. +
5. -
6. play/Pause/Alarm off
7. Power on/off/Back
8. Bluetooth
9. TF
10. White noise
11. Brightness

12. Light up/Switch colors

Note

When using the power supply for charging, please make sure not to exceed the standard power supply of this product 5V2A.

OPERATIONAL INSTRUCTIONS

Setting the Alarm

Alarm 1 / Alarm 2 setting – Press and hold for 1.5 seconds

1. Press and hold the ALARM #1/#2 SET button for 1.5 seconds. The alarm clock #1/#2 icon on the display screen will flash and enter in alarm clock #1/#2 setting.
2. The hour hand starts to flash, adjust by +/-, press to save the hour hand.
3. Then the minute hand starts to flash, adjust by +/-, press to save the alarm time.
4. Next enter the ringtone selection. 3 ringtones are selected by +/-, press again to save and exit.
5. 10 seconds of no operation will automatically save and exit.

Alarm 1 setting – Press

1. Press for the first time: Activate the alarm 1 function. the alarm 1 icon keeps always on.
2. Second time: Activate the snooze Zz function. the snooze icon keeps always on.
3. Third time: Turn off alarm 1 and snooze function.

Alarm 2 setting – Press

1. First time: Activate the alarm 2 functions. the alarm 2 icon is always on.
2. Second time: Turn off the alarm 2 functions. Note: Alarm 2 has no snooze function.

Supplement: When the alarm is ringing, press any button to stop it (depending on whether the snooze Zz function is activated, if there is a snooze, it will respond every 9 minutes, 3 times in total. If snooze function is not activated, stop the alarm clock directly)

When activating the snooze function, the alarm 1 rings, can directly stop it by pressing the alarm clock 1. No longer enter the snooze function.

Alarm 1: When there is a snooze function, the alarm will ring for 2 minutes. If there is no operation within 2 minutes, directly enter the next snooze phase. **Alarm 2:** The ringing time is 5 minutes. When the alarm clock starts to ring, the light will gradually turn on.

Setting the Clock

Time setting – Press and hold for 1.5 seconds

1. Press and hold the Timer SET button for 1.5 seconds. The hour hand starts to flash, adjusts by +/-, press to save it.
2. Then the minute hand starts to flash, adjusts by +/-, press to save and exit.
3. Next, enter the 12H/24H system switch, adjusts by +/-.
4. 10 seconds of no operation will automatically save and exit.

Time setting – Press

1. Enter into screen brightness setting.
2. Press for the first time: Level 1 brightness.
3. Second time: Level 2.
4. Third time: Level 3.
5. Fourth time: Turn off the screen.

“+” / “-” – Press and hold for 1.5 seconds Next song » / Previous song«

“+” / “-” – Press

Volume up/ down. The minute hand part on the screen can show 00-28. automatically exit 3 seconds after adjustment.

Play/Pause/Alarm off – Press and hold for 1.5 seconds

1. Play the current song in a loop (white noise and TF mode)
2. Press it again or long-press next time to cancel.

Play/Pause/Alarm off – Press

Play/pause function when playing a song.

Power on/off – Press and hold for 1.5 seconds

1. After power on. Bluetooth will automatically enable the pairing mode and the light color is gradual.

Bluetooth – Press and hold for 1.5 seconds

Reset Bluetooth.

Bluetooth – Press

On/Off.

White Noise – Press and hold for 1.5 seconds

1. Turn on white noise playback timing. Can be set to 15 minutes: 30 minutes: 60 minutes and 90 minutes by pressing the white noise button.
2. No operation for 3 seconds to exit.

White Noise – Press

1. Switch to the white noise model.
2. The white noise icon on the display will light up.
3. Press the button again to play the next white noise.

TF – Press and hold for 1.5 seconds

1. Turn on TF mode playback timing. Can be set to 15 minutes: 30 minutes: 60 minutes and 90 minutes by pressing the TF button.
2. No operation for 3 seconds to exit.

TF – Press

1. Switch to the TF mode when there is a TF card and light up the TF icon.
2. Press the button again to play the next song.
3. In TF mode, only MP3 and WAV format files are supported.

Brightness – Press and hold for 1.5 seconds

Timing-off function. 15 minutes/ 30 minutes/ 60 minutes and constant light can be selected by pressing the brightness button. No operation for 3 seconds to exit.

Brightness- Press

4 levels of brightness can be switched when the light is on.

Light up/Switch colors – Press and hold for 1.5 seconds.

Turn on / off the lights.

Light up/Switch colors – Press

Switch colors: a total of 9 colors.

Supplement

1. Battery identification:
 - 1.1 Low battery status: The battery icon will flash and there will be a prompt. please charge in time.
 - 1.2 Charging status: CH will be displayed on the screen. After 5S. the battery will enter the charging stage and the battery icon will be always on. When fully charged. the screen will display FULL. Please unplug the power supply in time.
2. Bluetooth mode. white noise mode and TF card mode can only be activated individually.
3. Silent Mode: From 22:00 to 7:00 am of the next day. all the tones will not respond (Power on/off voice prompt. low battery voice prompt)
4. Memory Function: It will automatically record the data of the last use.

Tips

READ INSTRUCTIONS – All safety and operating instructions should be read before the appliance is operated.

RETAIN INSTRUCTIONS – The safety and operating instructions should be retained in a secure place for future reference.

HEED WARNINGS – All warnings on the appliance and in the operating instructions should be observed.

Input – Please make sure the charging voltage and the current are under 5V 2A.

WATER AND MOISTURE – Please keep dry because the product is not waterproof. Do not expose this appliance to rain or moisture.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


- (1) this device may not cause harmful interference.
 - (2) this device must accept any interference received, including interference that may cause undesired operation
- This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. FCC Radiation Exposure Statement. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

Documents / Resources

	Shenzhen Shengong Created Technology SG3 Music Alarm Clock [pdf] User Manual SG3, 2A2QR-SG3, 2A2QRSG3, SG3 Music Alarm Clock, Music Alarm Clock, Alarm Clock, Clo ck
---	--