




Shenzhen Superstar Times Technology P-4 Wireless Controller Instruction Manual

[Home](#) » [Shenzhen Superstar Times Technology](#) » Shenzhen Superstar Times Technology P-4 Wireless Controller Instruction Manual 

Contents

- [1 Shenzhen Superstar Times Technology P-4 Wireless Controller](#)
- [2 Product Descriptions](#)
- [3 Product Parameters](#)
- [4 Product Button Introductions](#)
- [5 To Pair Connect](#)
- [6 Upgrade](#)
- [7 Common Problems And Solutions](#)
- [8 FCC Statement](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)



SHENZHEN

Shenzhen Superstar Times Technology P-4 Wireless Controller



Product Descriptions

- A wireless controller is compatible with PS4/PS4 Pro/PS4 Slim/PC (Windows 7/8.1/10).
- The PS4 controller adopts new wireless Bluetooth 5.0 transmission technology, can be easily and quickly paired.
- The PS4 controller supports a touchpad, 3.5mm earphone jack, Built-in LED light and speaker, so you can plug your headset to completely immerse yourself in a gaming world.
- Up to 4 PS4 controllers can be connected to a PS4 simultaneously, you could invite more friends and family to play the game together.
- We have equipped you with a Micro USB cable, switch controller built-in 1000mAh battery, which plays for 8-10 hours, fully charged for about 2~3 hours.

Product Parameters

- Battery: Lithium battery
- Battery capacity: 1000mAh
- Working current: 20-100mA
- Using time: 8-10H
- Charging current: <270mA
- Charge time: 2-4H
- Charging port: Micro USB
- USB length: 80 CM
- Charging method: USB DC 5V
- Bluetooth transmission distance: 10M

Product Button Introductions



- D-pad button *4: Up, Down, Left, Right
- Function button *8: x, AQ, , L1, L2, R1, R2
- Menu button – HOME
- SHARE”-SHARE
- “OPTIONS”- OPTIONS



Charging indicator white light*1, User-defined blue light*1 L3 Stick & R3 Stick: the new design 360° offs et joystick makes the game operate

To Pair Connect

Connect To PS4 Console:

- STEP 1: If the controller is connected to the current PS4 Console for the first time, you need to use a USB cable to connect to the PS4 Console.
- STEP 2: Press the”HOME” button for 3-4 seconds and the white LED indicators will flash quickly, then release the, HOMEw button and wait for pairing. The white indicator is always on, indicating a successful pairing.

Connect To PC:

Access one end of the USB cable to the Controller, access the other end of the USB cable to the Console, the controller can be used for wired operation on the PC.

User-defined buttons to restore the default:

- STEP1: Disconnect the controller and PS4 console.
- STEP 2: Put the controller on a flat table, Press the reset hole on the back to reconnect.
- STEP 3: you need to use a USB cable to connect to thePS4 Console, then press the “HOME” button. When the

blue light is on, the connection is successful After that, just press HOME to connect.

Upgrade

Low Voltage Indication:

when the battery voltage of the PS4 controller is lower than 3.6V, the indicator will flash; when it is lower than 3.4V, the PS4 controller will not be turned on.

Charging Indication:

Connect the USB cable to charge the PS4 controller, the indicator light turns yellow and flashes like a breathing light. If the controller is fully charged, the indicator light will go out.

Upgrade:

We promise to provide sustainable upgrade services for this controller; if the controller can not pair the newest version of the switch console, please go to our official website to get the newest upgrade firmware.

Warranties:

We guarantee a 30-day return and replacement if the product has any quality issues. All of our products are covered by a 1-year warranty and lifetime technical support. If you have any problems or questions when you use this controller; please feel free to contact our customer service.

Common Problems And Solutions

Problem	Reasons	Solutions

<p>Can't connect to PS4</p>	<p>May be that the console's cache is not enough so the controller can't be recognized</p>	<p>1. Need to clear the Bluetooth device in the console first 2. Access one end of the USB cable to the controller, access the other end of the USB cable to the console.</p> <p>First connect via USB cable to make the console remember the controller, and then unplug the cable for wireless connection.</p>
<p>Can't connect to PC</p>	<p>May the PC model is not compatible</p>	<p>This controller only supports PC with a wired connection Windows 7/8/8.1/10</p>

<p>Connect to the Console or PC does not show any response</p>	<p>Insufficient battery power so can't work</p>	<p>Please charge the controller for 1 hour before connecting.</p>
<p>Buzzing when head set is plugged in</p>	<p>The headset model does not match the controller</p>	<p>Please use National standard headphones to access the headphone jack, do not use American standard headphones.</p>

<p>The controller keeps shaking and cannot be stopped</p>	<p>Maybe use the controller vigorously</p>	<p>Just press the joystick down gently until hearing a boom, and the rocker is reset successfully.</p>
<p>The joystick is stuck</p>	<p>It may be an incorrect operation that caused the handle crash</p>	<p>Press the "Reset" button for 5-8 seconds, then restart the controller</p>

Access USB cable to the controller, the indicator light will not light up	The controller battery is full	when the controller battery is full, the light will be on once and go out if the battery is not full, the controller will charge and the indicator light will always be on.
Other questions or problems		The controller enjoys a 1-year warranty. Any quality problems within one year of purchase can be replaced with a new product for free. Please contact the email.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment

Documents / Resources

<div><p>P-4 WIRELESS CONTROLLER</p><p>Instruction Manual</p></div>	<p>Shenzhen Superstar Times Technology P-4 Wireless Controller [pdf] Instruction Manual X08, 2A5YM-X08, 2A5YMX08, P-4 Wireless Controller, P-4, Wireless Controller</p>
---	---