



Shenzhen Zerui Technology ZR486 Bluetooth Gamepad User Manual

[Home](#) » [Shenzhen Zerui Technology](#) » Shenzhen Zerui Technology ZR486 Bluetooth Gamepad User Manual 

Contents

- 1 Shenzhen Zerui Technology ZR486 Bluetooth Gamepad User Manual
 - 1.1 Operation Methods
 - 1.2 Troubleshooting
 - 1.3 Specifications
 - 1.4 Package Contents
 - 1.5 Button Instruction
 - 1.6 FCC statement
- 2 Documents / Resources
- 3 Related Posts

Shenzhen Zerui Technology ZR486 Bluetooth Gamepad User Manual



Operation Methods

Attention:

Be sure to recharge the batteries before use.


1. Method for 1st Time of Use & Connection

Turn the PS4 console on. Connect the console and the gamepad via the USB cable. The light on Part 3 will light up at this time.



Press the H Button (PS button). When the backlight on Part 3 keeps on, the connection is finished.



Set users and press  button to finish setting. Then unplug the USB cable and use the gamepad wirelessly.



Note: Please check whether the power of the gamepad is sufficient from your console before use. Recommend to charge the gamepad for 1 hour before use. After connected and used for a while, if the light on Part 3 flashes, you need to recharge the gamepad.

2. Method for 2nd Time of Use

Press the H Button (PS button). The connection is automatically finished when the backlight on Part 3 keeps on. When the console is normally turned off and the screen is sleep, the gamepad can be directly woken up and connected to the console directly after the console is powered on. If the connection fails, please check whether the console is turned on.



Note: During the pairing process of the gamepad and the PS4 console, please do not touch the sticks or buttons on the gamepad to avoid program errors.

After connected, if a certain button of the gamepad is disordered, does not work, delays or stutters, please keep the gamepad turned on and use a pin or a sharp object to stab the Reset Button in the upper left corner. Then follow the operation steps to reconnect.

Troubleshooting

1. Sudden crash or not working

A: Keep the gamepad turned on, use a pin or a sharp object to stab the Reset Button in the upper left corner.

2. Not compatible with the game

A: If the game is not from your PS4 console, this may be related to the game software or game settings. If the game is from your PS4 console, please contact us for solution.

3. Hear nothing from the earphone

A: First check whether the connected audio can be used on the PS4 console. Then try to turn on all audio output from the setting of the console.

4. Some buttons has no response

A: It's possibly caused by some game software or game settings.

If there are any other problems, please contact our after-sales service team and get solutions at the first time.

Specifications

Material: ABS

Battery: Polymer 600mAh

Input Voltage: 3.7-5V

Charging Time: 1 Hour

Using Time: 4 Hours

Control Range: 10 Meters (straight line, no obstacles)

Product Weight: 180g


Product Size: 165*11*55cm

Package Contents

- 1 * Gamepad
- 1 * Operation Instruction
- 1 * USB cable

Dear customer, thanks for purchasing this product. Please read the user manual carefully and keep it for future reference.

Button Instruction

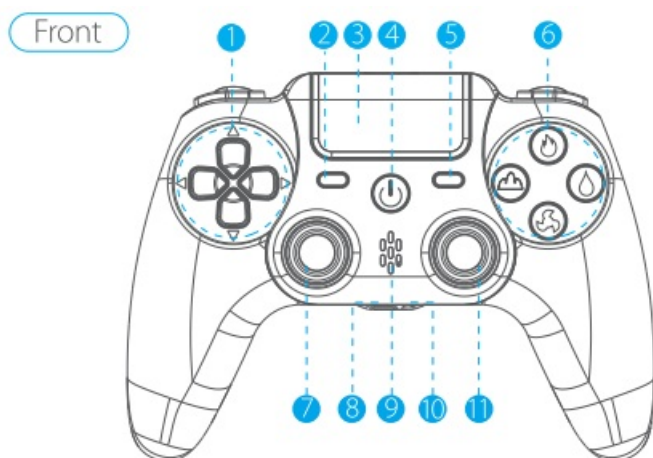

- 1. Directional buttons
- 2. SHARE button
- 3. Touch pad/Touch pad button


Press the touch pad to use the touch pad button

4. PS button
5. OPTIONS button
6. 🔥 button/ 💧 button/ 🌀 button/ 🏔️ button
7. Left stick/L3 button

Press the touch pad to use the touch pad button

8. Extension port
9. Speaker
10. Stereo headset jack
11. Right stick/R3 button

Press the touch pad to use the touch pad button

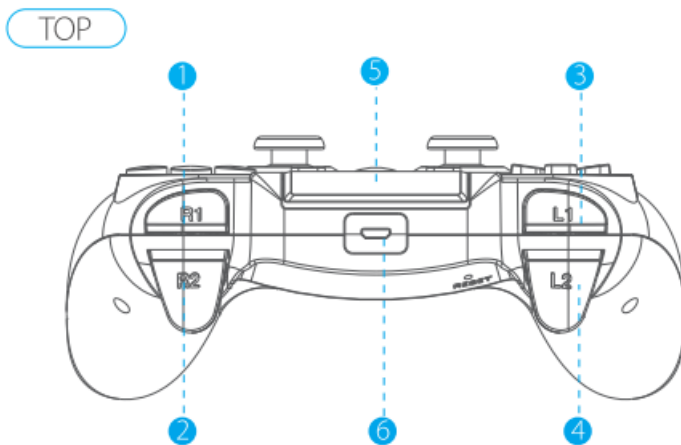

1. R1 button
2. R2 button
3. L1 button
4. L2 button
5. Light bar
6. USB port

The light bar on the touch pad does not glow on the CUH-ZCTI series.

Note: Commonly, the directional buttons and left stick control the direction; The right stick controls the view of user; Other buttons works correspondingly to their function. The actual function of the buttons may vary based on different games.

FCC statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

This device complies with RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device can be used in portable exposure condition without restriction.

Documents / Resources

	Shenzhen Zerui Technology ZR486 Bluetooth Gamepad [pdf] User Manual ZR486, 2A2FJ-ZR486, 2A2FJZR486, ZR486 Bluetooth Gamepad, Bluetooth Gamepad, Gamepad
---	--