




## Shenzhen A22, A23 Bluetooth Speaker User Manual

[Home](#) » [Shenzhen](#) » Shenzhen A22, A23 Bluetooth Speaker User Manual 

### Contents

- 1 Shenzhen A22, A23 Bluetooth Speaker
- 2 Audio manual
- 3 Packaging accessories:
- 4 Built in battery:
- 5 Charging function:
- 6 Paired connection:
- 7 Operation function
- 8 USING INSTRUCTION
- 9 Troubleshooting
- 10 Technical specifications
- 11 FCC Warning
- 12 Specifications
- 13 FAQs
  - 13.1 Q: How can I reset the Bluetooth pairing on the speaker?
  - 13.2 Q: What should I do if my speaker does not automatically reconnect?
- 14 Documents / Resources
  - 14.1 References
- 15 Related Posts

**Shenzhen A22, A23 Bluetooth Speaker**

**USER MANUAL**

**Audio manual**

Thank you for choosing our products. I hope you can enjoy the music tour Safety guidance:

Please read this manual carefully before use and keep it for future reference

1. Keep away from heat source, sun exposure and sharp objects
2. Keep away from open fire
3. Do not insert any metal object to avoid short circuit
4. Do not repair the product by yourself, but contact the authorized repair manufacturer
5. Avoid product rain and spray
6. If the product is overheated, damaged or falls into the liquid, please stop using it
7. Use the product according to the standard

### **Packaging accessories:**

1. Audio \* 1
2. TYPE-C charging cable \* 1
3. Product manual \* 1

### **Built in battery:**

1. It takes 2-3 hours to complete the charging and discharging cycle for the first use of the built-in rechargeable battery
2. Do not continue to charge the fully charged battery. Overcharging will shorten the battery life
3. If the battery is not fully loaded, it may lose a little
4. Product life will be shortened if the product is placed in an overheated or supercooled place


### **Charging function:**

1. Insert the TYPE-C charging wire to charge, and insert the other end into the DC 5V=1A charger
2. The LED charging indicator of the product is always on, and the red light means the audio is charged normally
3. When the product is fully charged, the red LED indicator is off

### **Paired connection:**

1. Open the Bluetooth speaker, press "M" button to hear the beep, enter the couplet mode, open, another speaker, press m button to hear the ding-dong sound after the couplet success
2. Press the "M" key of any speaker and disconnect the couplets
3. After the speaker is turned on, if the stereo has been paired and connected to the mobile phone or other devices

The audio will automatically connect back within the connection range

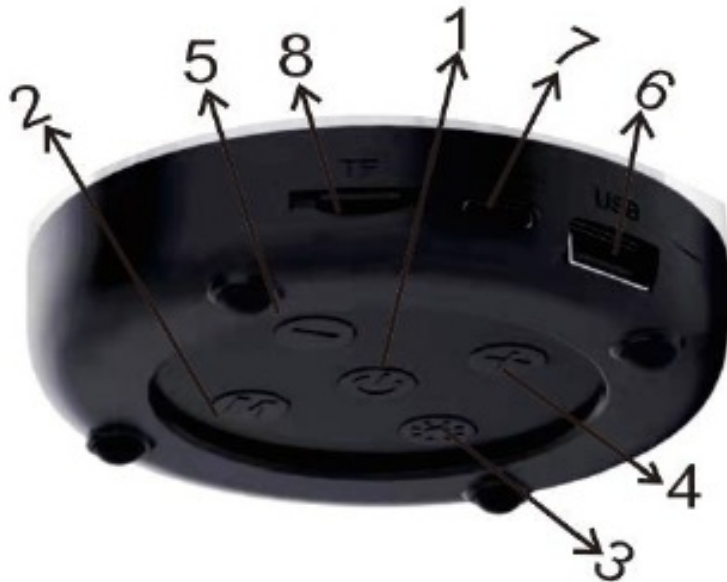

## Operation function

1. On/off/play/pause
2. Mode switching
3. Light adjustment
4. Next song/volume increase
5. Previous song/volume reduction
6. USB flash disk port
7. TYPE-C charging port
8. TF card port

## USING INSTRUCTION

01. Press and hold the 1 key to turn on/off. Short 1 key, play/pause
02. Short press key 2 to switch modes
03. Press 3 briefly to adjust the light
04. Press key 4 briefly for the next song, and press key 4 for a long time to increase the volume
05. Short press 5 key to last song, long press 5 key to decrease the volume
06. This peaker can be charged through the TYPE-C charging line. The red light is charging, and the full charge light is off
07. When the TF card is inserted in the power on state, the audio in the TF card will be played automatically
08. When the USB flash disk is inserted in the power on state, the audio in the USB flash disk will be played automatically

## Troubleshooting

Faultphenomenon	Possible causes	Solution
Unable to search Bluetooth	The battery is not powered off	Charge the audio
Unable to pair Bluetooth	The audio has been paired with another device and has not entered pairing mode	Close other paired devices to search again and pair

## Technical specifications

Bluetooth version	BT5.0
Pair Name	BTSPEAKER
Bluetooth receiving distance	Straight line accessibility 10m
Speaker	5205w
Battery	3.7V/500MAH
Charging voltage	DC 5V-1A
Charging duration	3H
FM radio band	87MHz-108MHz
Working hours	Maximum volume: 3H, minimum volume: 6H (Note: The time will vary depending on the type of mobile phone)

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable

exposure condition without restriction.

## Specifications

- Size: 132x105mm
  - Compliance: FCC Part 15
  - Bluetooth Connectivity
  - General RF Exposure Evaluation
- 

## FAQs

**Q: How can I reset the Bluetooth pairing on the speaker?**

A: To reset Bluetooth pairing, press and hold the “M” button for 10 seconds until you hear a beep, then follow the pairing instructions again.

**Q: What should I do if my speaker does not automatically reconnect?**

A: Ensure the speaker is within the connection range and try turning off and on the Bluetooth function on your paired device.

## Documents / Resources



[Shenzhen A22, A23 Bluetooth Speaker](#) [pdf] User Manual  
2BKPD-A22, 2BKPD A22, A22 A23 Bluetooth Speaker, A22 A23, Bluetooth Speaker, Speaker

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.