



Home » Shenzhen » Shenzhen DAJI10 Two Way Speaker User Manual 📆

## Contents [ hide ]

- 1 Shenzhen DAJI10 Two-Way Speaker
- 2 Product Introduction
- 3 Function Instructions
- 4 Specification Parameters
- 5 Precautions
- 6 FCC Warning
- 7 Documents / Resources
  - 7.1 References


# Shenzhen

**Shenzhen DAJI10 Two-Way Speaker** 



## **Product Introduction**

This product features multiple functions, supporting Bluetooth connectivity, AUX audio input, USB audio input, and TF card playback. It also comes with convenient operation buttons and clear audio prompts to provide you with a rich audio experience.

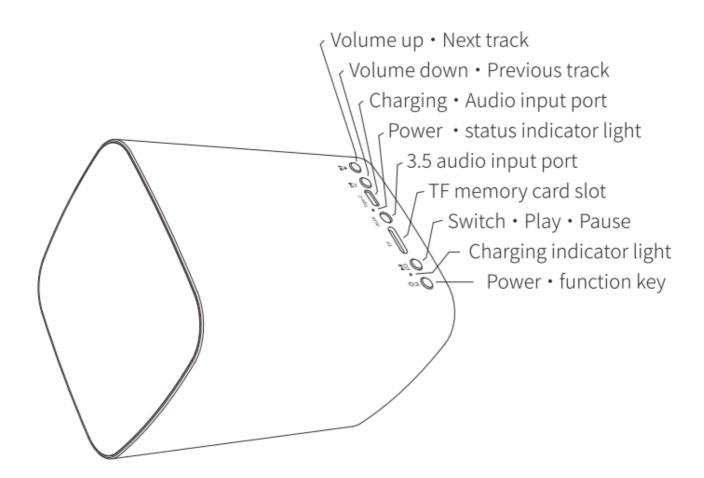

#### **Function Instructions**

## **Basic Operations**

- Bluetooth Name: DAJI 10
- Off state: Plug in the USB cable to the computer, long-press
- Power button to enter USB drive mode.
- Exit USB mode: Long-press the power button for 12 seconds.
- Power on: Long-press the power button.
- Light: Blue flash.
- Power off: Long-press the power button.
- · Light: Red flash until off
- Mode switch: Short-press the power button to cycle through
- Bluetooth (blue), AUX (green), TF card (yellow), USB speaker (cyan).

#### **Bluetooth Connection**

 Speaker Pairing: Double-click the power button, and the speaker enters the TWS pairing mode

- Voice Prompt: A "beep" sound indicates successful pairing
- Indicator Light Effect: The white light stays on
- Terminal Connection: Search for the Bluetooth name "DAJI 10" on your mobile phone or tablet and connect
- Voice Prompt: A "beep" sound indicates successful connection
- Indicator Light Effect: The blue light stays on
- To Re-pair with a New Terminal Device: Turn off the
- Bluetooth of the original mobile phone or tablet, and then
- The new device searches for the Bluetooth name "DAJI 10" and connects

## **Audio Playback Control**

- AUX Function: Connect to an audio source
- Play/Pause: Single-click the play/pause button
- Increase Volume: Short-press the volume-up button
- Decrease Volume: Short-press the volume-down button
- Previous Track: Long-press the volume-up button
- Next Track: Long-press the volume-down button
- EQ Switch: Press the EQ/play button twice in a row
- Voice Prompt: A "beep" sound (EQ1) or "beep beep" sound (EQ2)
- Disconnect the Connected Bluetooth: Long-press the play button

#### Charging

- TYPE-C Interface: Used for charging and audio source input
- During Charging: Insert the TYPE-C charging cable, and
- The charging indicator light (red light) stays on
- Fully Charged: After being fully charged, it enters sleep mode, and the indicator light goes out

# **Specification Parameters**

Audio Formats: APE, WAV, MP3, WMA, AAC, FLAC, SBC

Bluetooth Version: 5.3

Effective Distance: 10 meters

• Speakers: Full-range 40 15W, Tweeter 40 10W

• Output Power: ≥ 20w

• channel: 1.1

• Signal-to-Noise Ratio: 70 db

• Frequency Response Range: 80Hz - 20KHz

• Battery: 7.4V 2600mAh (18650)

• Playback Time: Approximately 18 hours of continuous playback at medium volume

• Dimensions: 110\*103\*134mm

Host Weight: 0.54kg

• Shell Material: Aluminium alloy

#### **Common Problems and Solutions**

Fault	Solution
No power, and the power indicator light does not light up	<ul><li>(1) Check if the switch is turned on.</li><li>(2) Check if the battery has power.</li></ul>
No sound during music playback	<ul><li>(1) Check if the device is in the music playback mode.</li><li>(2) Check if the song is in a supported format.</li><li>(3) Check if the speaker is in the pause or mute state.</li></ul>
Bluetooth cannot be detected	<ul> <li>(1) Check if the device is in the Bluetooth mode.</li> <li>(2) Check if the operation is in accordance with the Bluetooth operation instructions.</li> <li>(3) Check if the distance between devices is too large.</li> <li>(4) Check if there are too many obstacles between devices.</li> </ul>
No sound in USB speaker mode	(1) Check if the USB data cable is properly connected.

## **Precautions**

- Please ensure that the speaker is fully charged before use to guarantee the best user experience.
- When re-pairing with a new terminal device, make sure the Bluetooth of the original

device is turned off to avoid connection conflicts.

- When not in use for a long time, turn off the speaker and
- Unplug the charging cable to extend the battery life.
- Do not use the speaker in a humid or high-temperature environment to prevent damage to the device.
- If you encounter any problems, please contact the after-sales service promptly.
- We hope this manual can help you use the two-way Speak Better and enjoy a wonderful music experience!

#### **Bluetooth Speaker Warranty Certificate**

• User Information (to be filled in by the customer):——.
• Name:——.
Contact Phone Number:
• Postcode:——.
• Address:——-
Purchase Date: year month.
• To be filled in by the salesperson: _ day———.
Sales Information: Selling Unit (with official seal)———.
Contact Phone Number: _—
• Address: Nearest Service Guidance (the first contact point for the customer):
<del></del> .
Service Unit Name:
Phone Number: ———.
• Address:——.
• Contact—.

## **DAJI 10 Bluetooth Speaker Warranty Terms**

- 1. For matters related to sales services, please contact the distribution unit. If there is a quality problem during normal use, you can exchange it for the same model of our company's products free of charge within 7 days from
- 2. The date of purchase. Within one year, you can enjoy the warranty service with this card and the sales invoice, but
- 3. The product's appearance and packaging will not be replaced.

4. The purchase time is subject to the invoice or receipt issued by the dealer.

The replacement and warranty are invalid in the following cases, but paid maintenance services are provided:

- All damages caused by human factors, such as use in an abnormal working environment or damage caused by not following the instructions.
- Repairs or modifications made by the customer himself/herself, or repairs by units not authorised by our company.

Damages caused by poor transportation after purchase.

- 1. Our company's products are eligible for replacement/warranty with the warranty card.
- 2. When service is required, please provide the purchase invoice or receipt.

Our company will not be responsible for any losses caused by the following abnormal use situations:

Safety hazards or accidents caused by accidents or Incorrect user operations.

- Safety hazards or accidents caused by force majeure factors.
- Damage to third-party accessories, accidents, or personal injuries caused by consumers not operating by the instructions or using consumables materials other than those required in the instructions.
- Wherever you purchase this product, you can get the same excellent service at the nearest after-sales service centre. If the problem is not properly resolved, please call or write to our company's customer service department.
- Our company reserves the right to modify and interpret the above terms.

lr	ารเ	pe	cti	on	Cer	tifi	cate
••	IJ	Pυ	CLI		CCI		Cutc

Inspector:

Date:

# **FCC Warning**

This equipment has been tested and found to comply with the limits for a Class B digital

device,. Under part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used according to the instructions, maycause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0cm between the radiator and your body.

# **Documents / Resources**



## Shenzhen DAJI10 Two Way Speaker [pdf] User Manual

2BOWA-DAJI10, 2BOWADAJI10, daji10, DAJI10 Two Way Speaker, DAJI 10, Two Way Speaker, Speaker

#### References

- User Manual
  - 3 2BOWA-DAJI10, 2BOWADAJI10, daji10, DAJI10 Two Way Speaker, Shenzhen, speaker, Two-Way
- Shenzhen Speaker
  - —Previous Post

Shenzhen A4 1.24 R/C Drift Returns Car Instruction Manual

Next Post—

**Shenzhen BS-05 Bluetooth Speaker Owner's Manual** 

## Leave a comment

our email address will not be published. Required fields are marked*								
mment *								
me								
nail								
ebsite								

☐ Save my name, email, and website in this browser for the next time I comment.

# **Post Comment**

#### Search:

e.g. whirlpool wrf535swhz

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.