


Contents [[hide](#)]

- [1 Shenzhen SDR376 LCD Display](#)
- [2 Network Setup](#)
- [3 Bluetooth Setup](#)
- [4 Display Settings](#)
- [5 Sound Settings](#)
- [6 Languages and Input Methods](#)
- [7 Date and Time](#)
- [8 Backup & Reset](#)
- [9 Software Uninstallation & Installation](#)
- [10 Files in removable storage](#)
- [11 FCC Warning](#)
- [12 Frequently Asked Questions](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)

Shenzhen

Shenzhen SDR376 LCD Display

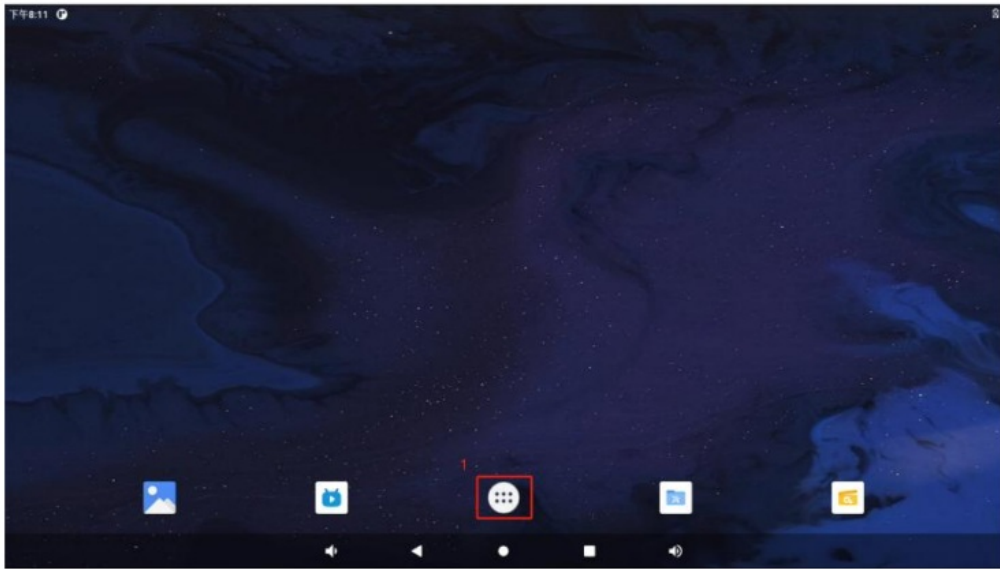

Specifications


- Operating System: Android
- Network Connectivity: Ethernet, Wi-Fi, Bluetooth
- Display: LVDS (VBO), EDP
- Sound: Adjustable settings
- Languages: Multilingual support
- Date and Time: Manual setup available
- Software Management: Uninstallation and Installation via APK files
- File Management: Removable storage support

Network Setup


Network link method Ethernet has the highest priority, wifi has the second highest priority, 1-1 . WIFI network link

1. wifi link


Tap the [HOME] button after entering the system to enter the secondary interface

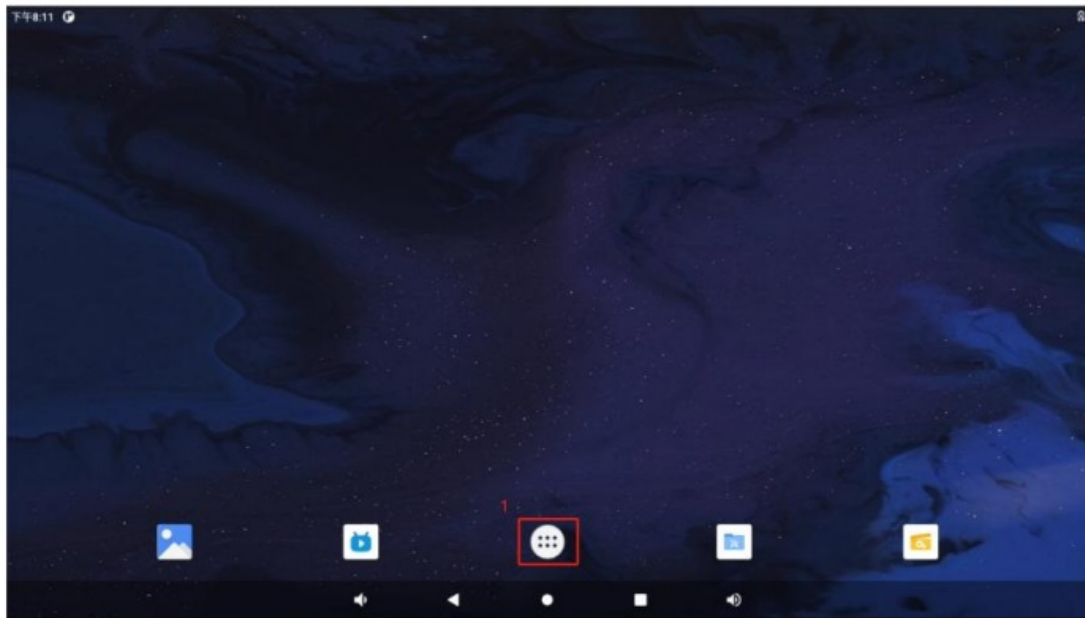

- Click [Settings] to enter the settings interface

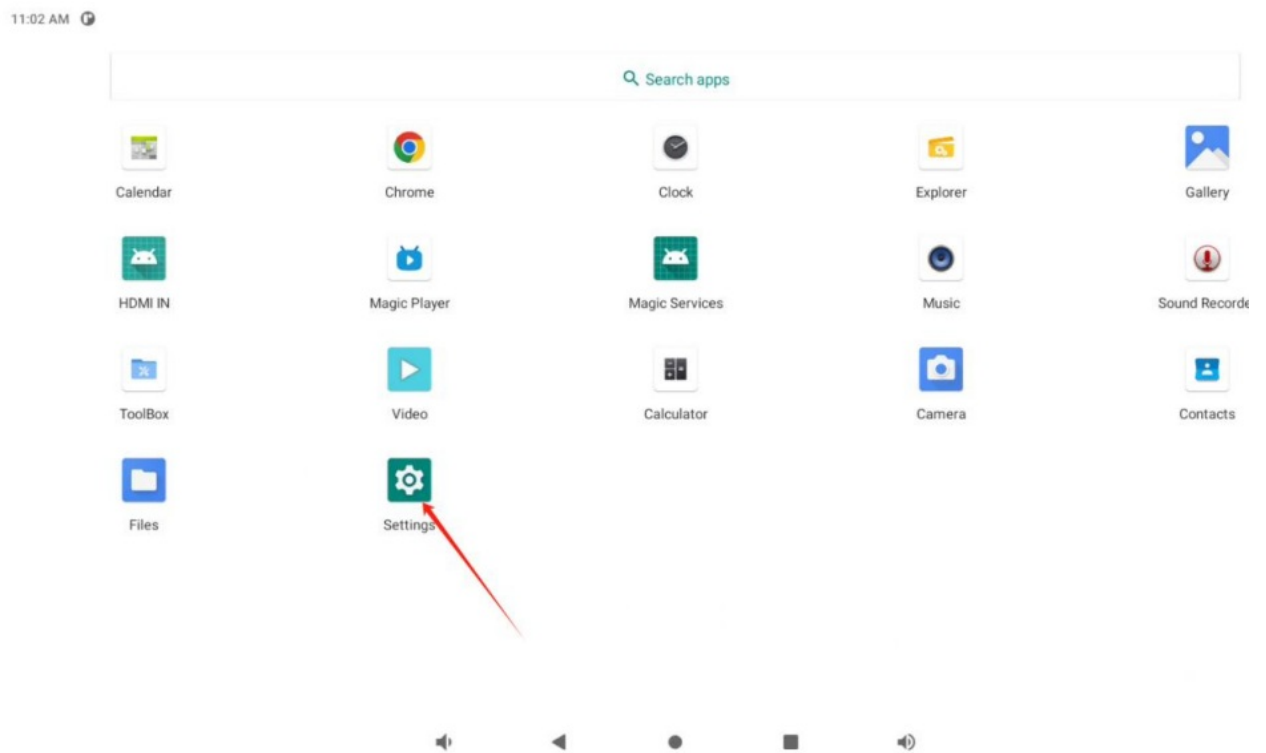



- Turn on the WIFI.

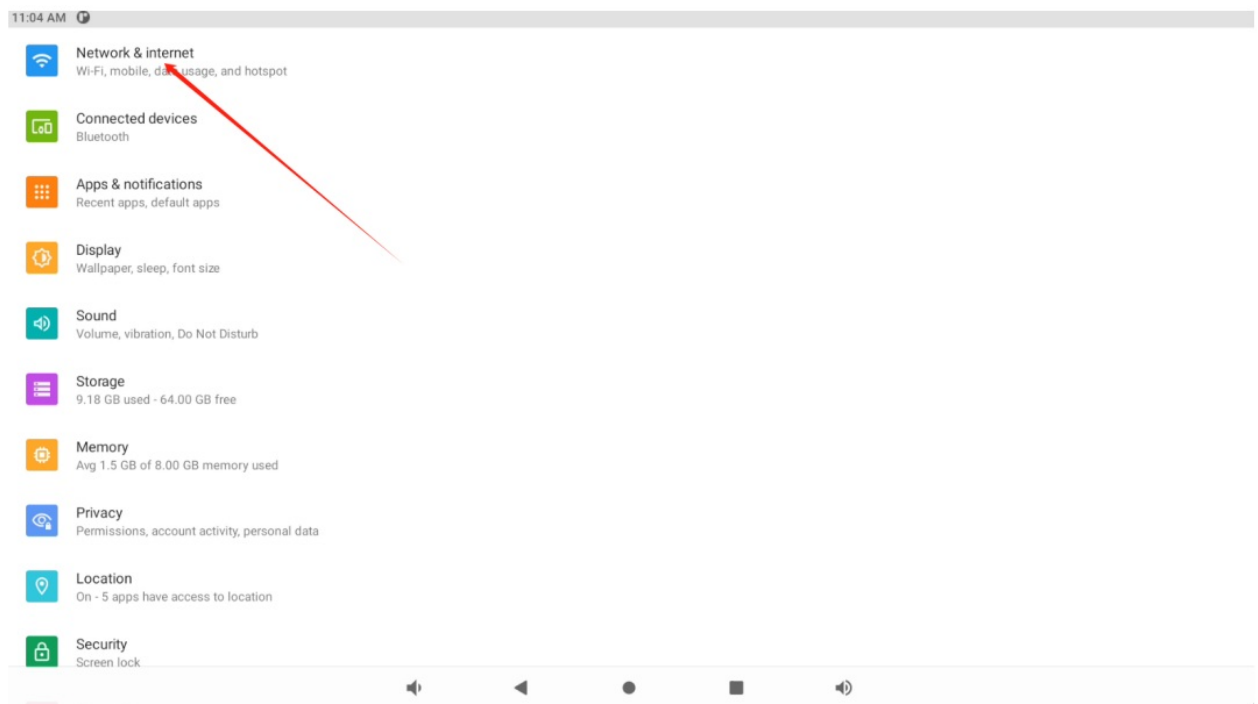

- Once open, click on the name of the WIFI you want to link to


2.

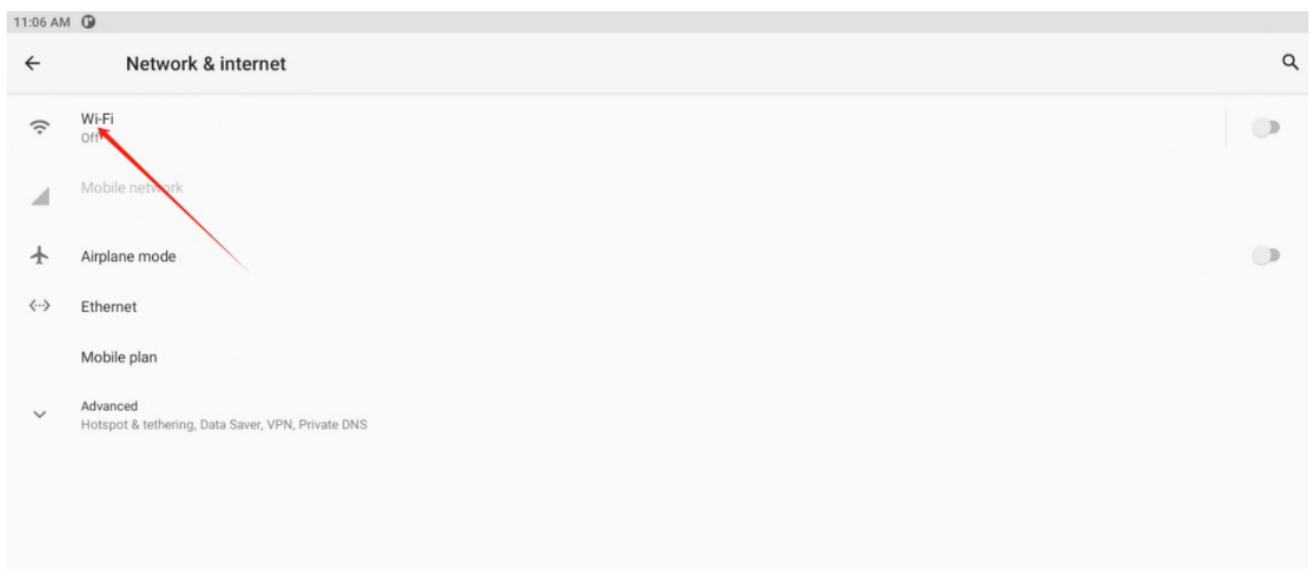

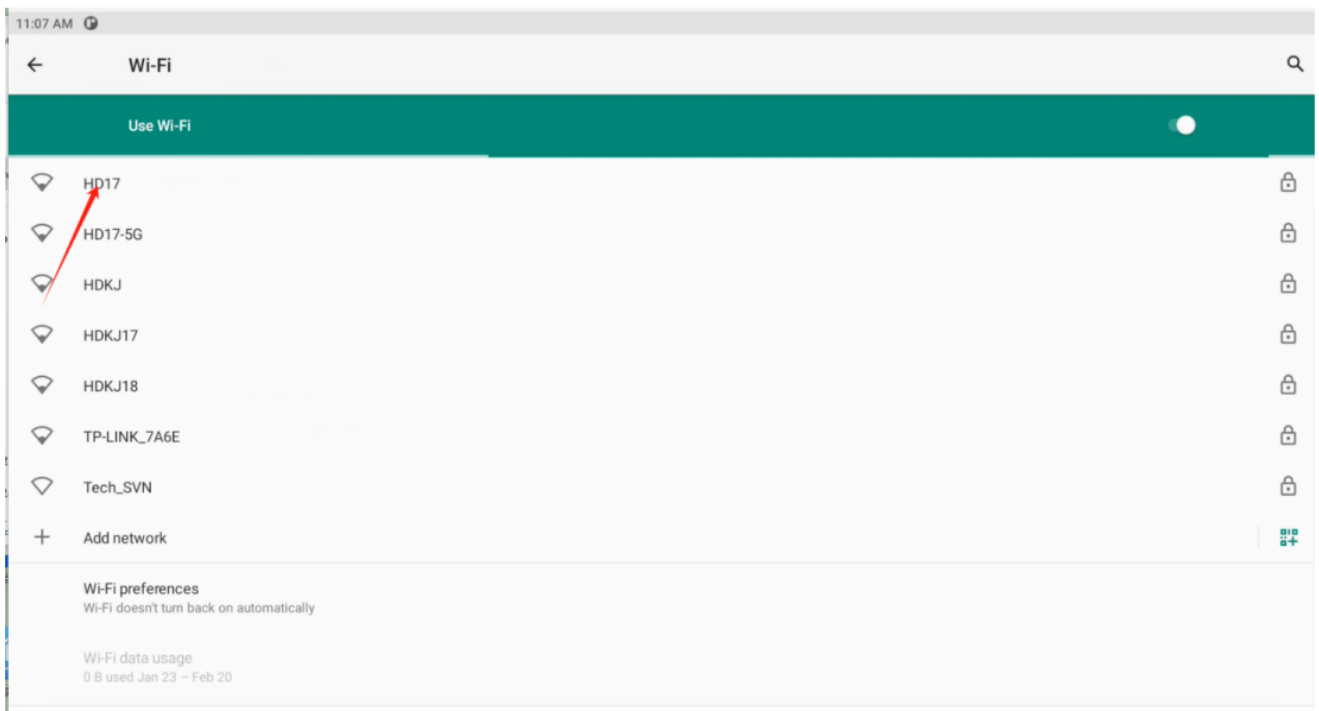


- If you need to set the static IP of WIFI, i.e. check “Advanced Options” and select Static for IP setting.

3.

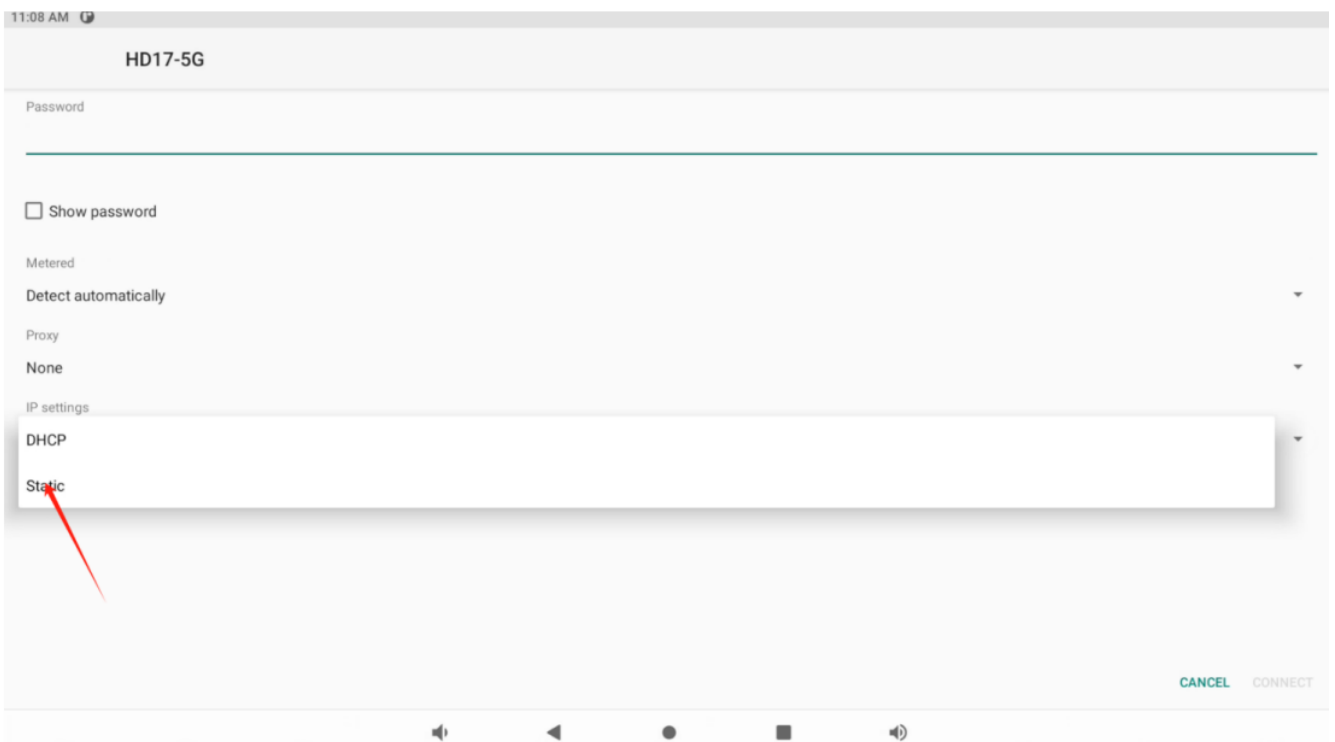


WIFI Status View

Click on the Settings icon on the right after linking to WIFI

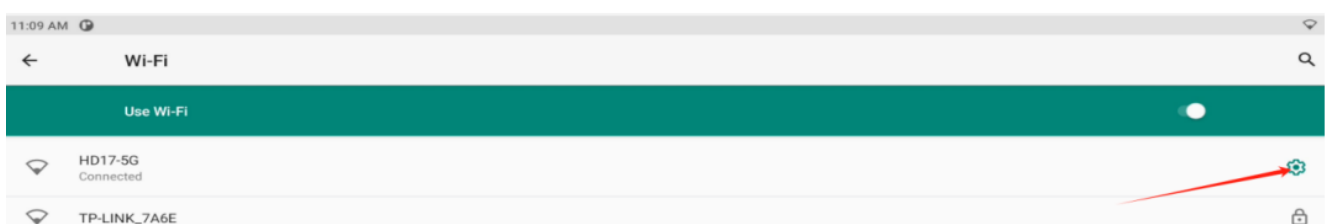


After entering, click “Advanced” to view the MAC address and IP of WIFI.

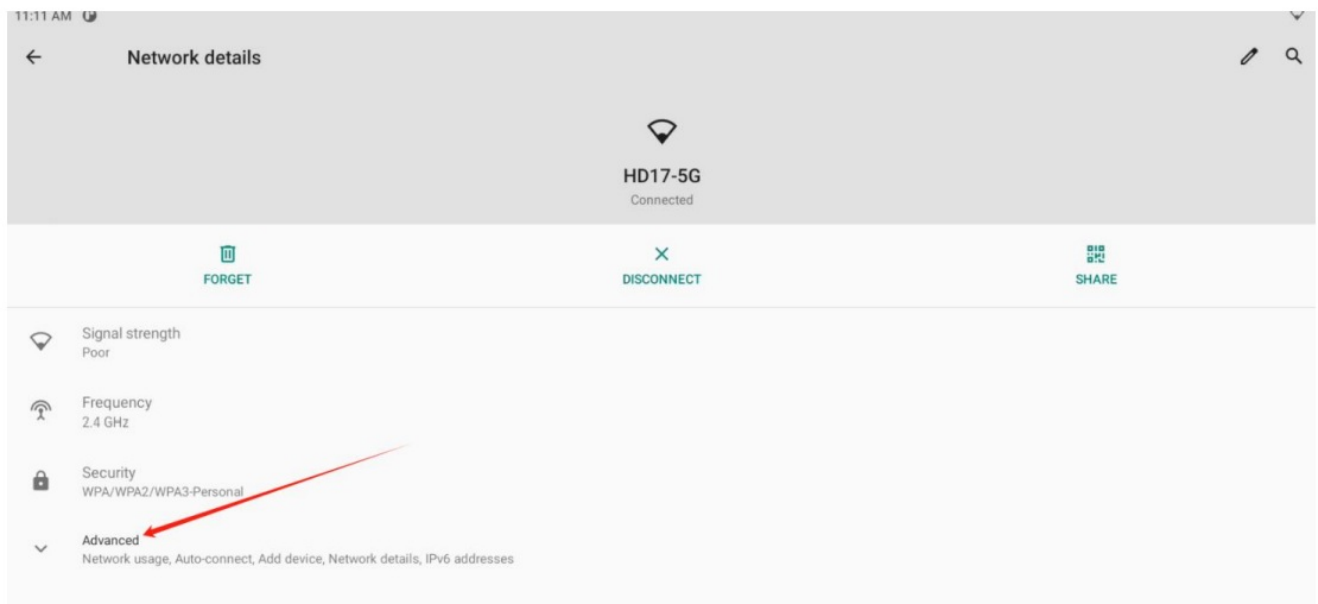


Ethernet network link

1. Link Ethernet

Insert the cable into the Ethernet port, the system will be automatically linked to the network, no need to do any operation, click [Ethernet], you can see the status of the Ethernet, MAC address, IP address, physical address

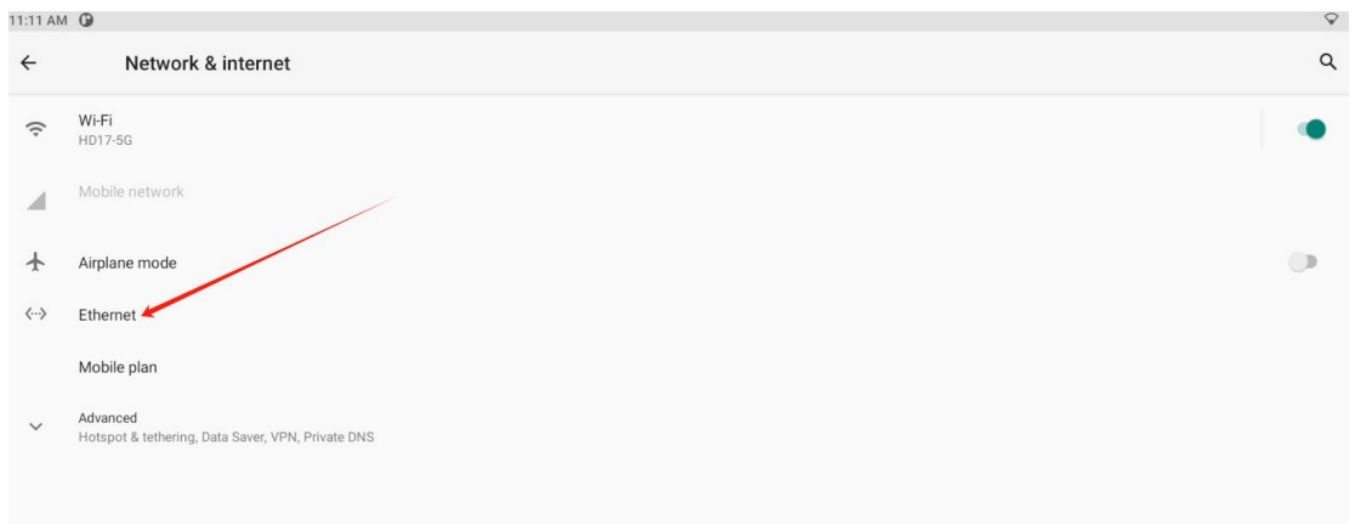


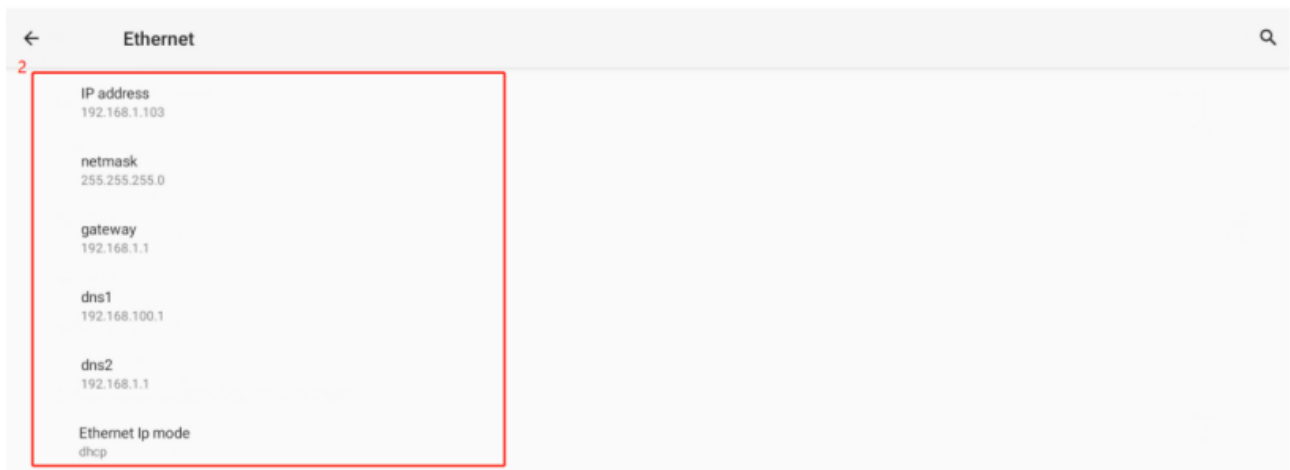


Click [Ethernet mode Ethernet ip mode], you can set the Ethernet mode, including static DHCP, dynamic STATIC

Bluetooth Setup


Click [Settings] – [Connected Devices] to make settings

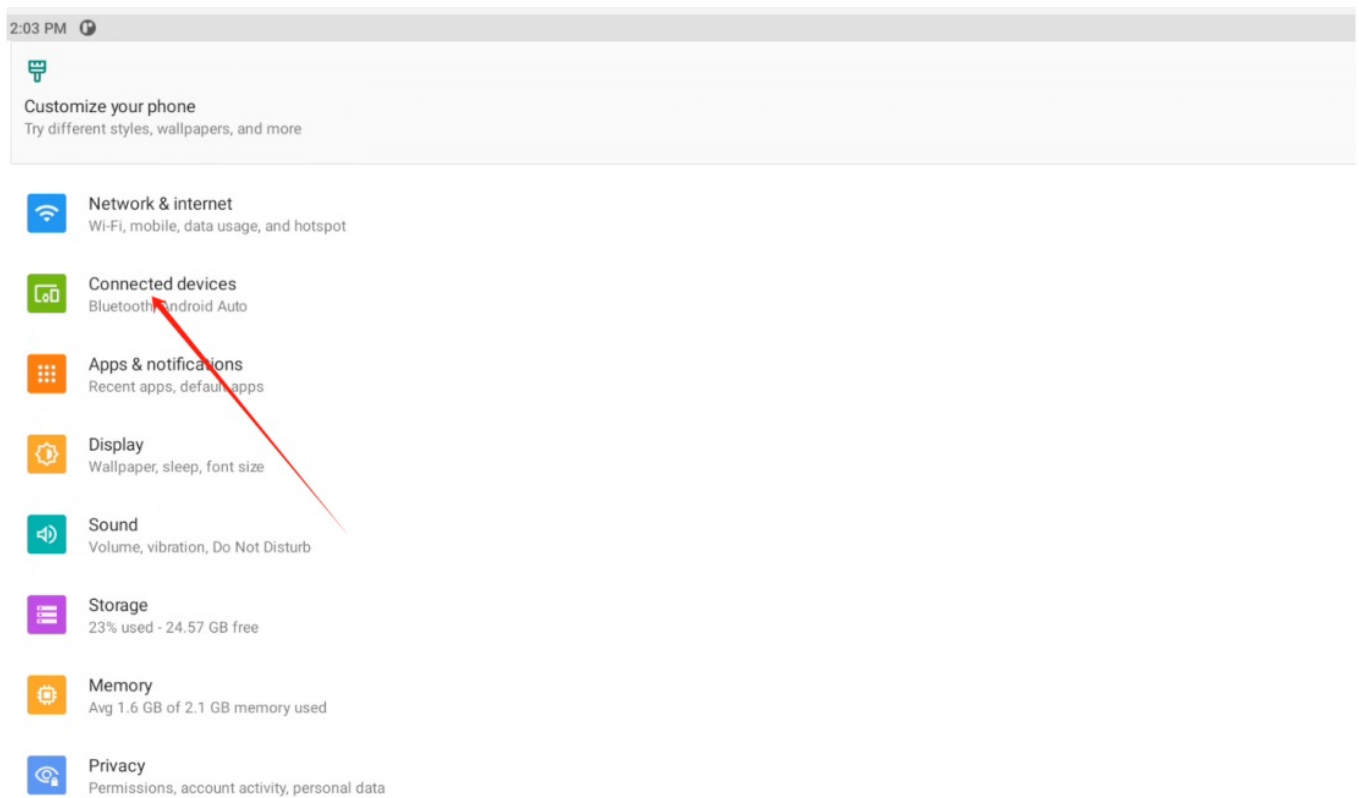

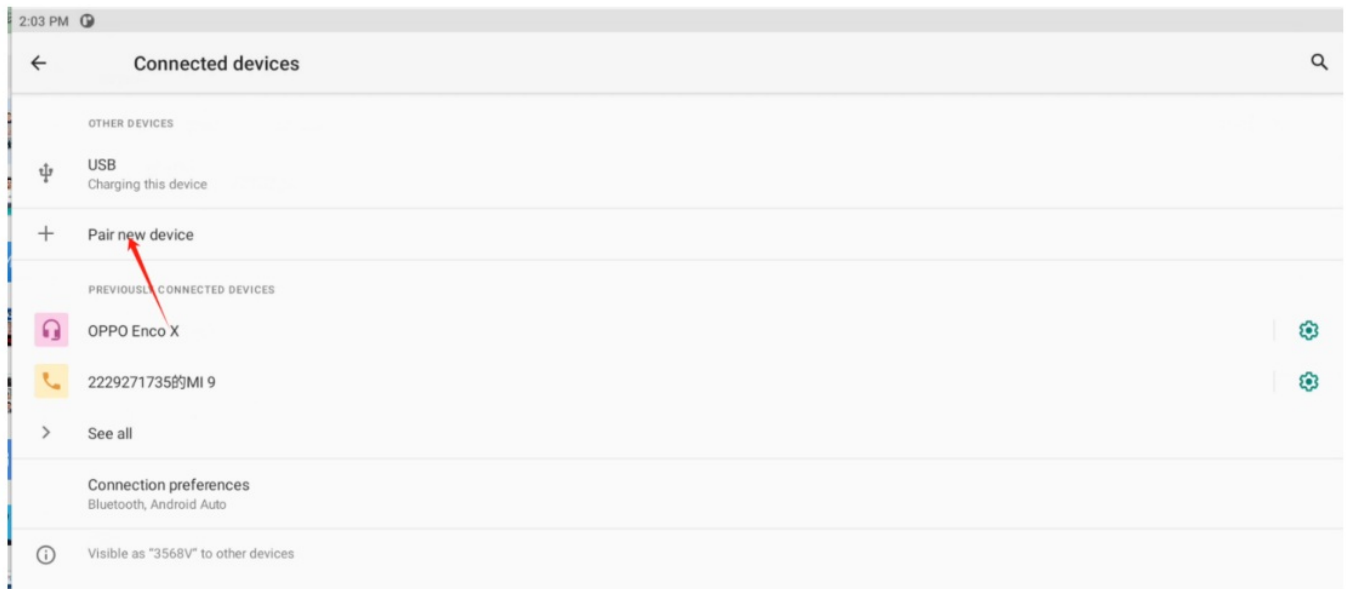


Display Settings

Click on [Settings] – [Display] to set up

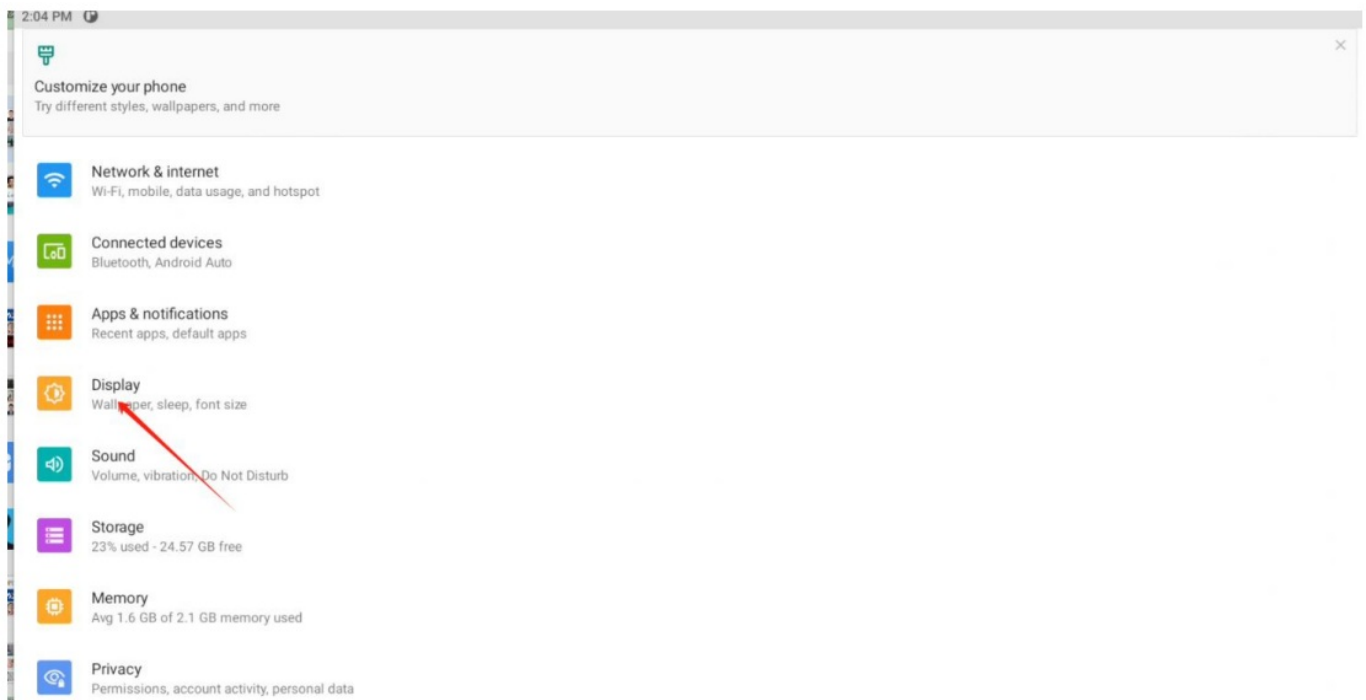


Adjustable LVDS (VBO), EDP screen brightness

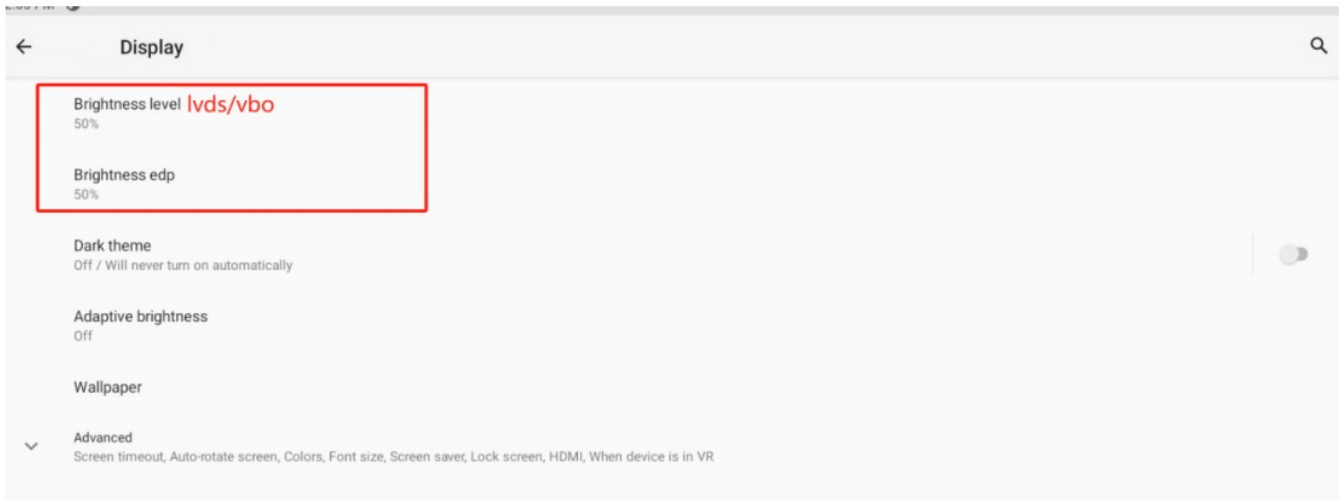


Sound Settings

Click [Settings] – [Sound] to set the sound.

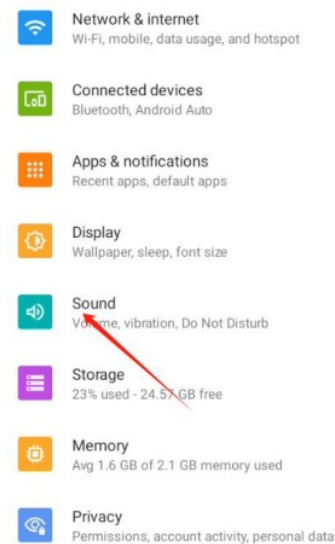


Languages and Input Methods

Click [Settings] – [System] – [Language and Input Method] settings to set the language and input method

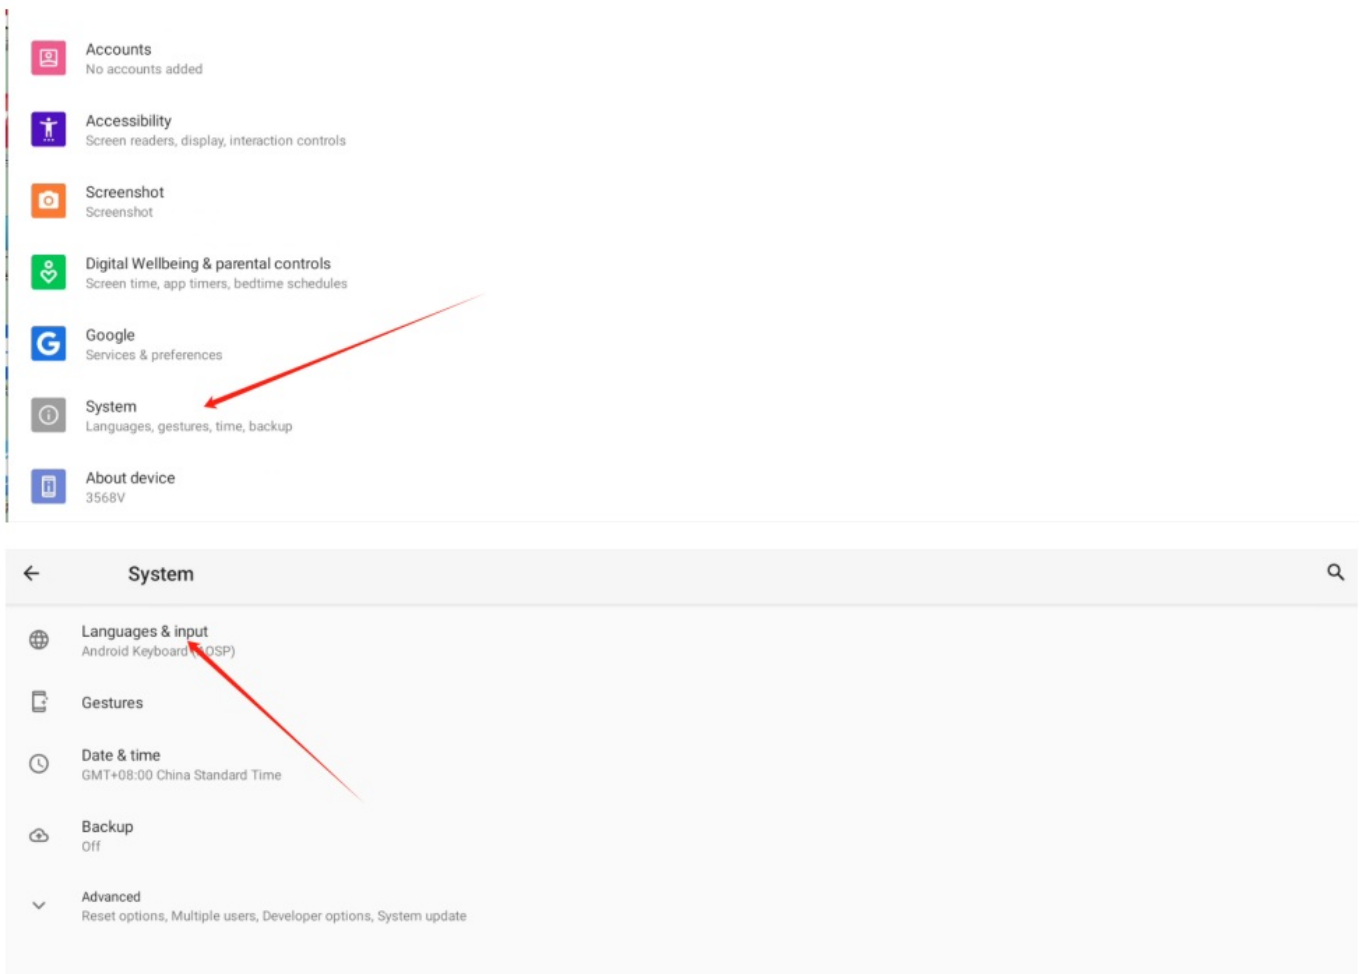


Input Method Setting

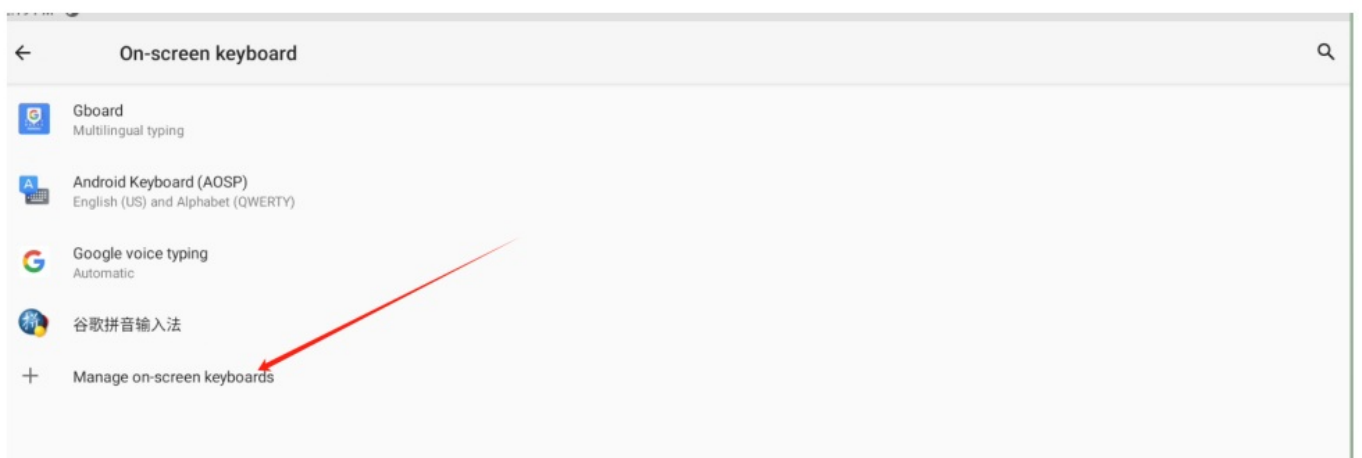



Date and Time

Click [Settings] – [System] – [Date and Time]

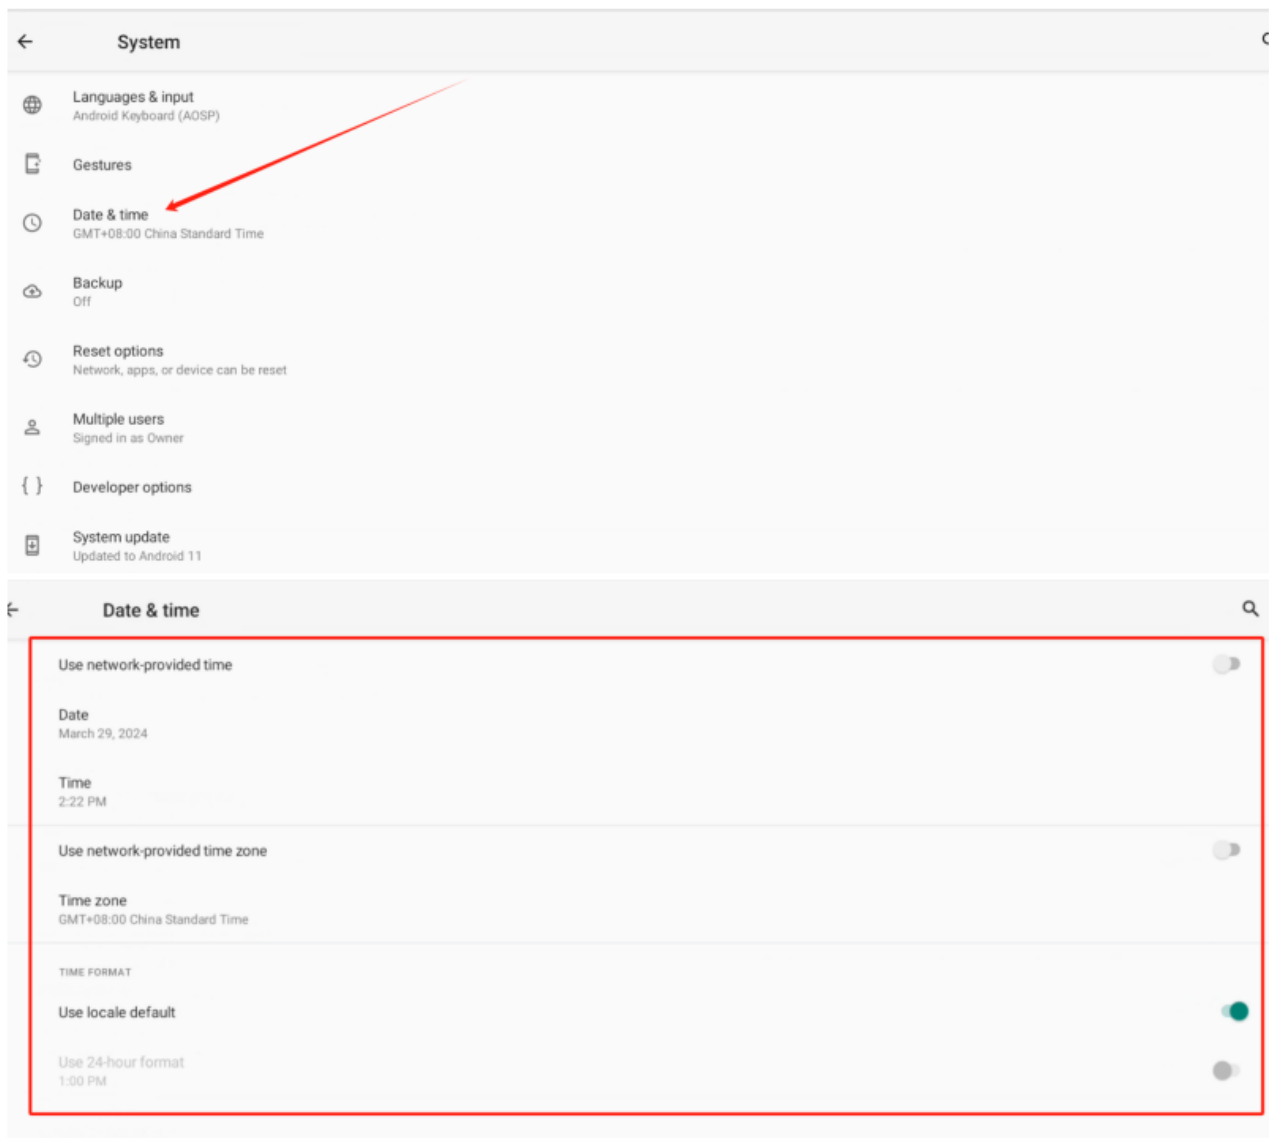


Backup & Reset

Click [System] – [Advanced] – [Reset Options]

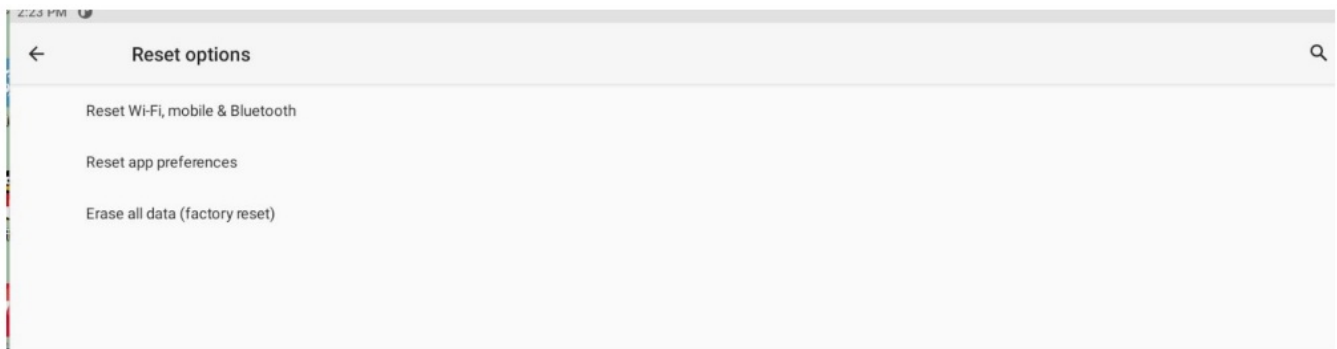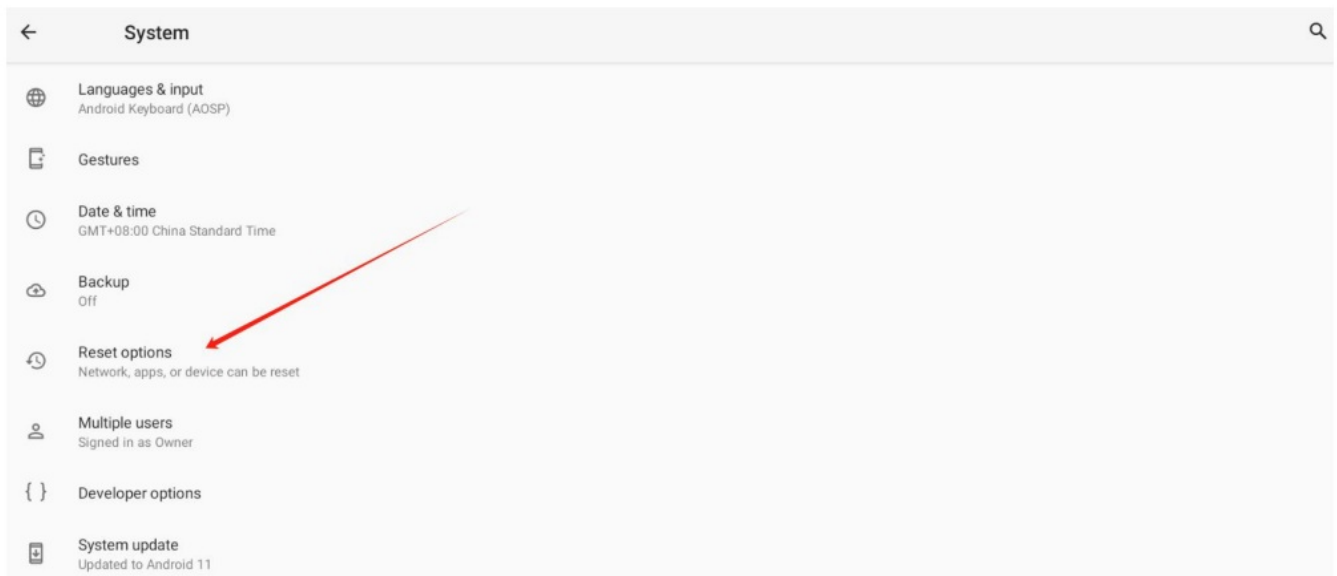

Check system status (motherboard model, firmware version, Android version, resolution, etc.)


Click on [Settings] – [About Tablet]

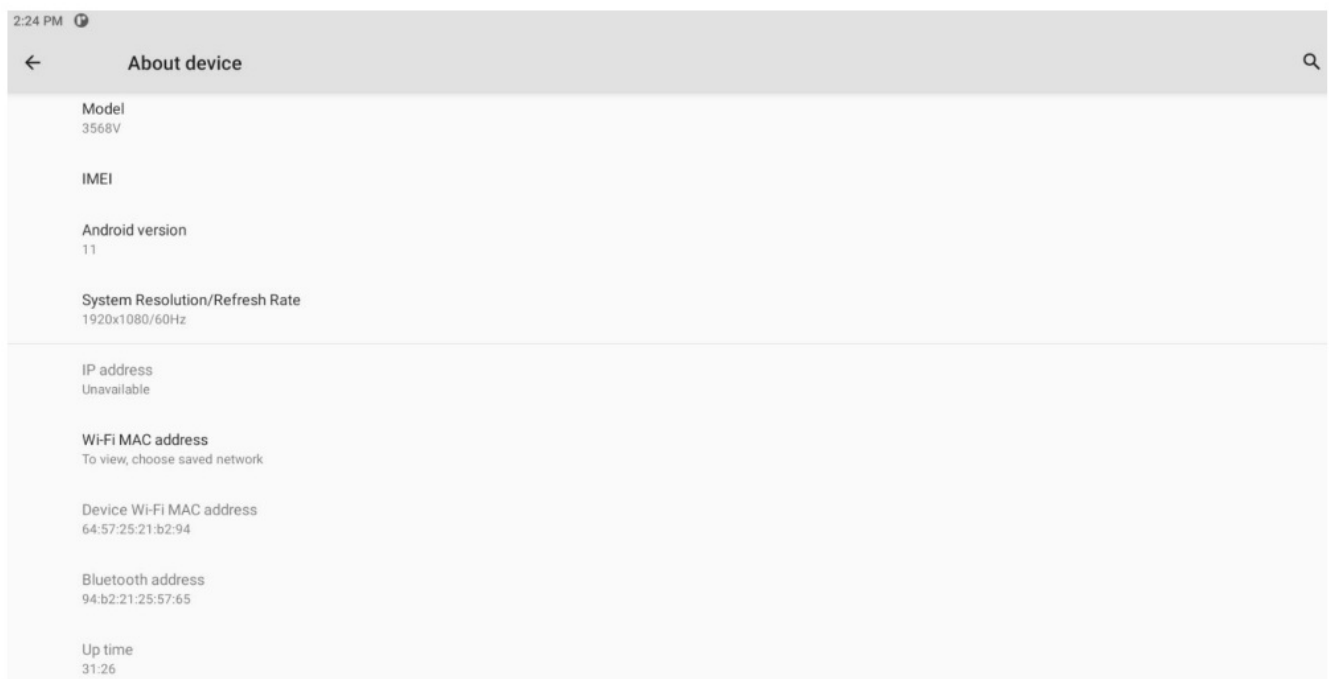

Software Uninstallation & Installation


1. Unloading

The left mouse button longan or touch the finger longan need to uninstall the program, and then drag to the location of the [remove] can be

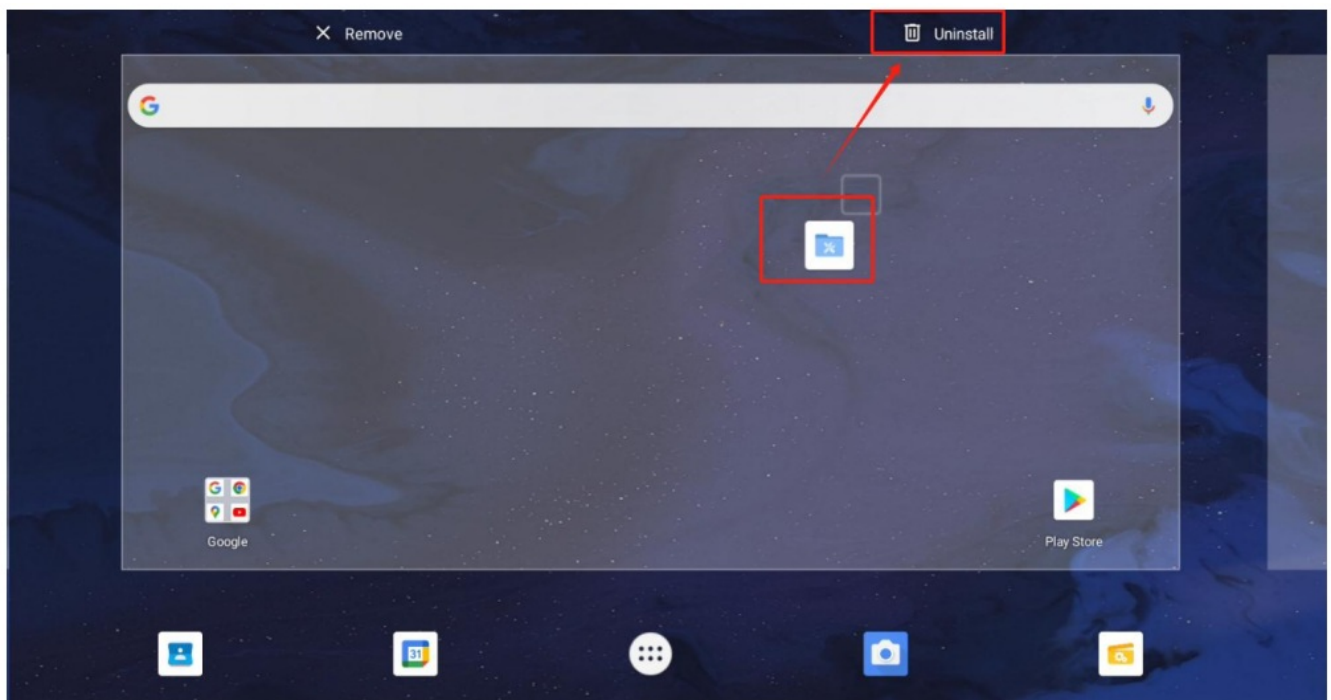

2. Installation

Click [Explorer], select the file with APK extension to install.

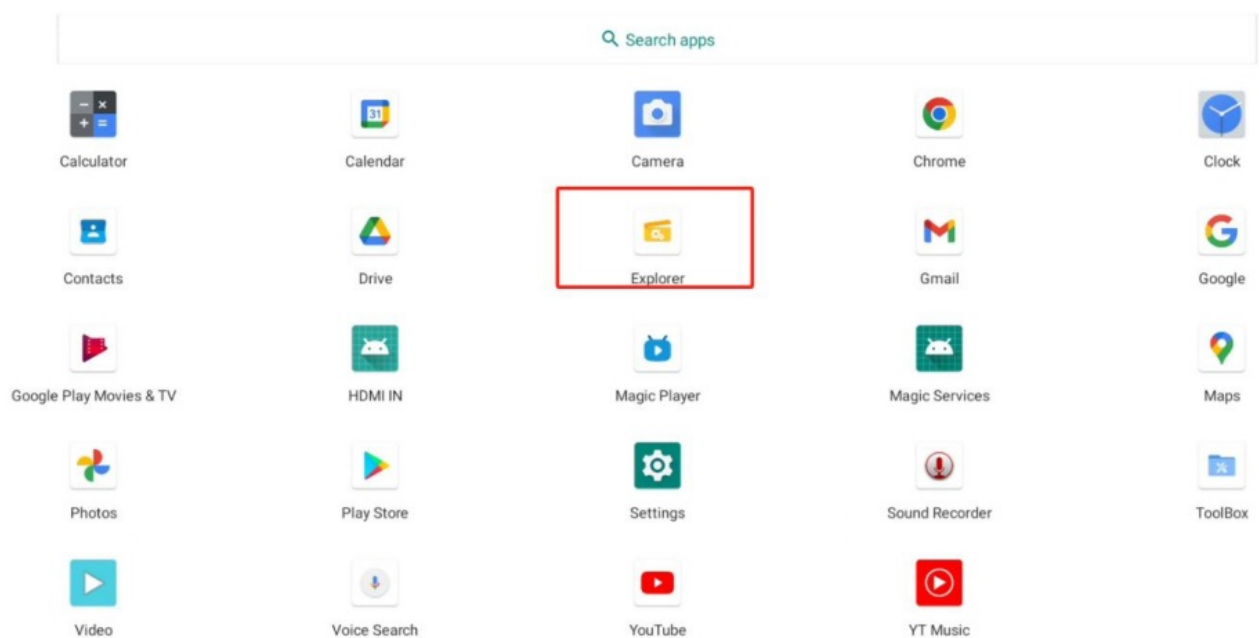

1 (3).apk	1.42 M 2023-03-24 10:25:32 -rw
AA084SA01_20080124_201209057390.pdf	1.03 M 2023-03-02 15:06:22 -rw
B2BF1E2F4D7FF97D53AE0286B8AAFFFC(1).apk	128.68 M 2023-03-21 10:02:16 -rw
com.ss.android.ugc.aweme_240901.apk	179.02 M 2023-04-10 12:35:52 -rw
com.yida.dailynews.gl.apk	118.33 M 2023-04-04 11:27:08 -rw
DriverAssitant_v5.12.zip	9.36 M 2022-11-02 14:42:26 -rw
fastboot_adb_2022.zip	65.83 M 2023-01-31 14:27:38 -rw
G150XVN01.1_Ver1.0_20150224_201508054771(1).pdf	1005.20 K 2023-03-02 15:46:06 -rw

Files in removable storage

Click [Explorer] and see the following interface

Internal Memory	内部存储
SD Card	外部SD卡
USB	外部USB存储


If you want to move a file, click [Multi-Select], select the file to be moved, the file name of the selected file will turn yellow, and then click [Edit].

Internal Memory	
Home	LevelUp
Multi	Editor
NewFolder	Back
Next	
Alarms	2024-03-20 16:56:22 drw
Android	2024-03-20 16:56:17 drw
Audiobooks	2024-03-20 16:56:23 drw
DCIM	2024-03-20 16:56:23 drw
Documents	2024-03-20 16:56:23 drw
Download	2024-03-20 16:56:22 drw
MagicPlayer	2024-03-28 18:19:15 drw
Movies	2024-03-20 16:56:23 drw

Click [Edit] after the pop-up dialog box, click [Move], and then move the selected file to the specified location



Let's take copy as an example, after clicking Copy, then find the target folder we need to copy to, open the folder (we select the DCIM folder here), right-click the pop-up dialog box, select [Paste], you can complete the copy.

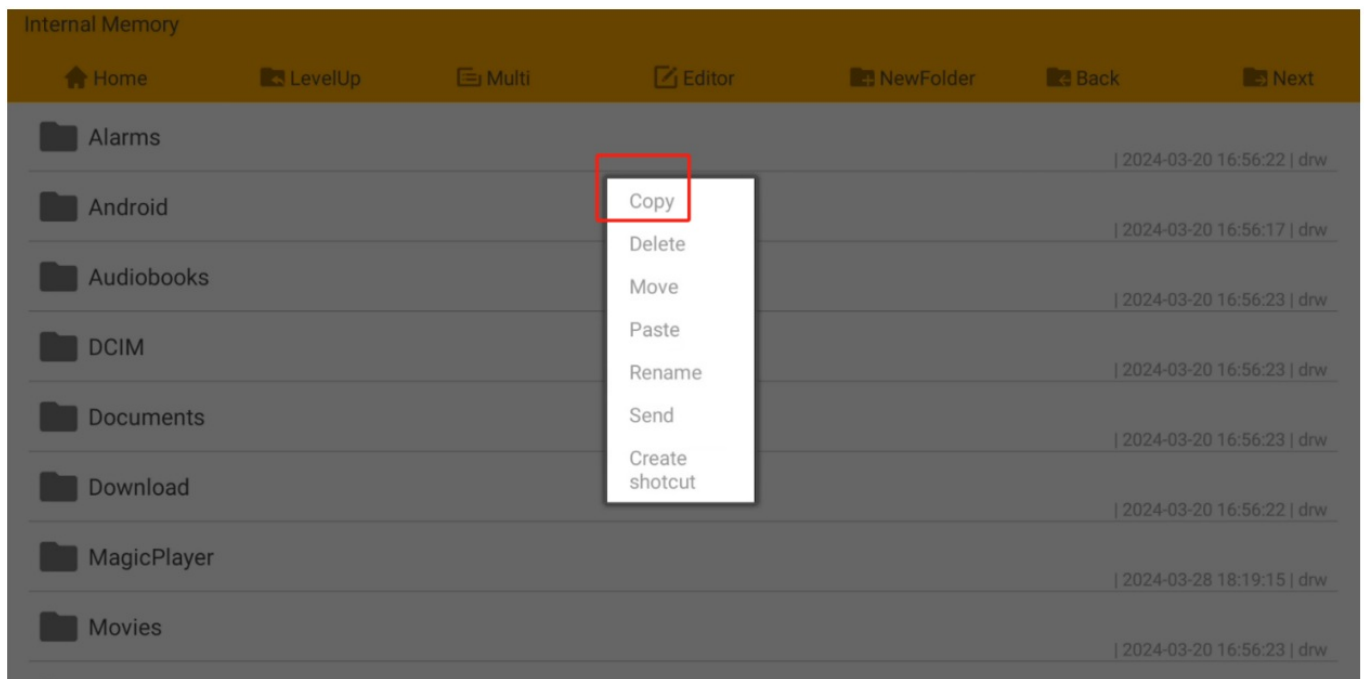

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and

2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Frequently Asked Questions

- **Q: Can I set a static IP for WIFI?**

A: Yes, you can set a static IP for WIFI by checking Advanced Options and selecting Static for IP setting.

Documents / Resources



[Shenzhen SDR376 LCD Display \[pdf\]](#) User Guide

2BP4L-SDR376, 2BP4LSDR376, SDR376 LCD Display, SDR376, LCD Display, Display

References

- [User Manual](#)

📁 2BP4L-SDR376, 2BP4LSDR376, Display, LCD Display, SDR376, SDR376 LCD Display,

📁 Shenzhen Shenzhen

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.