



ShenZhen TP5-35137 Wireless Game Controller User Manual

[Home](#) » [Shenzhen](#) » ShenZhen TP5-35137 Wireless Game Controller User Manual 



SHENZHEN

User Manual

Product No.: TP5-35137

Version Number: A.1

WIRELESS GAME CONTROLLER


Contents

- 1 Product overview:
- 2 Product Diagram:
- 3 Product features:
- 4 Functionality Chart:
- 5 User Instructions:
- 6 Macro Definition Functionality:
- 7 TURBO Function Settings:
- 8 Product Maintenance and Precautions:
- 9 Documents / Resources
 - 9.1 References

Product overview:

This product is a game controller suitable for the P-5 console, compatible with certain PC systems, and supports any game version on the P-5 console.

Product Diagram:

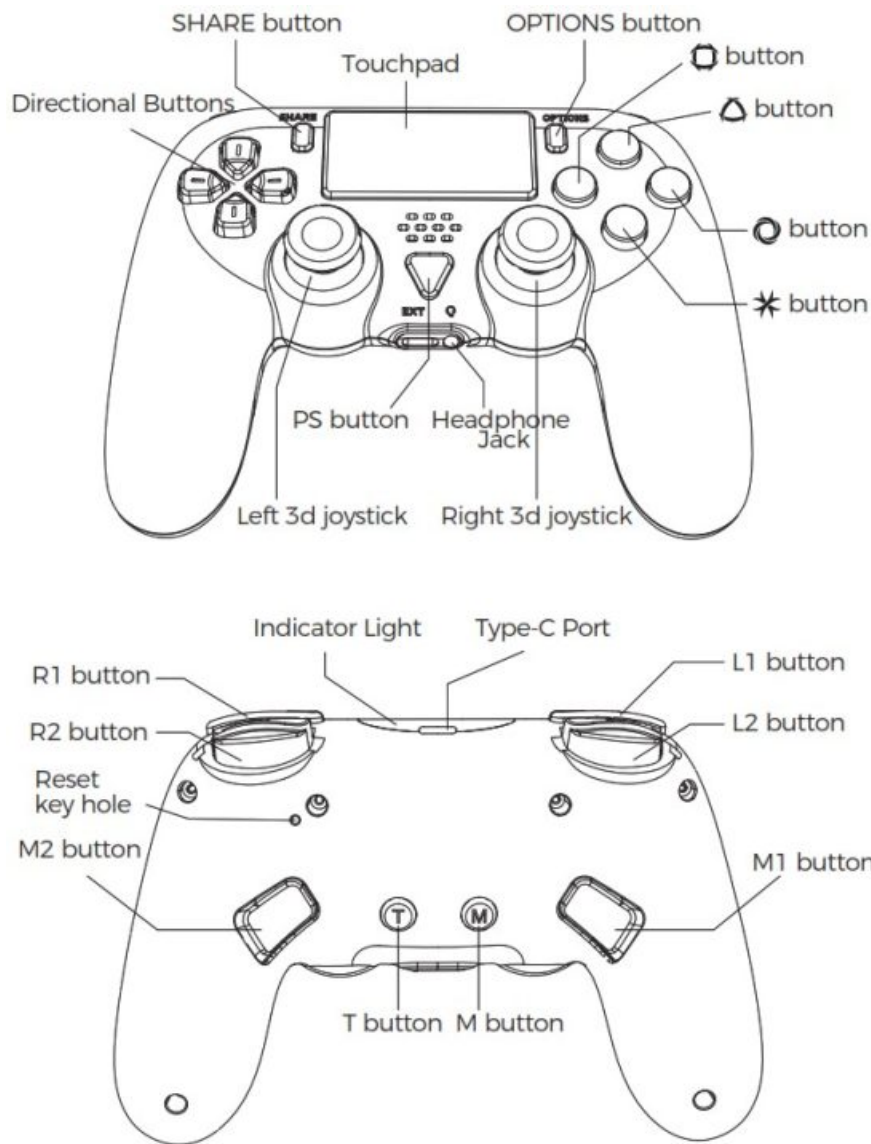

Product features:

1. Supports Asymmetric Dual Motor Vibration: Provides enhanced tactile feedback for a more immersive gaming experience.
2. Connection Options: Supports wireless/wired connections for P-5 console and PC systems
3. Built-in Speaker and 3.5mm Headphone Jack: The built-in speaker accurately reproduces various sounds from the game environment. The 3.5mm headphone jack allows for online chatting with friends (**Note:** The speaker and headphone/microphone only work in wired mode with a headset that has a microphone function).
4. Programmable Functions: Users can map frequently used action buttons or combinations to the back buttons, enhancing control during gameplay.
5. Ergonomic Design: The controller's structure is designed for comfort, providing a pleasant feel during use.

Functionality Chart:

Feature Name	Available	Notes
USB wired connection	Supported	
Wireless Connection	Supported	
Six-Axis Motion Sensing	Yes	Only supports wired mode
Built-in Speaker	Yes	
Touch Function	Yes	
Headphone Jack	Yes	Only supports wired mode
Touchpad Press Button	Yes	
Action Buttons (△, ○, X, □)	Yes	
Directional Pad (Up, Down, Left, Right)	Yes	
OPTIONS Button, SHARE Button, L1 Button, R1 Button, L2 Button, R2 Button, T Button, M Button .M1 Button,M2 Button	Yes	
PS button (HOME button)	Yes	
Left and Right 3D Stick Function	Yes	
Screenshot function	Yes	
Screen recording function	Yes	
L3 Button (Left Stick Press)	Yes	
R3 Button (Right Stick Press)	Yes	
Connection Indicator Light	Yes	
TURBO Function	Yes	

User Instructions:

(I) Connecting to P-5

1. Wired Connection: Turn on the console and enter the normal standby interface. To avoid connection errors, set the communication method as follows: “Settings” → “Accessories” → “Controllers (General)” → “Connection Method” → “Use USB Cable.” Connect the controller’s USB cable to the console and press the PS button (HOME button) on the controller to connect to the PS5. The blue light will stay on when connected successfully.
2. Wireless Connection: For the first connection, use a data cable to assist with the connection. Once connected successfully, you can unplug the data cable. To reconnect when the controller is in sleep mode, simply press the PS button.
3. The light bar on the front of the controller will illuminate, and pressing any function button on the controller will allow you to control the console, indicating a successful connection.
4. During normal gameplay, the controller will vibrate according to game rules, utilizing dual motors.
5. Video Recording Function: Double-click the Share button to start screen recording; double-click again to stop.
6. Screenshot Function: Long press the SHARE button to take a screenshot of the current screen.

7. Headset Microphone Function: This feature only supports wired mode. If you need to use two controllers simultaneously, please connect them to different USB ports (front and back) on the console; using both in either front or back USB ports may cause one controller's headset function to malfunction.
8. To use the microphone function in-game, wear a headset with a microphone and plug it into the 3.5mm headphone jack on the controller.
9. The built-in speaker/headset/microphone functions are not supported in wireless mode.

(II) Connecting to PC

- Wired Connection: When connecting to a PC, simply plug it in and it will work as a plug-and-play device. You can play games compatible with this controller on PC/Steam.
- Wireless Connection: To connect wirelessly to a PC, put the controller into pairing mode while it is in sleep state by holding down the SHARE button and then pressing the PS button for 3 seconds until the connection indicator light flashes quickly. Enable Bluetooth on your PC and search for "DualSense Wireless Controller" in Bluetooth settings; select it to connect. You can play games compatible with this controller on PC/Steam. To reconnect when in sleep mode, press the PS button.

Macro Definition Functionality:

1. Setting M1 and M2 Keys::

Press the M key + M1, then release to enter macro definition mode; the connection indicator light will turn orange. Sequentially press the keys you want to define for the macro (↑, ↓, ←, →, △, ○, □, X, L1, R1, L2, R2, L3, R3). (Note: In macro definition mode, you can define up to 14 key values to a single back button.) After pressing the designated programming key, press M1 to complete the setting. Both back buttons M1 and M2 can be programmed with single or multiple key mappings. The controller supports programming operations for a total of 14 key values: A / B / X / Y / L1 / R1 / L2 / R2 / L3 / R3 / Up / Down / Left / Right.

The setting for the M2 key follows the same procedure.

2. Macro definition key function clear: Press the M key and the corresponding macro definition key ("M1/M2"), the connection indicator will turn orange, then press ("M1/M2") again to clear.

TURBO Function Settings:

1. Semi-Automatic TURBO Function Setup: Press and hold the T button, then press the desired function key.
2. Keys That Can Have TURBO Function Set: The following keys can be assigned the TURBO function: △, ○, □, X, L1, R1, L2, R2.
3. Clearing Set TURBO Function Keys: press and hold the T button + the key that has the TURBO function assigned.

Product Maintenance and Precautions:

1. Read the Manual: Please read this specification document thoroughly before use!
2. Cleaning: If the product gets dusty or dirty, wipe it clean with a damp cloth. Do not use chemical solvents for cleaning!
3. Storage Conditions: Do not store the product in areas with high humidity, extreme temperatures, or direct sunlight.
4. Avoid Dust and Pressure: When using or storing the product, try to keep it away from dust and heavy pressure

to prolong its lifespan.

5. Stop Using if Damaged: If the product is submerged in water, damaged, or experiences electrical performance issues due to improper use, please stop using it immediately.
6. Do Not Use External Heating Devices: Do not attempt to dry the product using external heating devices like microwaves.
7. Repair Services: If damaged, please send it to a repair department for servicing; do not attempt to disassemble it yourself.
8. Parental Guidance for Children: Child users should use this product responsibly under parental guidance and should not become overly obsessed with gaming.

FCC STATEMENT : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Documents / Resources

	ShenZhen TP5-35137 Wireless Game Controller [pdf] User Manual 2AJJC-TP5-35137, 2AJJCTP535137, TP5-35137 Wireless Game Controller, TP5-35137, Wireless Game Controller, Game Controller, Controller
---	---

References

- [User Manual](#)

