

SHIMANO
SW-EN605-R
Shifting
Switch



SHIMANO SW-EN605-R Shifting Switch Instructions

[Home](#) » [Shimano](#) » SHIMANO SW-EN605-R Shifting Switch Instructions 

Contents

- [1 SHIMANO SW-EN605-R Shifting Switch](#)
- [2 Product Usage Instructions](#)
- [3 OVERVIEW](#)
- [4 Specifications](#)
- [5 FAQs](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

SHIMANO

SHIMANO SW-EN605-R Shifting Switch



Product Usage Instructions

- **Europe:**

- For users in Europe, ensure compliance with Directive 2014/53/EU. Full text of the EU declaration of conformity is available at the following internet address: <http://si.shimano.com>

- **UK (Great Britain):**

- Compliant with The Radio Equipment Regulations 2017. Full text of the UK declaration of conformity is available at the following internet address: <http://si.shimano.com>

- **USA:**

- Compliant with FCC Rules part 15. Follow the FCC guidelines for operation to prevent harmful interference. Do not co-locate this transmitter with other antennas or transmitters. Ensure compliance with FCC RF radiation exposure limits. For assistance, consult a dealer or an experienced radio/TV technician.

- **Canada:**

- Complies with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). This device must not cause interference and should accept any interference received. Follow Canadian regulations for usage.

OVERVIEW



Specifications


Series		SHIMANO	
Model no.		SW-EN605-R	
Switch type		Fixed button position	
Position		Clamp band	
Di2 connectivity wired	Di2 shifting		—
Di2 connectivity wireless	Di2 shifting		✓
Button numbers (pcs)			3
Master unit			—
Firmware update by E-TUBE PROJECT			—
SD50 port (pcs)			0
SD300 port (pcs)			0
SD50 connector (pcs)			0
SD300 connector (pcs)			0
Switch1	Default function		RD outward
	Multiple input	2 step	—
		Hold	✓
	Adjustable lever position		—
Switch2	Default function		RD inward
	Multiple input	2 step	—
		Hold	✓
	Adjustable lever position		—
Switch3	Default function		Shifting mode
	Multiple input	2 step	—
		Hold	✓
Suspension switch			—
Battery			CR1632 x 2
LED	Shimano system status		✓
Average weight (g)			
Note			—

FAQs

- **What should I do if I experience interference with the device?**
 - If you experience interference, try the following:
 - Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different circuit from the receiver.
- Consult the dealer or a radio/TV technician for assistance.

Documents / Resources

	<p>SHIMANO SW-EN605-R Shifting Switch [pdf] Instructions SW-EN605-R, SW-EN605-R Shifting Switch, Shifting Switch, Switch</p>
---	--

References

-  [Anatel — Agência Nacional de Telecomunicações](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.