



[Home](#) » [SHOKZ](#) » **SHOKZ C120 Open Comm 2 UC 2025 Upgrade User Guide** 

Contents [[hide](#)]

- [1 SHOKZ C120 Open Comm 2 UC 2025 Upgrade](#)
- [2 Specifications](#)
- [3 ON/OFF](#)
- [4 Pairing to a Mobile Device](#)
- [5 How to Wear](#)
- [6 Settings](#)
- [7 Controls](#)
- [8 FAQs](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



SHOKZ C120 Open Comm 2 UC 2025 Upgrade



 
Specifications

- Model: SHOKZ C120
- Wireless Connectivity: Bluetooth
- Microphone: Noise-cancelling
- LED Indicator: Blue for Bluetooth pairing, red for power indication

↓ Please refer to the following for more details

userguide.shokz.net/OpenComm2UC2025Upgrade

ON/OFF

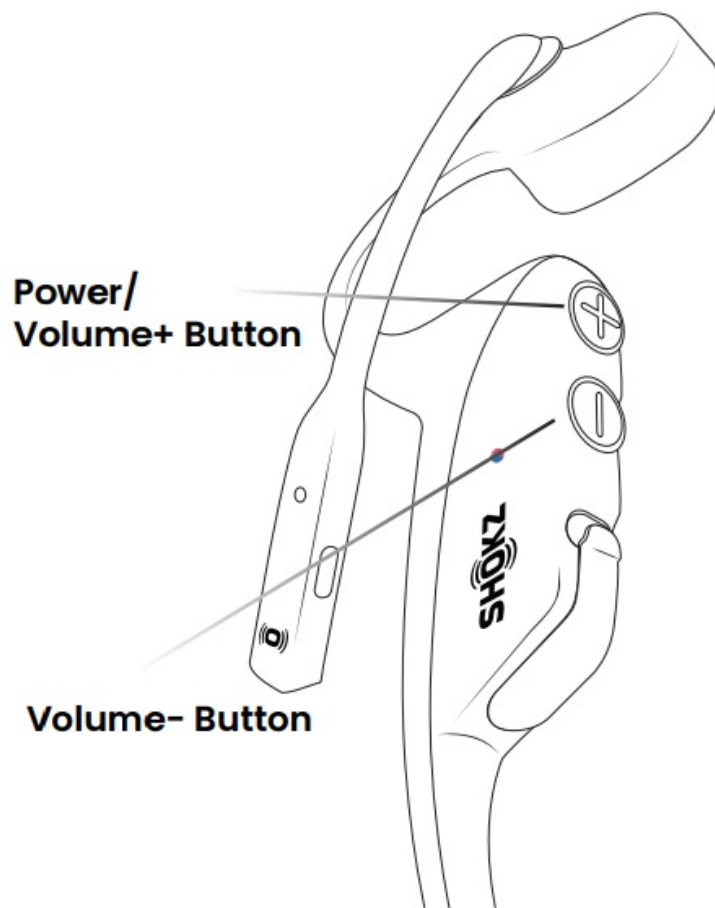


Turn on the headset

- Press and hold the 2 seconds until the LED
- The indicator flashes blue.

Turn off the headset

- Press and hold the Power/Volume + Button for 3 seconds until the LED
- The indicator flashes red.


Pairing to a Mobile Device

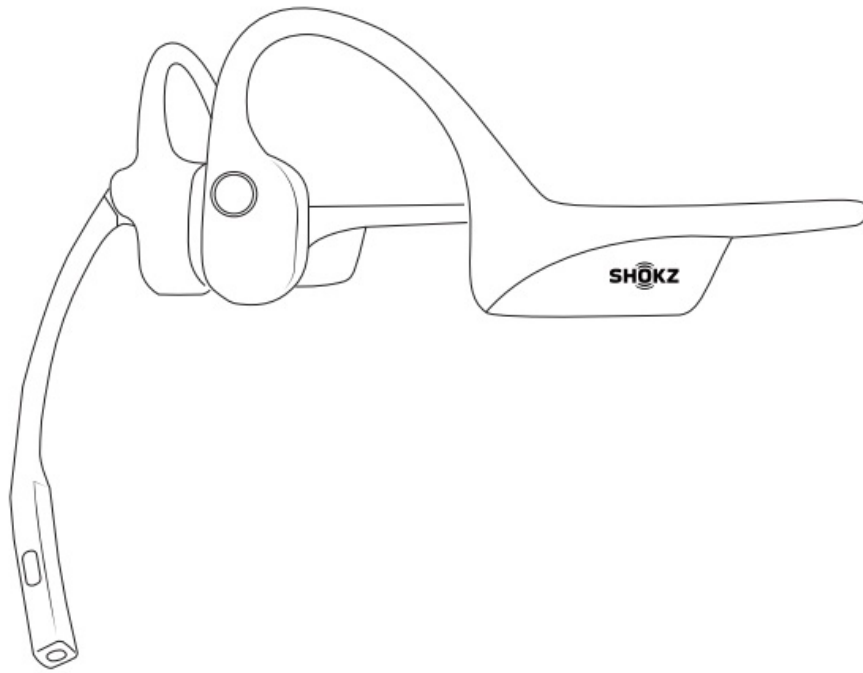


Operate controls with your headset powered off.

1. Start with your headset turned off.
2. Press and hold the Volume+ Button until the LED indicator flashes red and blue alternately.
3. Select “OpenComm2 by Shokz_ii” on your device’s Bluetooth settings. You will hear “Connected”.

 Pairing to PC

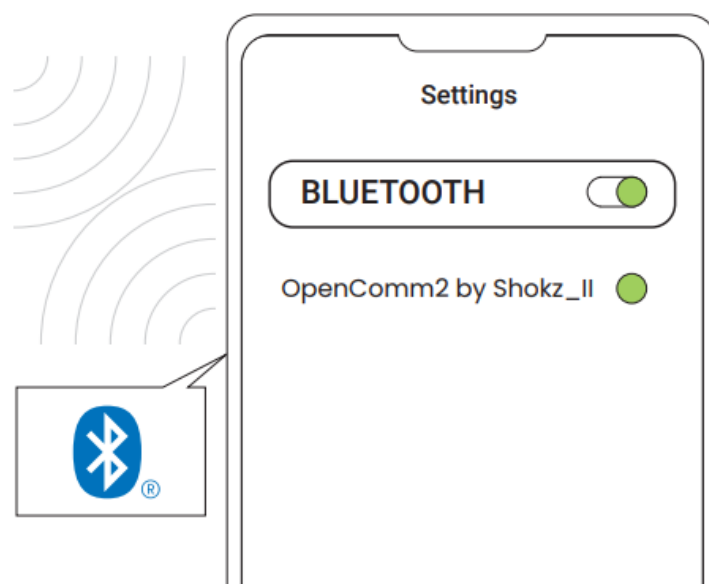


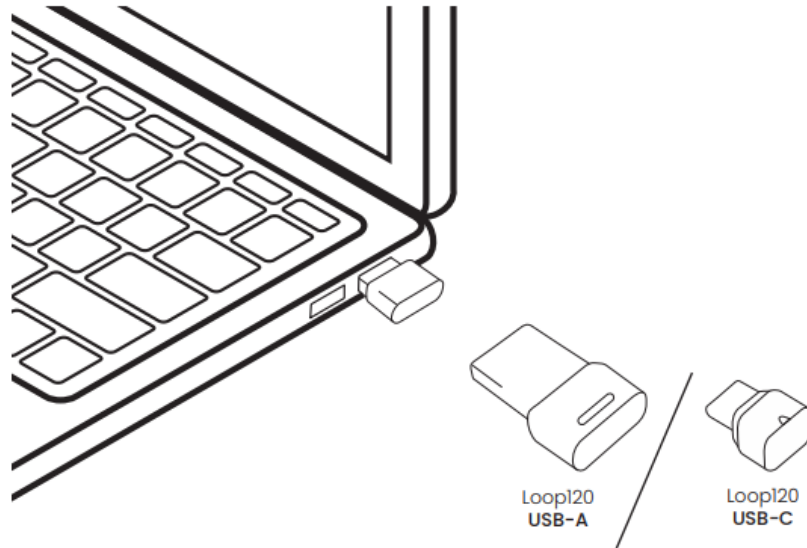


1. Start with your headset turned on.
2. Plug the included USB adapter into a USB port on your PC.
3. Connection is established when you hear “connected,, and the LED indicator on the wireless adapter is solid cyan.

Configure

 
To play music or take calls on the headset, please ensure the “Shokz Loop120” is both identified as the default input and output devices in your operating system’s audio settings.

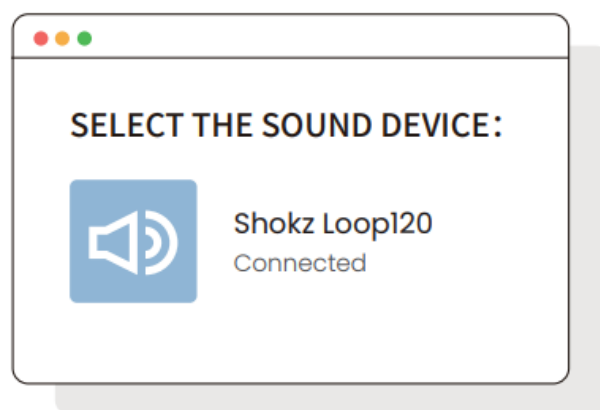

Button

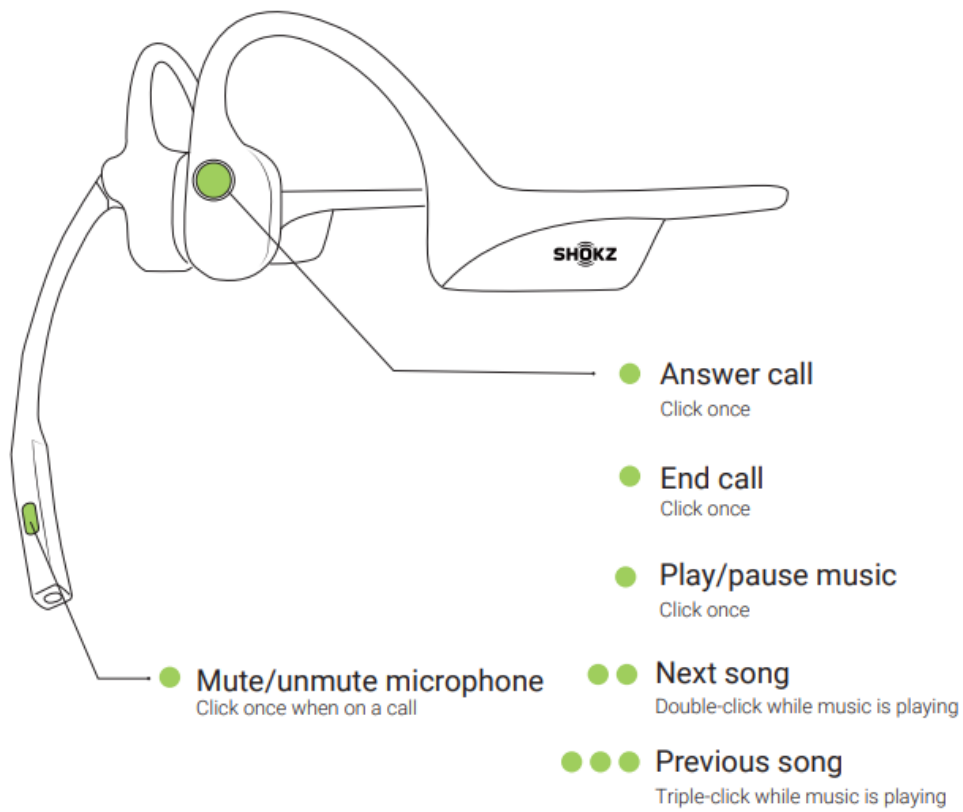


Reconnect to the last connected headset

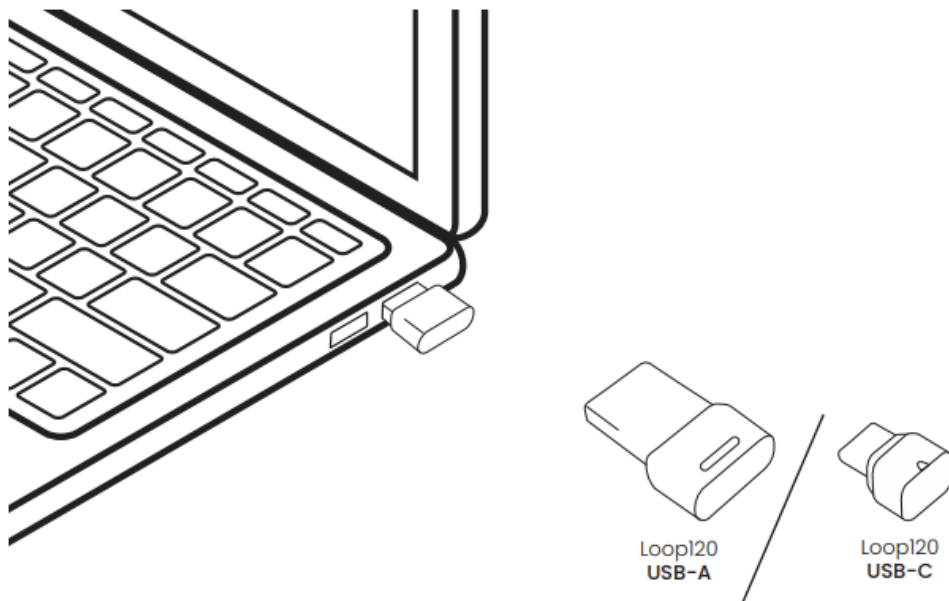


LED: Flashes blue every second.

 How to Wear

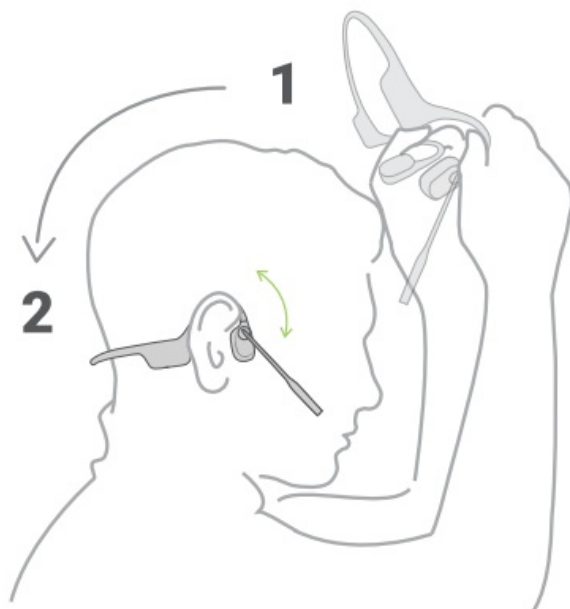


Position the noise-cancelling microphone close to your mouth.

 ON/OFF

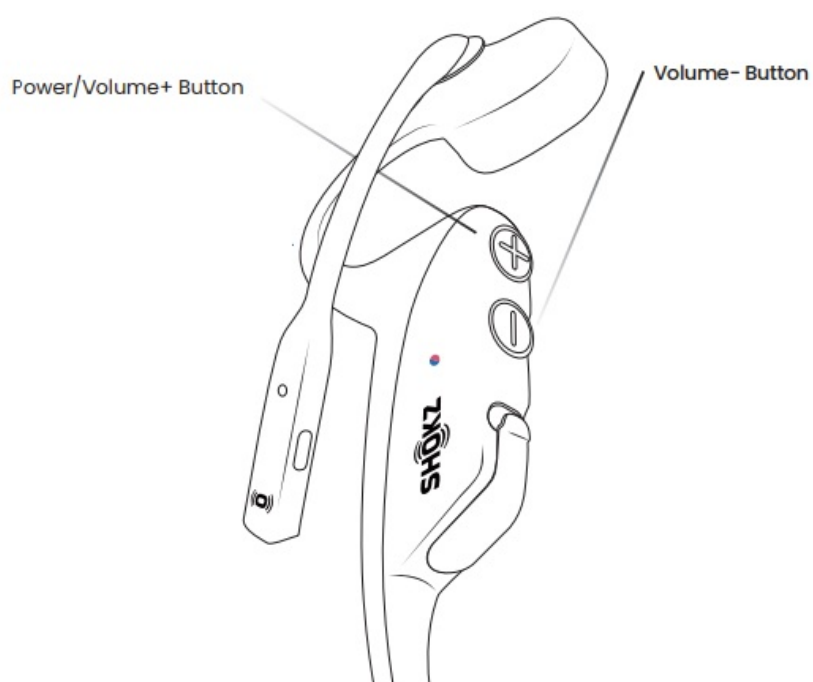


- Power/Volume+ Button

 
Pairing to a Mobile Device

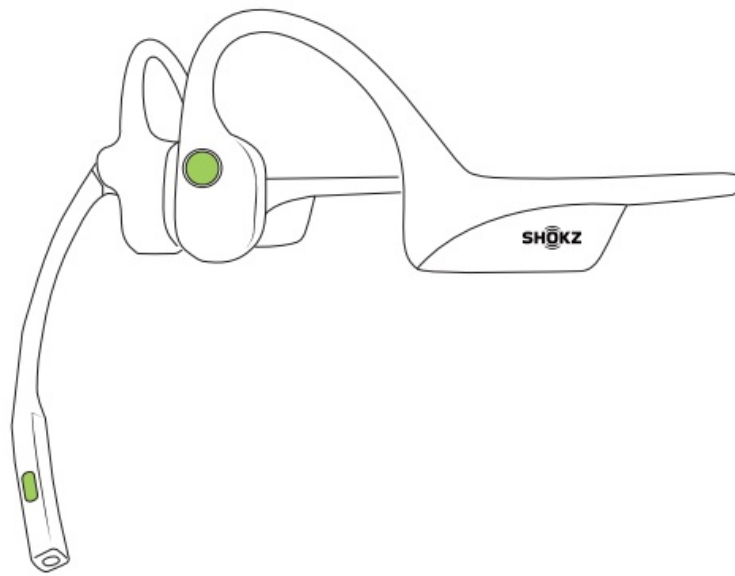


Pairing to PC

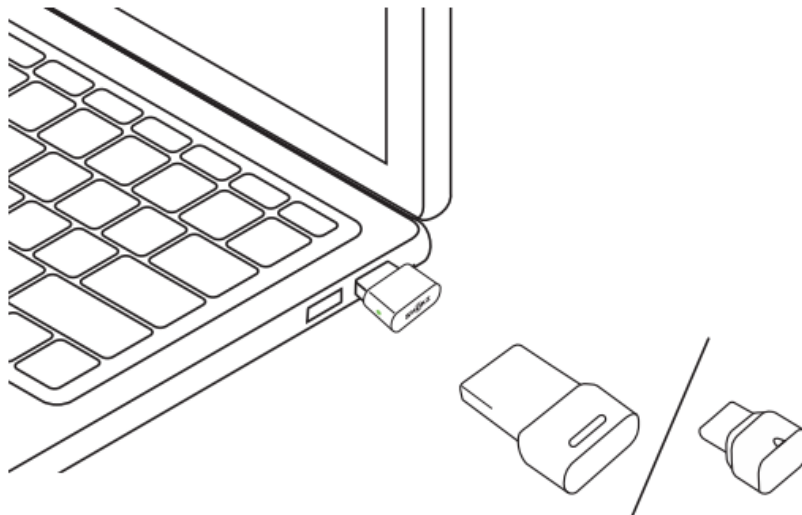 


Button

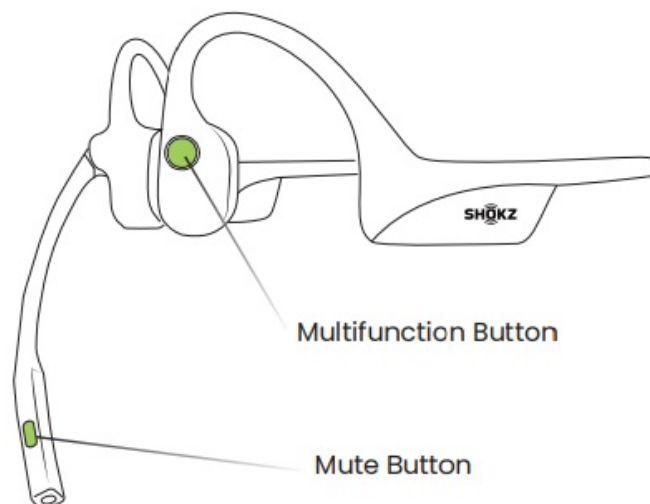 

Multifunction Button

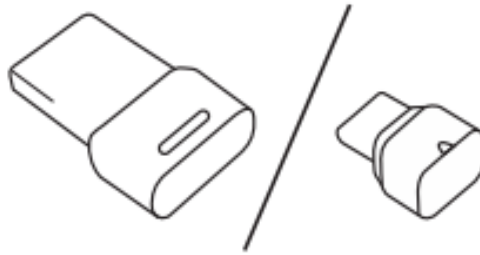 

How to Wear

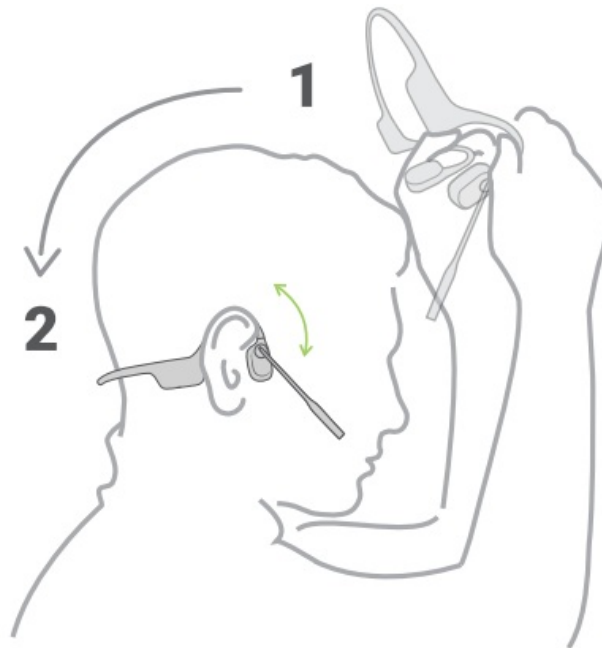 

Settings

To play music or take calls on the headset, ensure that the Shokz Loop120 is identified as the default input and output device in your operating system's audio settings.

Controls

- Mute/unmute microphone: Click once when on a call
- Answer call: Click once
- End call: Click once
- Play/pause music: Click once
- Next song: Double-click while music is playing
- Previous song: Triple-click while music is playing

FAQs

How do I know if the headset is paired with a device?

The LED Indicator will show a solid colour when connected to a device, and you will hear an audio prompt confirming the connection.


Can I use the headset while it's charging?

Yes, you can use the headset while it's charging, but it's recommended to let it fully charge before extended use.

How do I adjust the volume on the headset?

Use the Volume+ and Volume- Buttons to adjust the volume levels on the headset.

Documents / Resources

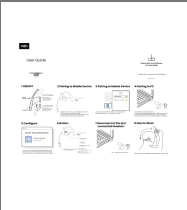	SHOKZ C120 Open Comm 2 UC 2025 Upgrade [pdf] User Guide C120, 2BCD6, C120 Open Comm 2 UC 2025 Upgrade, C120, Open Comm 2 UC 2025 Upgrade, 2 UC 2025 Upgrade, 2025 Upgrade
--	--

References

- [User Manual](#)

SHOKZ

2 UC 2025 Upgrade, 2025 Upgrade, 2BCD6, C120, C120 Open Comm 2 UC 2025 Upgrade, Open Comm 2 UC 2025 Upgrade, SHOKZ

—Previous Post

[SHOKZ C120 2 Open Ear Headphones Instruction Manual](#)

Next Post—

[SHOKZ C120 NFC OpenComm2 UC Headset Instruction Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.