




SHOKZ CL120A, CL120C Loop120 USB-A/USB-C Wireless Adapter Instructions

[Home](#) » [SHOKZ](#) » SHOKZ CL120A, CL120C Loop120 USB-A/USB-C Wireless Adapter Instructions 

SHOKZ CL120A, CL120C Loop120 USB-A/USB-C Wireless Adapter Instructions



Contents

1 LED Status

2 Documents / Resources

2.1 References


3 Related Posts

LED Status

 Pairing	Red and blue lights flash alternately
 Reconnect	Blue light quick flashing
 Connected	Solid cyan light
 Standby Mode	Blue light slow flashing
 Music Streaming	Solid blue light
 Incoming call	Green light quick flashing
 In-call	Solid green light
 Microphone on mute	Solid red light



Documents / Resources

	SHOKZ CL120A, CL120C Loop120 USB-A/USB-C Wireless Adapter [pdf] Instructions CL120C, CLC, CL120A CL120C Loop120 USB-A USB-C Wireless Adapter, CL120A CL120C, Loop120 USB-A USB-C Wireless Adapter, USB-A USB-C Wireless Adapter, Wireless Adapter, Adapter
-------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.