



SHURE ANIUSB Matrix Audio Network Interface User Guide

[Home](#) » [Shure](#) » SHURE ANIUSB Matrix Audio Network Interface User Guide 

SHURE ANIUSB Matrix Audio Network Interface User Guide



Getting Started

To control the ANIUSB-MATRIX, use Shure Designer software. After completing this basic setup process, you should be able to:

- Control the ANIUSB-MATRIX in Designer
- Route audio to the ANIUSB-MATRIX in Designer
- Use the matrix mixer to route audio signals

Before you get started, you'll need:

- Cat5e (or better) Ethernet cable
- Network switch that provides Power over Ethernet (PoE)
- Shure Designer software installed on a computer. Download at www.shure.com.

Step 1: Connect to a Network and Discover in Designer

1. Connect the ANIUSB-MATRIX to a PoE port on the network switch using Cat5e (or better) cable.
2. Connect your computer running Designer to the network switch.
3. Open Designer, and check that you're connected to the correct network in Settings.
4. Click Online devices. A list of online devices appears.
5. To identify devices, click the product icon to flash the lights on a device.

Step 2: Route Audio and Apply DSP

The easiest way to route audio and apply DSP is with Designer's Optimize workflow. Optimize automatically routes audio signals, applies DSP settings, turns on mute synchronization, and enables LED logic control for connected

devices.

For this example, we'll connect an MXA310 table array microphone.

1. Go to My projects > New to create a new project.
2. Select New > Room (live) to create a new room. Any online devices appear in the list. Drag and drop the ANIUSBMATRIX and MXA310 to add them to your room.
3. Select Optimize.
4. Check the audio routes and settings to make sure they fit your needs. You might need to:
 - Delete unnecessary routes.
 - Fine-tune DSP blocks as needed.
 - Test and adjust microphone coverage.

You can also route audio manually in Designer outside of the Optimize workflow, or use Dante Controller.

Step 3: Configure Audio

The final configuration steps vary depending on what other devices you connect to the ANIUSB-MATRIX.

1. Connect other analog and USB devices to the ANIUSB-MATRIX. If you have a computer with videoconferencing software, connect it to the USB port.
2. Go to Matrix mixer to route audio between ANIUSB-MATRIX inputs and outputs. You can send a single input to many outputs or vice versa. To send audio from the MXA310 to the computer, check the box where Dante Input 1 and USB Output intersect.
3. Perform a sound check and adjust input and output levels in Designer.
4. Apply equalization (EQ) as needed to improve speech clarity.

Get More Information

Learn more about the ANIUSB-MATRIX in the Designer Help section or in the complete user guide at [pubs.shure.com/guide/ ANIUSB-Matrix](https://pubs.shure.com/guide/ANIUSB-Matrix).

General Description

The ANIUSB-MATRIX Audio Network Interface provides connections for USB, Dante , and analog audio sources. Collaborate and connect with all audio devices on a single network, with support for wireless microphones, computers, mobile devices, video codecs, and loudspeaker systems. Connect with a single network cable to receive audio and power through Power over Ethernet (PoE). Use Shure Designer software to control audio and network settings from any computer connected to the same network.

Contents

- 1 Hardware and Installation
- 2 What's in the Box
- 3 Setting Up Mute Sync on the MXA310 and ANIUSB-MATRIX
- 4 Audio Settings
- 5 Matrix Mixer
- 6 TCP/UDP
- 7 Protocol
- 8 Description
- 9 Factory De-fault
- 10 21
- 11 TCP
- 12 FTP

13 Required for firmware updates (otherwise closed)

14 Closed

15 22

16 TCP

17 SSH

18 Secure Shell Interface

19 Closed

20 Port

21 TCP/UDP

22 Protocol

23 Description

24 Factory De-

25 fault

26 23

27 TCP

28 Telnet

29 Not supported

30 Closed

31 53

32 UDP

33 DNS

34 Domain Name System

35 Closed

36 67

37 UDP

38 DHCP

39 Dynamic Host Configuration Protocol

40 Open

41 68

42 UDP

43 DHCP

44 Dynamic Host Configuration Protocol

45 Open

46 80*

47 TCP

48 HTTP

49 Required to launch embedded web server

50 Open

51 443

52 TCP

53 HTTPS

54 Not supported

55 Closed

56 2202

57 TCP

58 ASCII

59 Required for 3rd party control strings

60 Open

61 5353

62 UDP

63 mDNS†

64 Required for device discovery

65 Open

66 5568

67 UDP

68 SDT (multicast)†

69 Required for inter-device communication

70 Open

71 57383

72 UDP

- 73 SDT (unicast)
- 74 Required for inter-device communication
- 75 Open
- 76 8023
- 77 TCP
- 78 Telnet
- 79 Debug console interface
- 80 Closed
- 81 8180
- 82 TCP
- 83 HTML
- 84 Required for web application (legacy firmware only)
- 85 Open
- 86 8427
- 87 UDP
- 88 SLP (multicast)†
- 89 Required for inter-device communication
- 90 Open
- 91 64000
- 92 TCP
- 93 Telnet
- 94 Required for Shure firmware update
- 95 Open
- 96 Contact Customer Support
- 97 Specifications
- 98 Optional Accessories and Replacement Parts
- 99 Safety Information
- 100 Documents / Resources
 - 100.1 References
- 101 Related Posts

Hardware and Installation

Rear Panel



Level Indicators (Signal/Clip)

Tri-color LEDs indicate the audio signal level for the analog channels and connectivity status for the USB channel. Adjust output levels in Shure Designer software to avoid clipping.

Analog Input/Output


LED State	Audio Signal Level
Off	less than -60 dBFS
Green	-59 dBFS to -24 dBFS
Yellow	-23 dBFS to -1 dBFS
Red	0 dBFS or more

Note: The input and output LEDs stay off when metering is set to Post-gain

USB Audio

LED State	Status
Off	No USB device connected
Green	USB device operating successfully
Red (flashing)	Problem detected with connected USB audio device

Audio Input (Block Connector)
Block Pin Assignments:

+	Audio +
–	Audio –
	Audio ground

Chassis Ground Screw

Provides an optional connection for microphone shield wire to chassis ground.

Audio Output (Block Connector)

Balanced audio output connects to an analog device. Set the output level in Shure Designer software to match the input sensitivity of the analog device.

Note: See front panel labels for block connector assignments.

USB Port

Connects to a computer to send and receive any combination of input and output audio channels.

LED Indicators

Power: Power over Ethernet (PoE) present

Note: Use a PoE injector if your network switch does not supply PoE.

Network: Network connection active

Network Audio: Dante audio present on the network

Note: Error details are available in the event log in Shure Designer software.

Network Audio LED Behavior

LED Status	Activity
Off	No active signal
Green	Device is operating successfully
Red	Error has occurred. See event log for details.

LED Status	Activity
Off	Audio not encrypted
Green	Successful encrypted audio connection with another device
Red	Encryption error. Possible causes: Encryption is enabled on one device and not on another Passphrase mismatch

Dante Network Port

Connects to a network switch to receive Dante audio, Power over Ethernet (PoE), and data from the control software.

Reset Button

Resets the device settings back to the factory default.

Power Over Ethernet (PoE)

This device requires PoE to operate. It is compatible with both Class 0 and Class 3 PoE sources.

Power over Ethernet is delivered in one of the following ways:

- A network switch that provides PoE
- A PoE injector device

Installation and Rack Mounting

Two mounting solutions are available for installing the Audio Network Interface:


CRT1 19" Rack Tray (optional accessory): Supports up to 3 devices; mountable in a rack or under a table

Single-unit Mounting Tray (included accessory): Supports a single device for mounting under a table

Securing the Devices



Use the included screws from the mounting hardware kit to secure the Audio Network Interfaces. Audio Network Interfaces can be mounted to face either direction. Insert the screws from the bottom in the appropriate holes, according to the following diagrams:

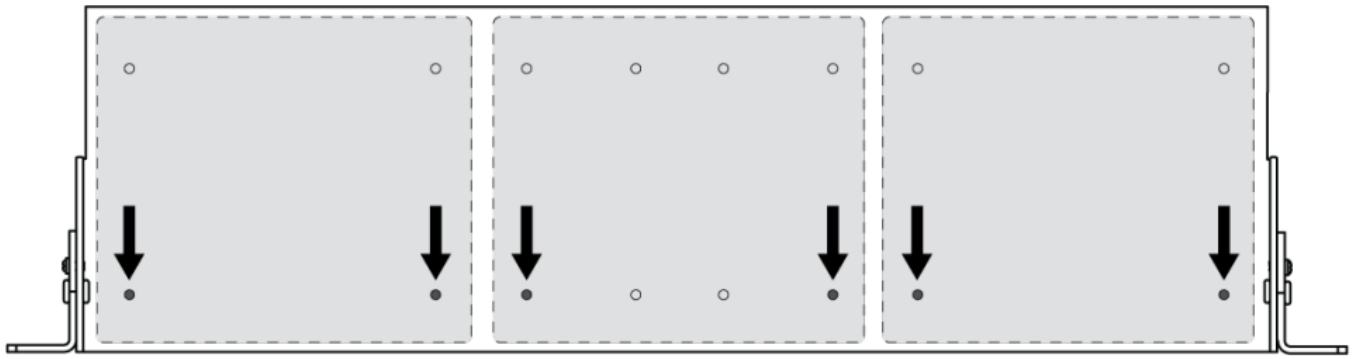


Align the holes as shown for securing a single device in the single-unit mounting tray
Align the holes as shown for securing up to 3 devices in the 19" rack tray

Rack Ear Configuration

A combination of up to 3 Audio Network Interfaces can be mounted in a single 19-inch rack space. The adjustable rack ears support mounting in a standard equipment rack or underneath a table.


Standard 19" Rack Mount

1. Align the ears with the mounting holes pointed forward.
2. Install the 3 screws that hold the ear to the tray as shown

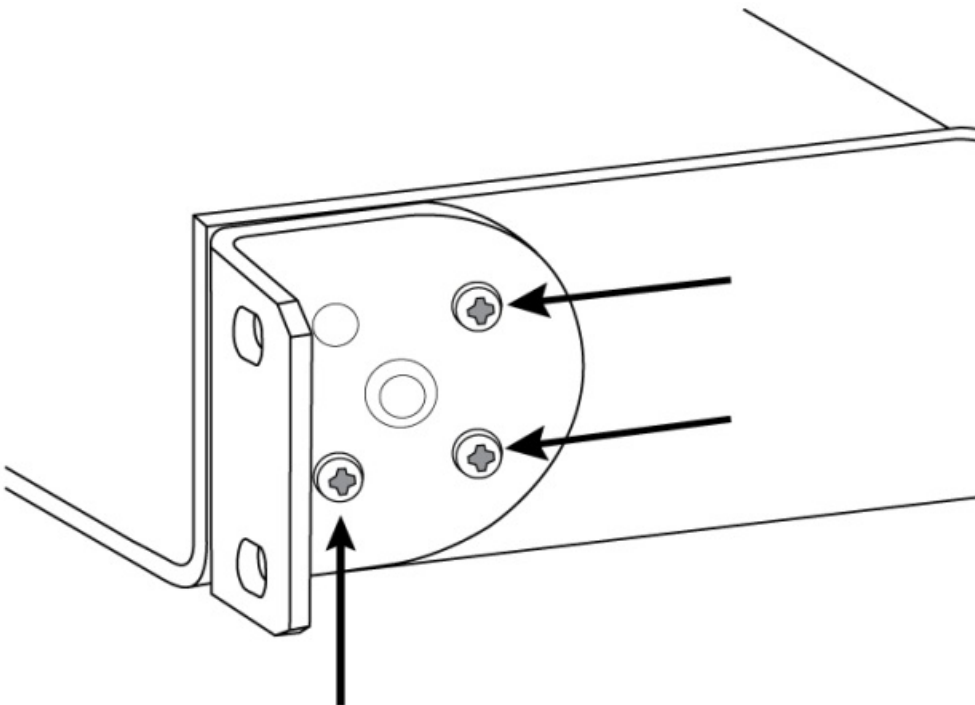

Under-Table Mounting

1. Align the ears with the mounting holes pointed upward.
2. Install the 3 screws that hold the ear to the tray as shown.

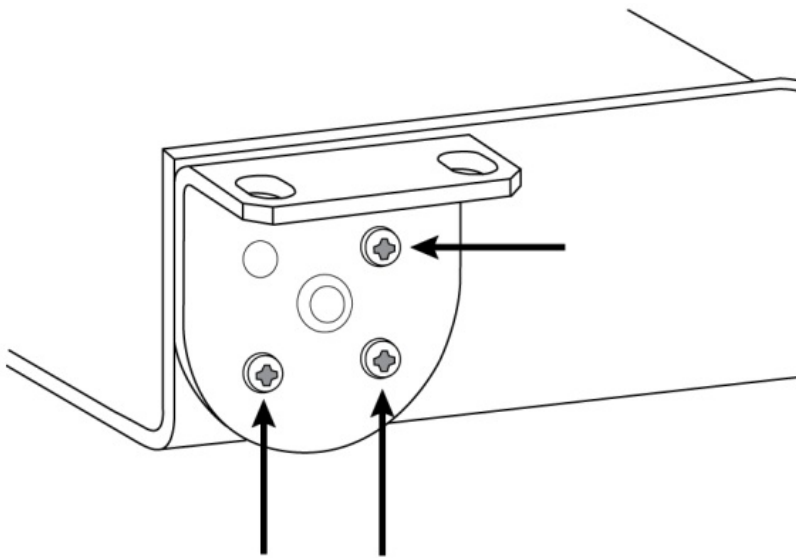

Installing Underneath a Table

- 1. Hold the tray in the desired location under a table.
- 2. Use a pencil to mark the location of the mounting holes on the table.
- 3. Drill 4 holes for the screws. The diameter of the holes in the tray are 7.1 mm.
- 4. Install the components into the tray.
- 5. Install with 4 screws to secure the tray underneath the table

Device Identification

To identify the hardware by flashing the lights, select the Identify button in the device options section.

What’s in the Box

KIT, HARDWARE, ANIUSB-MATRIX	90A33522
Mounting Bracket (1/3 rack unit)	53A27742

Note: USB cable not included.

Controlling Devices with Shure Designer Software

To control this device’s settings, use Shure Designer software. Designer enables integrators and system planners to design audio coverage for installations using MXA microphones and other Shure networked devices.

To access your device in Designer:

- 1. Download and install Designer on a computer connected to the same network as your device.
- 2. Open Designer, and check that you’re connected to the correct network in Settings.
- 3. Click Online devices. A list of online devices appears.
- 4. To identify devices, click the product icon to flash the lights on a device. Select your device in the list and click Configure to control device settings.

- Learn more at shure.com/designer.

You can also access device settings using Shure Web Device Discovery

Use Designer's Optimize Workflow

Designer's optimize workflow speeds up the process of connecting systems with at least 1 microphone and 1 audio processor. Optimize also creates mute control routes in rooms with MXA network mute buttons. When you select Optimize in a room, Designer does the following:

- Creates audio routes and mute control routes
- Adjusts audio settings
- Turns on mute synchronization
- Enables LED logic control for applicable devices

The settings are optimized for your particular combination of devices. You can customize settings further, but the optimize workflow gives you a good starting point.

Compatible devices:

- MXA920
- MXA910
- MXA710
- MXA310 P300
- IntelliMix Room
- ANIUSB-MATRIX
- MXN5-C
- MXA Network Mute Button

To use the optimize workflow:

1. Place all relevant devices in a room.
2. Select Optimize. Designer optimizes microphone and DSP settings for your equipment combination.

If you remove or add devices, select Optimize again.

After optimizing a room, check and adjust settings to fit your needs. You may need to:

- Delete unnecessary routes.
- Check levels and adjust gain.
- Check that AEC reference signals are correctly routed.
- Fine-tune DSP blocks as needed.

How to Update Firmware Using Designer

Applies to Designer 4.2 and newer.

Before setting up devices, check for firmware updates using Designer to take advantage of new features and improvements.

You can also install firmware using **Shure Update Utility** for most products.

To update:

1. Open Designer. If there's new firmware that you haven't downloaded yet, Designer shows a banner with the number of updates available. Click to download firmware.
2. Go to Online devices and find your devices.
3. Choose a firmware version for each device from the Available firmware column. Make sure that no one is editing device settings during an update.
4. Select the checkbox next to each device you plan to update and click Update firmware. Devices may disappear from Online devices during an update. Don't close Designer while updating firmware.

Firmware Versioning

When updating firmware, update all hardware to the same firmware version to ensure consistent operation. The firmware of all devices has the form of MAJOR.MINOR.PATCH (e.g., 1.2.14). At a minimum, all devices on the network, must have the same MAJOR and MINOR firmware version numbers (e.g., 1.2.x).

Differences Between 3.x and 4.x Firmware

Support for Dante Domain Manager

- You can now add the ANIUSB-MATRIX to domains in Dante Domain Manager software.
- Audio Encryption Improvements
- Firmware 4.x and newer has improved audio encryption, so make sure to update all Shure devices using encryption to the same major firmware version.
- Web Applications Removed
- With firmware 4.x and newer, Shure Designer software is the only way to control the ANIUSB-MATRIX.
- You can access basic settings for the device by opening it from the Shure Web Device Discovery tool, but you must use Designer for full control.
- Download Designer at shure.com/designer


Connections and Signal Flow

The ANIUSB-MATRIX has 4 Dante inputs and 2 Dante outputs. You can route any input to any output and adjust crosspoint gain using the matrix mixer.

Best Practices

- For best results, route 1 microphone to the ANIUSB-MATRIX. If using multiple microphones in a space, use a device with an automixer (such as a **P300 or IntelliMix Room**).
- Use Shure Designer's **optimize workflow** to quickly set up Dante audio routes, mute control routes, matrix mixer routes, and other settings.

The ANIUSB-MATRIX has 2 Dante transmit flows. **Learn more about Dante flows.**
These are some of the devices that you can connect to the ANIUSB-MATRIX:

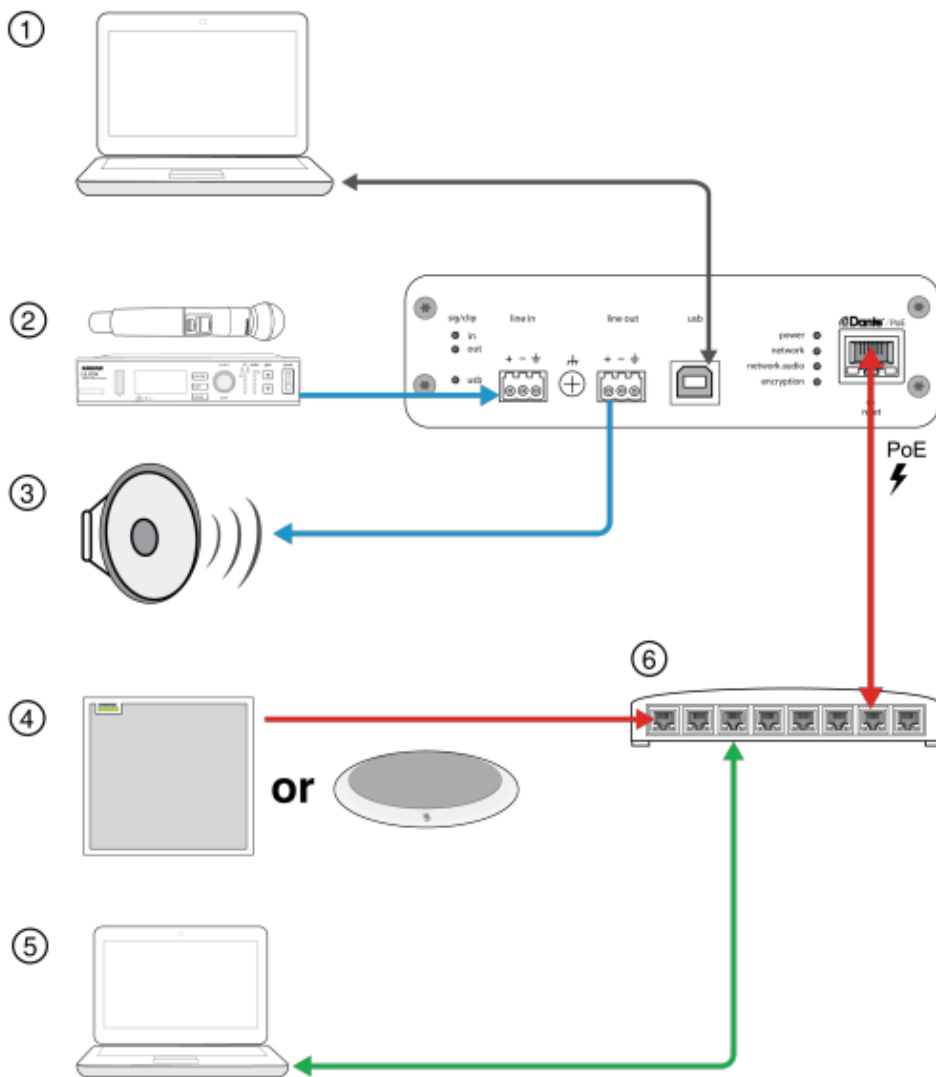

1. Computer with conferencing software

The computer sends and receives audio to and from the conferencing software. All signals pass through the ANIUSB MATRIX's USB connection. Route Dante sources using Dante Controller or Shure Designer software.

Note: Compatible with Mac and PC

2. Analog input sources

Analog sources (such as wireless microphones or any line-level devices) connect to the analog line input.

3. Analog output devices

Loudspeakers, amplifiers, or recording devices connect to the analog line output.

4. Dante-enabled microphone

A Dante microphone (such as a Shure Microflex Advance array) connects to the network switch. Route the microphone's

signal to the ANIUSB-MATRIX, and then use the matrix mixer to route the signal to the USB output.

5. Control computer

A computer connected to the network accesses Shure Designer to control the channel levels and processing.

6. Network switch

The network switch provides Power over Ethernet (PoE) to devices that require it.

Connecting the ANIUSB-MATRIX to a Computer

Connect the ANIUSB-MATRIX to a computer with conferencing software using the USB port.

When the ANIUSB-MATRIX is connected for the first time, the computer recognizes it as a USB audio device. You

may need to

select it as the input/output (recording/playback) device to pass audio. Assign the ANIUSB-MATRIX as the default device to ensure it passes audio every time it is plugged in. Refer to the manual for your computer to configure the audio settings.

Routing Audio Channels to the USB Port

You can route audio to and from the ANIUSB using Dante Controller or Shure Designer software. Use the ANIUSB's matrix

mixer to route Dante and analog channels to the USB port.

Step 1: Dante Controller or Shure Designer

1. Open Dante Controller or Shure Designer and route Dante devices (such as MXA or MXW microphones) to the ANIUSB's Dante input channels. Name the channels to keep track of devices.
2. If you need to send channels from the ANIUSB to other Dante-enabled devices (such as an amplifier, loudspeaker, or recording device), route the ANIUSB's Dante output channels to the appropriate devices in Dante Controller.

Note: Shure Designer creates Dante audio routes between Shure devices. To create Dante audio routes with non-Shure Dantedevices, use Dante Controller

Step 2: Matrix mixer

1. Open the ANIUSB's matrix mixer to route Dante and analog channels to the USB port.
2. Assign the USB Input channel (far-end audio) to the appropriate outputs. If recording a meeting, be sure to route the near-end microphones and the USB input to the recording device.

Adapter Compatibility

This device is compatible with USB-B to USB-C adapters. Using an adapter is only recommended for desktop and laptop computers, as many mobile devices do not support bi-directional audio through USB or lightning ports.

USB Device Type Settings

When you use a USB-connected codec with a P300 or ANIUSB-MATRIX, you may need to set the USB device type on the Shure device.

The USB device type setting tells the codec if acoustic echo cancellation (AEC) is needed or not. The codec can then turn on or turn off its own AEC (if supported).

For example: You have an MXA710 routed to an ANIUSB-MATRIX and want to use the MXA710's AEC. Set the USB device

type to Echo-canceling speakerphone to tell the codec to turn off its AEC.

To change USB device type:

1. In Designer, find the P300 or ANIUSB-MATRIX and go to Settings > General.
2. Choose a USB device type:
 - Speakerphone: For using the codec's AEC
 - Echo-canceling speakerphone: For using the Shure device's AEC
3. After changing the USB device type, select your device as the default audio device in the codec's settings.
4. Place a test call to make sure AEC is working properly.

ANIUSB-MATRIX only: Designer's Optimize workflow automatically sets the USB device type. You can also change it manually

Mute Sync

Mute sync ensures that all connected devices in a conferencing system mute or unmute at the same time and at the correct point in the signal path. Mute status is synchronized in the devices using logic signals or USB connections. To use mute sync, make sure logic is enabled on all devices. Designer's Optimize workflow configures all necessary mute sync settings for you.

Compatible Shure logic devices:

- P300 (Also mutes supported soft codecs connected by USB)
- ANIUSB-MATRIX (Also mutes supported soft codecs connected by USB)
- IntelliMix Room software (Also mutes supported soft codecs connected by USB)
- MXA910
- MXA920
- MXA710
- MXA310
- Network Mute Button
- ANI22-BLOCK
- ANI4IN-BLOCK
- Logic-enabled MX microphones connected to ANI22-BLOCK or ANI4IN-BLOCK
 - MX392
 - MX395-LED
 - MX396
 - MX405/410/415

To turn on mute sync:

1. Open the device in Designer or the web application. Go to Settings > Mute control.
2. Turn Mute sync on.
3. Go to Inputs. Check the box for Logic enable on any of the input channels to turn on logic

Setting Up Mute Sync on the MXA310 and ANIUSB-MATRIX

Use this setup to mute the ANIUSB-MATRIX by pressing the mute button on the MXA310. In the ANIUSB-MATRIX's signal chain, muting happens after the inputs.

Designer 4.2 and newer:

1. Add the ANIUSB-MATRIX and MXA310 to the same location in Designer.
2. Select Optimize. Designer optimizes microphone and DSP settings for your equipment combination, including turning on mute synchronization.

Designer 4.1.x




1. Open the ANIUSB-MATRIX in Designer and go to Inputs.
2. On any channel strip, select Logic enable. This enables logic on all channels.

3. Open the MXA310 in Designer and go to Settings > Logic control.
4. Set the Mute control function to Logic out.
5. Go to Lights. Set the style to Ring.





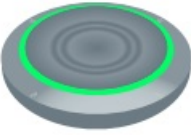

For help with specific mute sync implementations, **see our FAQs.**



Overview of Shure Conferencing Devices

Shure offers a range of connectivity options for conferencing. MXA microphones, audio processors, and network interfaces all use Dante to send audio over standard IT networks. You can use Shure's free Designer software to control most Shure devices and route audio between them.

Device	Purpose	Physical Connections	Dante I/Os
 MXA910	Ceiling array microphone with IntelliMix DSP	1 PoE port	8 individual channel outputs or 1 automix channel output with IntelliMix DSP 1 AEC reference input
			2 Foot:
	Linear array microphone with IntelliMix DSP	1 PoE port	4 individual channel outputs or 1 automix channel output with IntelliMix DSP 1 AEC reference input 4 Foot:
 MXA710			8 individual channel outputs or 1 automix channel output with IntelliMix DSP 1 AEC reference input
 MXA310	Table array microphone	1 PoE port	4 individual channel outputs or 1 automix channel output

Device	Purpose	Physical Connections	Dante I/Os
--------	---------	----------------------	------------

<p><u>P300</u></p> 	Audio processor with Intel-liMix DSP and matrix mixer	1 USB in/out2 analog block in 2 analog block out1 mobile TRRS port (3.5 mm)1 PoE+ port	8 Dante inputs with IntelliMix DSP2 auxiliary Dante inputs 8 Dante outputs
<p><u>IntelliMix Room</u></p> 	Audio processing software with IntelliMix DSP and matrix mixer	Varies depending on device	8 or 16 Dante inputs with IntelliMix DSP8 auxiliary Dante inputs 8 Dante outputs1 virtual audio input and output1 PC input and output
<p><u>ANUSB-MATRIX</u></p> 	Matrix mixer with USB and analog input/output	1 USB in/out1 analog block in 1 analog block out 1 PoE port	4 Dante inputs2 Dante outputs
<p><u>ANI4IN</u> (block or XLR connectors)</p> 	Converts analog signals to Dante signals	4 analog in1 PoE port	4 Dante inputs
<p><u>ANI4OUT</u> (block or XLR connectors)</p> 	Converts Dante signals to analog signals	4 analog out1 PoE port	4 Dante outputs
<p><u>ANI22</u> (block or XLR connectors)</p> 	Converts 2 analog signals to Dante signalsConverts 2 Dante signals to analog signals	2 analog in2 analog out1 PoE port	2 Dante inputs2 Dante outputs

MXN5-C 	Networked ceiling loud-speaker powered by PoE	1 PoE port	2 Dante inputs1 Dante output
MXA Network Mute Button 	PoE-powered network mute button for Shure devices	1 PoE port1 power cable connector for base	n/a

Audio Settings

Schematic View

The schematic view in Designer provides an overview of the entire audio signal chain, with the ability to adjust settings and monitor signals.

BRight-click an input, output, or processing block to access the following options:

Per Channel

Copy / paste

Copy and paste settings between items. For example, set the equalizer curve on the USB output, and then use the same setting for the analog output. Or, copy the gain and mute status from one input channel to several others.

Mute / unmute

Mutes or activates the channel

Enable / disable

Turns processing on or off (does not apply to matrix mixer or automixer)

Edit

Opens the dialog to adjust parameters Global (right-click in blank area)

Mute all inputs

Mutes all input channels

Mute all outputs

Mutes all output channels

Unmute all inputs

Unmutes all input channels

Unmute all outputs

Unmutes all output channels

Close all dialogs

Clears all open dialogs from the workspace

Customizing the Workspace

Create a custom environment to monitor and control a set of inputs, outputs, and processing blocks from a single screen.

There are two ways to break out dialogs:

- Right click > edit
- Double-click the input, output, or processing block

Open as many dialogs as you need to keep important controls available.

Metering and Audio Routing

A meter appears underneath each input and output to indicate signal levels (dBFS). The lines connecting inputs and outputs to the matrix mixer appear colored when connections are established. When a signal is not routed, the line appears gray. Use these tools to troubleshoot audio signals and verify connections and levels.

Mute and Fader Groups

Mute Groups	Check the Mute group box to add the channel to a group. Muting any channel within the Mute group mutes all channels in the group.
Fader Groups	Check the Fader group box to add the channel to a group. All faders within the group are linked, and move together when a single fader is adjusted.

Adjusting Input levels

1. Levels for analog and Dante channels are adjustable in the Input tab.

To monitor input levels before they reach the ANIUSB-MATRIX, set the metering to Pre-gain in the Settings menu. When adjusting the faders, set metering to Post-gain.

Dante Sources

2. Check the source level before it reaches the Network Interface:

- Verify that the networked microphones or other Dante sources are operating at nominal output levels.
- Adjust levels for MXA microphones in Designer.

3. Adjust the digital gain in Designer:

- Use the faders or manually enter a gain value.
- The digital gain adjusts the level of the signal before it reaches the matrix mixer.
- Mix the levels as high as possible without the loudest channel reaching the peak level (0 dB) on the meter.

Note: The matrix mixer provides crosspoint gain, to adjust separate submixes for different outputs.

Parametric Equalizer

Maximize audio quality by adjusting the frequency response with the parametric equalizer. Common equalizer applications:

- Improve speech intelligibility

- Reduce noise from HVAC systems or video projectors
- Reduce room irregularities
- Adjust frequency response for reinforcement systems

If you're using Shure Designer software to configure your system, please check the Designer help section for more about this topic.

Setting Filter Parameters

Adjust filter settings by manipulating the icons in the frequency response graph, or by entering numeric values.

Disable a filter

using the check-box next to the filter.

Filter Type

Only the first and last band have selectable filter types.

Parametric: Attenuates or boosts the signal within a customizable frequency range

Low Cut: Rolls off the audio signal below the selected frequency

Low Shelf: Attenuates or boosts the audio signal below the selected frequency

High Cut: Rolls off the audio signal above the selected frequency

High Shelf: Attenuates or boosts the audio signal above the selected frequency

Frequency

Select the center frequency of the filter to cut/boost

Gain

Adjusts the level for a specific filter (+/- 30 dB)

Q

Adjusts the range of frequencies affected by the filter. As this value increases, the bandwidth becomes thinner.

Width

Adjusts the range of frequencies affected by the filter. The value is represented in octaves.

Note: The Q and width parameters affect the equalization curve in the same way. The only difference is the way the values are represented.



Copy, Paste, Import, and Export Equalizer Channel Settings

These features make it simple to use effective equalizer settings from a previous installation, or simply accelerate configuration time.

Copy and Paste

Use to quickly apply the same PEQ setting across multiple channels. Select the channel from the pull-down menu in the PEQ screen.

Select Copy.

In the pull-down menu, select the channel to apply the PEQ setting and select Paste.

Import and Export

Use to save and load PEQ settings from a file on a computer. This is useful for creating a library of reusable configuration files on computers used for system installation.

Export

Choose a channel to save the PEQ setting, and select Export to file.

Import

Choose a channel to load the PEQ setting, and select Import from file.

Equalizer Applications

Conferencing room acoustics vary based on room size, shape, and construction materials. Use the guidelines in following table.

EQ Application	Suggested Settings
Treble boost for improved speech intelligibility	Add a high-shelf filter to boost frequencies greater than 1 kHz by 3-6 dB.
HVAC noise reduction	Add a low cut filter to attenuate frequencies below 200 Hz
Reduce flutter echoes and sibilance	Identify the specific frequency range that “excites” the room: 1. Set a narrow Q value2. Increase the gain to between +10 and +15 dB, and then experiment with frequencies between 1 kHz and 6 kHz to pinpoint the range of flutter echoes or sibilance3. Reduce the gain at the identified frequency (start between -3 and -6 dB) to minimize the unwanted room sound
Reduce hollow, resonant room sound	Identify the specific frequency range that “excites” the room: 1. Set a narrow Q value2. Increase the gain to between +10 and +15 dB, and then experiment with frequencies between 300 Hz and 900 Hz to pinpoint the resonant frequency3. Reduce the gain at the identified frequency (start between -3 and -6 dB) to minimize the unwanted room sound.

Custom Presets

Use presets to quickly save and recall settings. Up to 10 presets can be stored on each device to match various seating arrangements. A preset saves all device settings except for the Device Name, IP Settings, and Passwords. Importing and exporting presets into new installations saves time and improves workflow. When a preset is selected, the name displays above the preset menu. If changes are made, an asterisk appears next to the name.

Note: Use the default settings preset to revert to the factory configuration (excludes Device Name, IP Settings, and Passwords).

Open the presets menu to reveal preset options:

save as preset:	Saves settings to the device
load preset:	Opens a configuration from the device
import from file:	Downloads a preset file from a computer onto the device. Files may be selected through the browser or dragged into the import window.
export to file:	Saves a preset file from the device onto a computer

Matrix Mixer

The matrix mixer routes audio signals between inputs and outputs for simple and flexible routing:
Send a single input channel to multiple outputs
Send multiple input channels to a single output

Crosspoint Gain

Crosspoint gain adjusts the gain between a specific input and output, to create separate submixes without

changing input or output fader settings. Select the dB value at any crosspoint to open the gain adjustment panel.
Gain staging: Input fader > crosspoint gain > output fader

Routing Channels

Connect inputs and outputs by selecting the box where they intersect.

ANIUSB-MATRIX Default Routes

The matrix mixer creates these default routes. Adjust them to fit your needs

Clear all routes		1	2	3	4
🔍 🔍 Fit		Dante Output 1	Dante Output 2	Analog Output	USB Output
1	Dante Input 1	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input checked="" type="checkbox"/> 0
2	Dante Input 2	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input checked="" type="checkbox"/> 0
3	Dante Input 3	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input checked="" type="checkbox"/> 0
4	Dante Input 4	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input checked="" type="checkbox"/> 0
5	Analog Input	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input checked="" type="checkbox"/> 0	<input checked="" type="checkbox"/> 0
6	USB Input	<input type="checkbox"/> 0	<input type="checkbox"/> 0	<input checked="" type="checkbox"/> 0	

Using Call Status

Designer's Call status feature uses microphone LEDs to show if you're in a videoconferencing call or not. This is a location-level feature, so it applies to all microphones in a Designer location

1. Put all microphones and processors (ANIUSB-MATRIX, IntelliMix Room, or P300) in the same Designer location.
2. Route microphone signals to the processor manually or with Designer's Optimize workflow.
3. Go to [Your location] > Settings > Call status to enable or disable Call status.

When Call status is enabled:

- Microphone LEDs off = Not in a call
- Microphone LEDs on = In a call

Call status is compatible with the following codecs:

- Microsoft Teams
- Microsoft Teams Rooms
- Zoom Client for Meetings
- Zoom Rooms

Note: If your codec is running on a computer with a Chrome operating system, call status will not work.

Encryption

Encryption operates at the room level, meaning that all devices included in the room must have these settings. Audio is encrypted with the Advanced Encryption Standard (AES -256), as specified by the US Government National Institute of Standards and Technology (NIST) publication FIPS-197. Encryption is not supported with third-party devices.

To activate encryption:

1. In a room, click (Settings), located in the upper right.
2. Select Audio encryption.
3. Select Enable Encryption.

The other options allow you to re-key the encryption or disable it if encryption had previously been enabled and you no longer want it.

Important: For encryption to work:

- Encryption must be universally enabled or disabled on all connected Shure devices in the same room.
- AES67 must be disabled in Dante Controller to turn encryption on or off. AES67 encryption is currently not supported.

Note: Encryption will not work between devices on 3.x and 4.x firmware. Update all devices to same the major firmware version to use encryption.

Networking and Dante

Switch and Cable Recommendations for Dante Networking

Switches and cables determine how well your audio network performs. Use high-quality switches and cables to make your audio network more reliable.

Network switches should have:

- Gigabit ports. 10/100 switches may work on small networks, but gigabit switches perform better.
- Power over Ethernet (PoE) or PoE+ ports for any devices that require power
- Management features to provide information about port speed, error counters, and bandwidth used
Ability to switch off Energy Efficient Ethernet (EEE). EEE (also known as “Green Ethernet”) may cause audio dropouts and problems with clock synchronization.

- Diffserv (DSCP) Quality of Service (QoS) with strict priority and 4 queues

Ethernet cables should be:

- Cat5e or better
- Shielded

For more information, see our FAQ about switches to avoid.

Dante Flows for Shure Devices

Dante flows get created any time you route audio from one Dante device to another. One Dante flow can contain up to 4 audio channels. For example: sending all 5 available channels from an MXA310 to another device uses 2 Dante flows, because 1 flow can contain up to 4 channels. Every Dante device has a specific number of transmit flows and receive flows. The number of flows is determined by Dante platform capabilities.

Unicast and multicast transmission settings also affect the number of Dante flows a device can send or receive. Using multicast transmission can help overcome unicast flow limitations.

Shure devices use different Dante platforms:

Dante Platform	Shure Devices Using Platform	Unicast Transmit Flow Limit	Unicast Receive Flow Limit
Brooklyn II	ULX-D, SCM820, MXWAPT, MXWANI, P300, MXCWAPT	32	32
Brooklyn II (without SRAM)	MXA920, MXA910, MXA710, AD4	16	16
Ultimo/UltimoX	MXA310, ANI4IN, ANI4OUT, ANIUSB-MATRIX, ANI22, MXN5-C	2	2
DAL	IntelliMix Room	16	16

Pushing Device Names to the Dante Network

To send a device name to appear in Dante Controller, go to Settings>General and enter a Device Name. Select Push to Dante

to send the name to appear on the network.

Note: names appear in Dante Controller with “-d” attached.

Compatibility with Dante Domain Manager

This device is compatible with Dante Domain Manager software (DDM). DDM is network management software with user authentication, role-based security, and auditing features for Dante networks and Dante-enabled products.

Considerations for Shure devices controlled by DDM:

- When you add Shure devices to a Dante domain, set the local controller access to Read Write. Otherwise, you won't be able to access to Dante settings, perform a factory reset, or update device firmware.

- If the device and DDM can't communicate over the network for any reason, you won't be able to control Dante settings, perform a factory reset, or update device firmware. When the connection is reestablished, the device follows the policy set for it in the Dante domain.
- If Dante device lock is on, DDM is offline, or the configuration of the device is set to Prevent, some device settings are disabled. These include: Dante encryption, MXW association, AD4 Dante browse and Dante cue, and SCM820 linking.

See Dante Domain Manager’s documentation for more information

Configuring IP Settings

IP configurations are managed in Shure Designer software. By default, they are set to Automatic (DHCP) mode. DHCP mode enables the devices to accept IP settings from a DHCP server, or automatically fall back to Link-Local settings when no DHCP is available. IP addresses may also be manually set.

To configure the IP properties, follow these steps:

1. Open device’s configuration window.
2. Go to the Settings tab and select Network.
3. Select Auto or Manual. If Auto is used, addresses will be automatically assigned. For Manual setup, follow the instructions on manual configuration.

Setting Latency

Latency is the amount of time for a signal to travel across the system to the outputs of a device. To account for variances in latency time between devices and channels, Dante has a predetermined selection of latency settings. When the same setting is selected, it ensures that all Dante devices on the network are in sync.

These latency values should be used as a starting point. To determine the exact latency to use for your setup, deploy the setup, send Dante audio between your devices, and measure the actual latency in your system using Audinate’s Dante Controller software. Then round up to the nearest latency setting available, and use that one. Use Audinate’s Dante Controller software to change latency settings.

Latency Recommendations

Latency Setting	Maximum Number of Switches
0.25 ms	3
0.5 ms (default)	5
1 ms	10
2 ms	10+

IP Ports and Protocols

Shure Control

Port	TCP/UDP	Protocol	Description	Factory Default
21	TCP	FTP	Required for firmware updates (otherwise closed)	Closed
22	TCP	SSH	Secure Shell Interface	Closed

Port	TCP/UDP	Protocol	Description	Factory Default
23	TCP	Telnet	Not supported	Closed
53	UDP	DNS	Domain Name System	Closed
67	UDP	DHCP	Dynamic Host Configuration Protocol	Open
68	UDP	DHCP	Dynamic Host Configuration Protocol	Open
80*	TCP	HTTP	Required to launch embedded web server	Open
443	TCP	HTTPS	Not supported	Closed
2202	TCP	ASCII	Required for 3rd party control strings	Open
5353	UDP	mDNS†	Required for device discovery	Open

5568	UDP	SDT (multicast) [†]	Required for inter-device communication	Open
57383	UDP	SDT (unicast)	Required for inter-device communication	Open
8023	TCP	Telnet	Debug console interface	Closed
8180	TCP	HTML	Required for web application (legacy firmware only)	Open
8427	UDP	SLP (multicast) [†]	Required for inter-device communication	Open
64000	TCP	Telnet	Required for Shure firmware update	Open

*These ports must be open on the PC or control system to access the device through a firewall.

These protocols require multicast. Ensure multicast has been correctly configured for your network.

[See Audinate's website](#) for information about ports and protocols used by Dante audio.

Using Command Strings

this device receives logic commands over the network. Many parameters controlled through Designer can be controlled using a third-party control system, using the appropriate command string.

Common applications:

- Mute
- LED color and behavior
- Loading presets
- Adjusting levels

A complete list of command strings is available at:
pubs.shure.com/command-strings/ANIUSB-Matrix.

Reset

The reset button is located inside a small hole in the rear panel. Use a paperclip or other small tool to press the button.

There are two hardware reset functions:

Network reset (press button for 4-8 seconds)

Resets all Shure control and audio network IP settings to factory defaults

Full factory reset (press button for longer than 8 seconds)

Restores all network and Designer settings to the factory defaults.

Software Reset Options

To simply revert settings without a complete hardware reset, use one of the following options:

Reboot Device:Power-cycles the device as if it were unplugged from the network. All settings are retained when the device is rebooted.

Default Settings: To revert audio settings back to the factory configuration (excluding Device Name, IP Settings, and Passwords), select Load Preset and choose the default settings preset.

Troubleshooting

Problem	Solution
Software lags in Google Chrome browser	Problem is browser-related. Turn off hardware acceleration option in Chrome.
Sound quality is muffled	Use equalizer to adjust frequency response. See the equalizer applications for the appropriate use.
Audio sounds too high or too low in pitch	Make sure that the sample rate settings for Playback and Recording are the same in your computer's sound settings. If these sample rates do not match, the audio may sound too high or too low in pitch.
Hardware does not show up in device discovery	Ensure the devices are powered Ensure PC and equipment are on the same network and set to the same subnet Turn off other network interfaces not used to connect to the device (including WiFi) Check that DHCP server is functioning (if applicable) Reset the device
No audio	Verify the ANIUSB-MATRIX is selected as the audio device in the audio devices or properties panel on the computer Audio channels must be routed to an output through the matrix mixer

Problem	Solution
	Connections between devices must be established in Dante Controller™ software Check cables Verify that input/output channels are not muted Check that fader levels are not set too low Make sure there is not an encryption error — a passphrase mismatch or encryption only enabled on one device disrupts audio.
Cannot route Dante audio channels	®Install latest version of Dante Controller from Audinate, available at www.audinate.com .
Hardware does not power on	The network switch must supply Power over Ethernet. Other-wise, a PoE injector must be used Check network cables and connections

Event Log

The event log provides a detailed account of activity from the moment the device is powered on. The log collects up to 1,000 activity entries and time-stamps them relative to the last power cycle. The entries are stored in the internal memory, and are not cleared when the device is power-cycled. The Export feature creates a CSV (comma separated values) document to save and sort the log data.

Refer to the log file for details when troubleshooting or consulting with Shure Systems Support.

1. To view the event log:
2. Open the Help menu
Select View Event Log

Severity Level

Information

An action or event has been successfully completed

Warning

An action cannot be complete, but overall functionality is stable

Error

A problem has occurred that could inhibit functionality.

Log Details

Description

Provides details on events and errors, including IP address and subnet mask.

Time Stamp

Power cycles:days:hours:minutes:seconds since most recent boot-up.

Event ID

Indicates event type for internal reference

Tip: Use the filter to narrow down results. Select a category heading to sort the log.

Contact Customer Support

Didn't find what you need? Contact our customer support to get help.

Specifications

General

Analog Connections

Input	(1) 3-pin block connector (Active Balanced)
Output	(1) 3-pin block connector (Impedance Balanced)

USB Connections

(1) USB 2.0, Type B
Network Connections (Dante Digital Audio)
(1) RJ45
4 input channels, 2 output channels

Polarity

Non-inverting, any input to any output

Power Requirements

Power over Ethernet (PoE), Class 0. (PoE Plus compatible).

Power Consumption

6.5W, maximum

Weight

668 g (1.5 lbs)

Dimensions

H x W x D
4 x 14 x 12.8 cm (1.6 x 5.5 x 5.0 in.)

Control Software

Shure Designer

Operating Temperature Range

−6.7°C (20°F) to 40°C (104°F)

Storage Temperature Range

−29°C (-20°F) to 74°C (165°F)

Thermal Power Dissipation

Maximum	6.8W (23.0BTU/hr)
typical	6.0W (20.8BTU/hr)

Audio**Frequency Response**

+1, -1.5 dB

20 to 20,000 Hz

Dante Digital Audio

Sampling Rate	48 kHz
Bit Depth	24

USB Audio

Sampling Rate	48 kHz
Bit Depth	16, 24

Latency

Does not include Dante latency	Analog to Analog	0.98 ms
	Analog to Dante	0.39 ms
	Dante to Analog	0.72 ms
	Dante to Dante	0.14 ms

Dynamic Range

20 Hz to 20 kHz, A-weighted, typical

Analog-to-Dante	113 dB
Dante-to-Analog	117 dB

Total Harmonic Distortion

@ 1 kHz, 0 dBV Input, 0 dB analog gain <0.05%

Common Mode Rejection Ratio

150Ω balanced source @ 1 kHz >70 dB

Impedance

10.6 kΩ

Input Clipping Level

Line	-86 dBV
Aux	-98 dBV

Output Clipping Level

Line	+20 dBV
Aux	+0 dBV
Mic	-26 dBV

Built-in Digital Signal Processing

Per Channel	Equalizer (4-band Parametric, Analog and USB output channels only) , Mute, Limiter, Gain (140 dB range)
System	Matrix mixer

Networking

Cable Requirements

Cat 5e or higher (shielded cable recommended)

Optional Accessories and Replacement Parts



Safety Information

IMPORTANT SAFETY INSTRUCTIONS

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Allow sufficient distances for adequate ventilation and install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as open flames, radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not place any open flame sources on the product.
9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. ONLY USE attachments/accessories specified by the manufacturer.



12. USE only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
When a
cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. DO NOT expose the apparatus to dripping and splashing. DO NOT put objects filled with liquids, such as vases, on the apparatus.
16. The MAINS plug or an appliance coupler shall remain readily operable.
17. The airborne noise of the Apparatus does not exceed 70dB (A).
18. Apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.
19. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
20. Do not attempt to modify this product. Doing so could result in personal injury and/or product failure.
21. Operate this product within its specified operating temperature range

	This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.
	This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

Important Product Information

The equipment is intended to be used in professional audio applications. Note: This device is not intended to be connected directly to a public internet network. EMC conformance to Environment E2: Commercial and Light Industrial. Testing is based on the use of supplied and recommended cable types. The use of other than shielded (screened) cable types may degrade EMC performance. Changes or modifications not expressly approved by Shure Incorporated could void your authority to operate this equipment.

Industry Canada ICES-003 Compliance Label: CAN ICES-3 (B)/NMB-3(B)

)Authorized under the verification provision of FCC Part 15B. Please follow your regional recycling scheme for batteries, packaging, and electronic waste. Dante is a registered trademark of Audinate Pty Ltd.

Information to the user

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause interference with radio and television reception.

Notice: The FCC regulations provide that changes or modifications not expressly approved by Shure Incorporated could void your authority to operate this equipment.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user

is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

The CE Declaration of Conformity can be obtained from: www.shure.com/europe/compliance

Authorized European representative: Shure Europe GmbH Global Compliance Jakob-Dieffenbacher-Str. 12 75031 Eppingen, Germany


Phone: +49-7262-92 49 0

Email: info@shure.de www.shure.com

This product meets the Essential Requirements of all relevant European directives and is eligible for CE marking.

The CE Declaration of Conformity can be obtained from Shure Incorporated or any of its European representatives. For contact information please [visit www.shure.com](http://www.shure.com)

Documents / Resources

	<p>SHURE ANIUSB Matrix Audio Network Interface [pdf] User Guide ANIUSB Matrix Audio Network Interface, ANIUSB, Matrix Audio Network Interface, Audio Network Interface, Network Interface, Interface</p>
---	--

References

-  [ANIUSB-Matrix](#)
-  [Shure: Microphones, Wireless microphones, in-ear monitoring, earphones, headphones](#)

-  [ANIUSB-Matrix](#)
-  [Designer - System Configuration Software - Shure USA](#)
-  [Audinate - Pioneering the future of AV](#)
-  [Shure: Microphones, Wireless microphones, in-ear monitoring, earphones, headphones](#)
-  [Designer - System Configuration Software - Shure USA](#)
-  [Documentation Finder - Shure Europe](#)
-  [Audinate - Pioneering the future of AV](#)
-  [ANI22](#)
-  [ANI4IN](#)
-  [ANI4OUT](#)
-  [ANIUSB-Matrix](#)
-  [IntelliMix Room](#)
-  [MXA-MUTE](#)
-  [MXA310](#)
-  [MXA710](#)
-  [MXA910, MXA910-60CM, MXA910W-A, MXA910W-US](#)
-  [MXN5-C](#)
-  [P300](#)
-  [Service](#)
-  [Audinate - Pioneering the future of AV](#)
-  [Service](#)
-  [Designer - System Configuration Software - Shure USA](#)
-  [Service](#)
-  [ANIUSB-MATRIX - ANIUSB-MATRIX USB Audio Network Interface with Matrix Mixing - Shure USA](#)
-  [IntelliMix P300 - Audio Conferencing Processor - Shure USA](#)
-  [IntelliMix P300 - Audio Conferencing Processor - Shure USA](#)
-  [Designer - System Configuration Software - Shure USA](#)
-  [IntelliMix® Room - Audio Processing Software - Shure USA](#)
-  [Device Discovery - Shure Web Device Discovery Application - Shure USA](#)
-  [Service](#)
-  [Firmware - Shure USA](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.