



Shuttle BPCWL03 Computer Group User Manual

[Home](#) » [Shuttle](#) » Shuttle BPCWL03 Computer Group User Manual 

Shuttle®

User Manual
BPCWL03

Contents

- [1 BPCWL03 Computer Group](#)
- [2 Preface](#)
- [3 Getting to know the basics](#)
- [4 Hardware Installation](#)
- [5 BIOS Setup](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

BPCWL03 Computer Group

Notice

The illustrations in this user's manual are for reference only. Actual product specifications may vary with territories. The information in this user's manual is subject to change without notice.

THE MANUFACTURER OR RESELLER SHALL NOT BE LIABLE FOR ERRORS OR OMISSIONS CONTAINED IN THIS MANUAL AND SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL DAMAGES, WHICH MAY RESULT FROM THE PERFORMANCE OR USE OF THIS MANUAL.

The information in this user's manual is protected by copyright laws. No part of this manual may be photocopied or reproduced in any form without prior written authorization from the copyright owners. Product names mentioned herein may be trademarks and/or registered trademarks of their respective owners/companies. The software described in this manual is delivered under a license agreement. The software may be used or copied only in accordance with the terms of the agreement.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights.

Reverse engineering or disassembly is prohibited. Do not throw this electronic device into the trash when discarding it. To minimize pollution and ensure the utmost protection of the global environment, please recycle.

For more information on the Waste from Electrical and Electronics Equipment (WEEE) regulations, visit http://ec.europa.eu/environment/waste/weee/index_en.htm

Preface

1.1 Regulations information

- CE compliance

This device is classed as technical information equipment (ITE) in class A and is intended for use in commercial, transport, retailer, public, and automation...field.

- FCC rules

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



CAUTION: Any changes or modifications not expressly approved by the guarantee of this device could void the user's authority to operate the equipment.

1.2 Safety instructions

The following safety precautions will increase the life of the Box-PC.
Follow all Precautions and instructions.

Do not place this device underneath heavy loads or in an unstable position.

Do not use or expose this device around magnetic fields as magnetic interference may affect the performance of the device.

Do not expose this device to high levels of direct sunlight, high humidity, or wet conditions.

Do not block the air vents to this device or impede the airflow in any way.

Do not expose to or use near liquid, rain, or moisture.

Do not use the modem during electrical storms. The unit can be operated at an ambient temperature of max. 60°C (140°F). Do not expose it to temperatures below -20°C (-4°F) or above 60°C (140°F).

Ideal for industrial applications: factory, engine room... etc. Touching of Box-PC in operation at a temperature range of -20°C (-4°F) and 60°C (140°F) must be avoided.



Caution high surface temperature!

Please don't touch the set directly till the set cools down.



CAUTION: Incorrectly replacing the battery may damage this computer. Replace only with the same or equivalent as recommended by Shuttle. Dispose of used batteries according to the manufacturer's instructions.

1.3 Notes for this manual



CAUTION! Important information must be followed for safe operation.



NOTE: Information for special situations.

1.4 Release history

| Version | Revision note | Date |
|---------|----------------|--------|
| 1.0 | First released | 1.2021 |

Getting to know the basics

2.1 Product specification

This User's Manual provides instructions and illustrations on how to operate this Box-PC. It is recommended to read this manual carefully before using this Box-PC.

Physical characteristic

Dimension : 245(W) x 169(D) x 57(H) mm

Weight: NW. 2.85 KG / GW. 3 KG (depend upon the actually shipping product)

CPU

Support Intel® 8th Generation Core™ i3 / i5 / i7, Celeron® CPU

Memory

Support DDR4 dual channel 2400 MHz, SO-DIMM (RAM socket *2) , Max up to 64G

Storage

1x PCIe or SATA I/F (optional)

I/O port

4 x USB 3.0

1 x HDMI 1.4

2 x Audio jacks (Mic-in & Line-out)

1 x COM (RS232 only)

1 x RJ45 LAN

1 x RJ45 2nd LAN (optional)

1 x DC-in

AC adapter: 90 watts, 3 pin



 
CAUTION! THE MODEL IS DESIGNED TO USE WITH THE DC INPUT:








(19Vdc / 4.74A) ADAPTERS. The adapter watt should follow the default setting or refer to the rating label information.

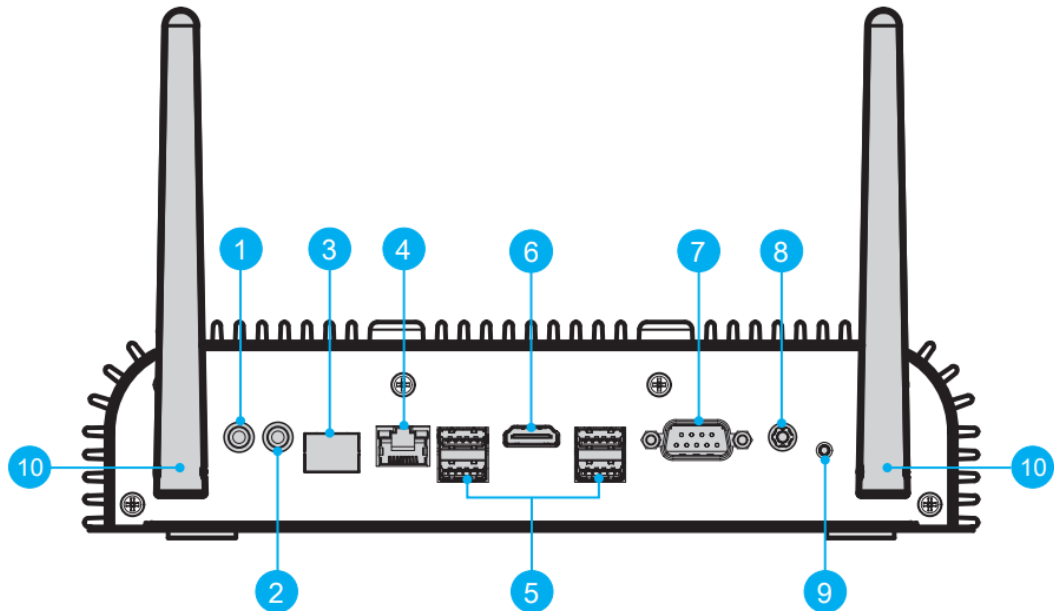2.2 Product overview


NOTE: The product's color, I/O port, indicator location, and specification will depend upon the actually shipping product.

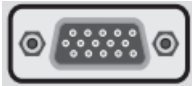- Front Panel: Optional I/O ports are available depending on the specs of the actually shipping product.



| Optional I/O Port | Occupied Sections | | Specifications / Limitations |
|----------------------|-------------------|---|---|
| HDMI 1.4 / 2.0 | 1 |  | Choose one of four optional display boards. Max. resolution: 1. HDMI 1.4: 4k/30Hz 2. HDMI 2.0: 4k/60Hz 3. DisplayPort: 4k/60Hz 4. DVI-I/D-Sub: 1920×1080 |
| DisplayPort 1.2 (DP) | 1 |  | |
| D-Sub (VGA) | 1 |  | |
| DVI-I (Single Link) | 1 |  | |
| USB 2.0 | 1 |  | Maximum: 2 x Quad USB 2.0 board |
| COM4 | 1 |  | RS232 only |
| COM2, COM3 | 2 |  | RS232 / RS422 / RS485 Power supply: Ring in/5V |

 - **Back Panel:** Refer to the following illustration to identify the components on this side of the Box-PC. Features and configurations vary by model.

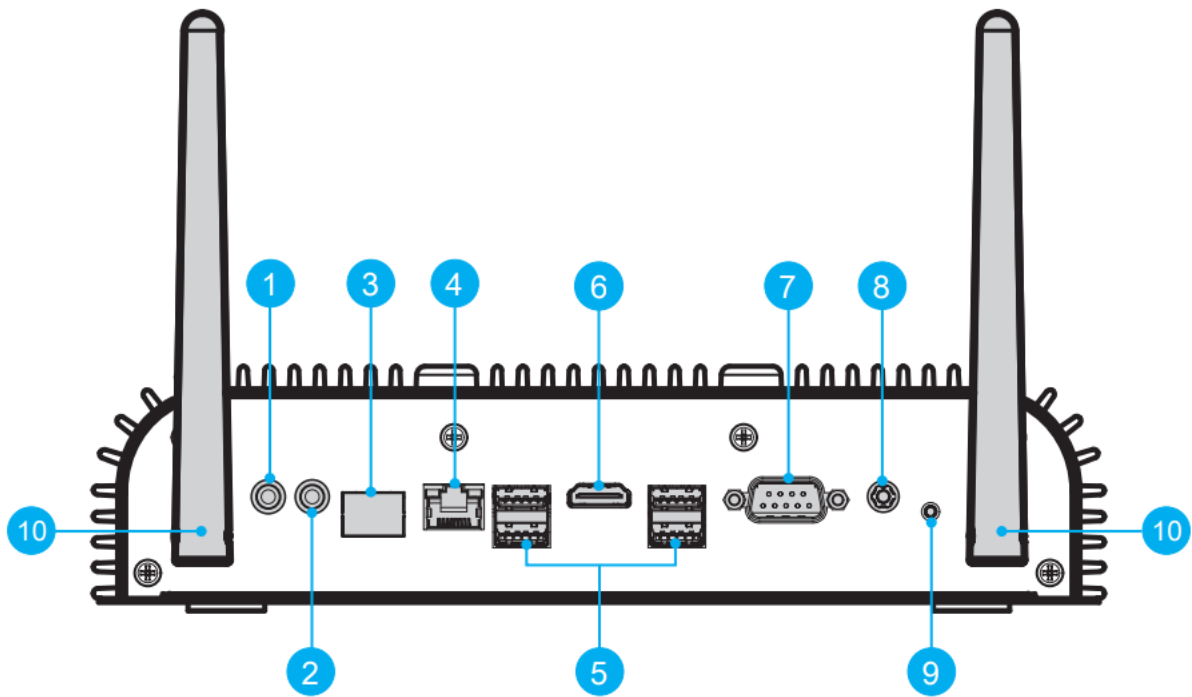

1. Headphones / Line-out jack
2. Microphone jack
3. LAN port (supports wake on LAN)(optional)
4. LAN port (supports wake on LAN)
5. USB 3.0 Ports
6. HDMI port
7. COM port (RS232 only)
8. Power jack (DC-IN)
9. Power button
10. Connector for WLAN Dipole antennas (optional)

 
Hardware Installation

3.1 Begin Installation



CAUTION! For safety reasons, please ensure that the power cord is disconnected before opening the case.

1. Unscrew the ten screws of the chassis cover and remove it.

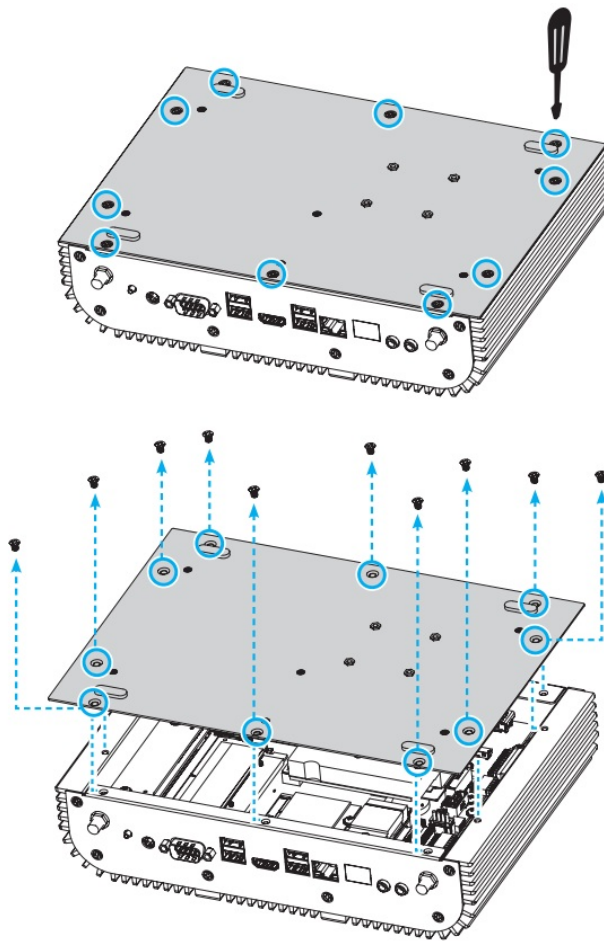


3.2 Memory Module Installation




CAUTION! This motherboard does only support 1.2 V DDR4 SO-DIMM memory modules.

 
1. Locate the SO-DIMM slots on the motherboard.
2. Align the notch of the memory module with one of the relevant memory slots.

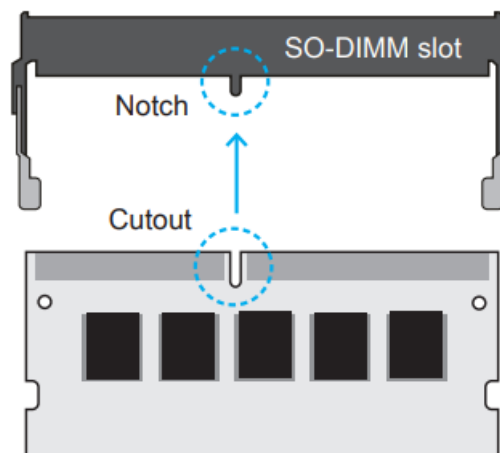

 3. Gently insert the module into the slot in a 45-degree angle.
4. Carefully push down the memory module until it snaps into the locking mechanism.

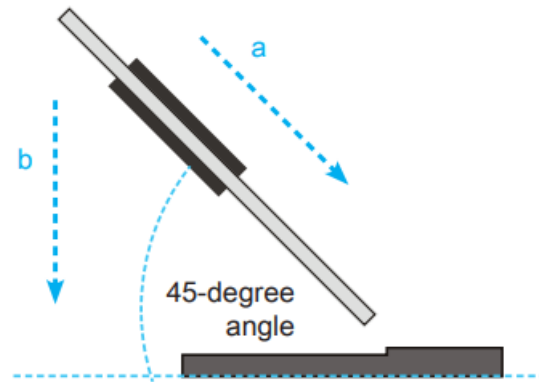


 5. Repeat the above steps to install an additional memory module, if required.

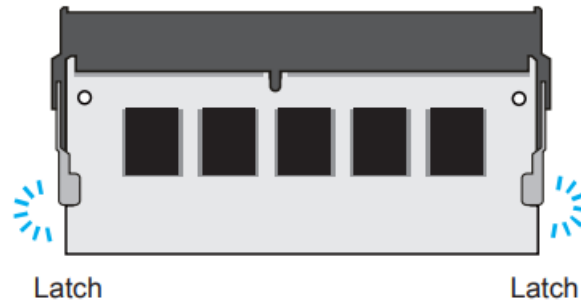


3.3 M.2 Device Installation

 
1. Locate the M.2 key slots on the motherboard, and unfasten the screw first.
 - M.2 2280 M key slot

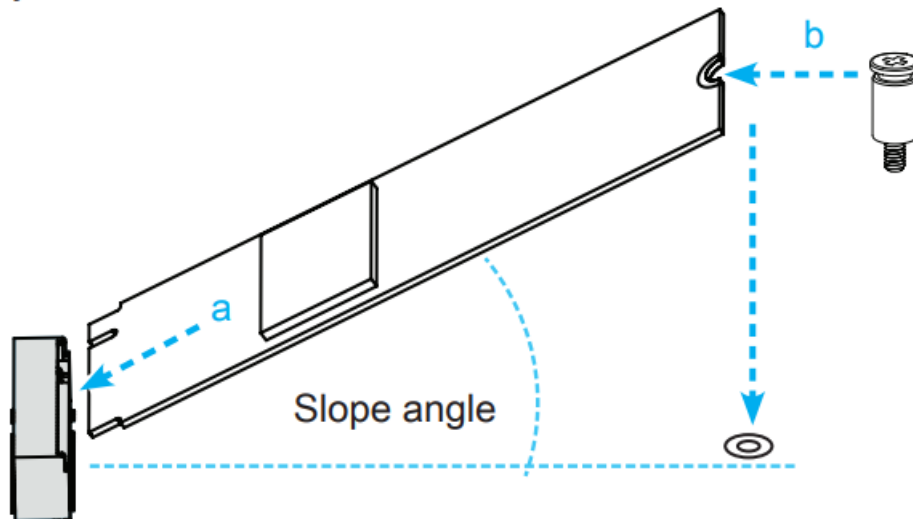

 2. Install the M.2 device into the M.2 slot and secure it with the screw.

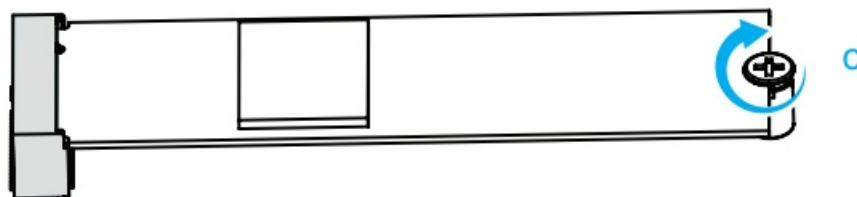

 3. Please replace and affix the chassis cover with ten screws.

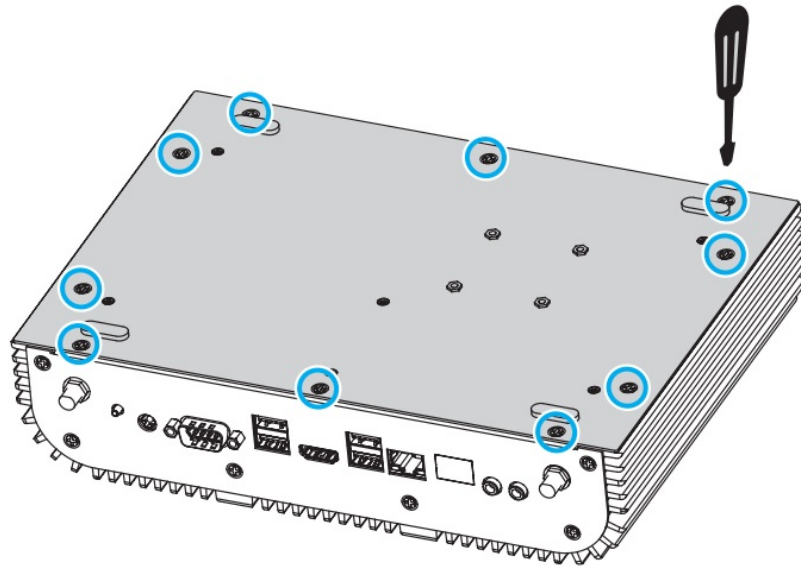


3.4 Powering on the system

Follow the steps (1-3) below to connect the AC adapter to the power jack (DC-IN). Press the power button (4) to turn on the system.



 NOTE: Press and hold the power button for 5 seconds to force shutdown.

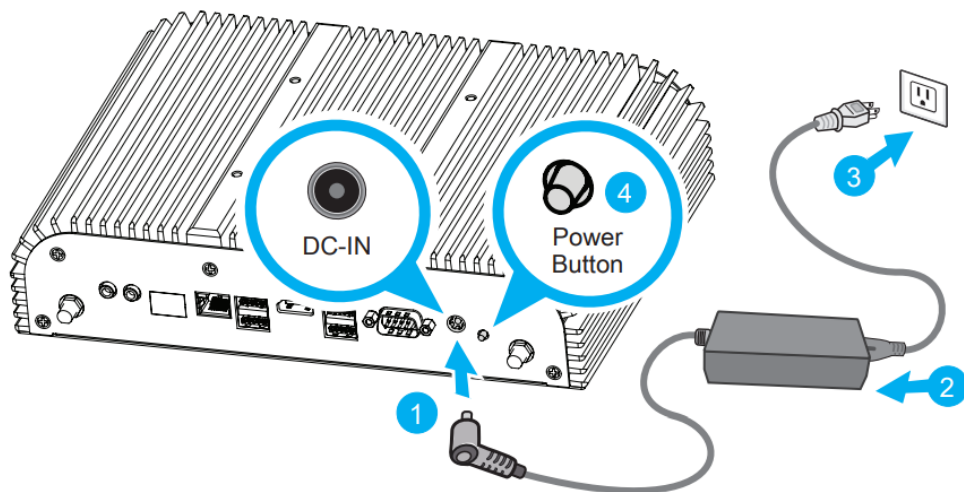


CAUTION: Do not use inferior extension cords as this may result in damage to your Box-PC. The Box-PC comes with its own AC adapter. Do not use a different adapter to power the Box-PC and other electrical devices.



NOTE: The power adapter may become warm to hot when in use. Be sure not to cover the adapter and keep it away from your body.

3.5 Installation of WLAN antennas (optional)

 
1. Take the two antennas out of the accessory box.
2. Screw the antennas onto the appropriate connectors on the back panel. Make sure the antennas are aligned vertically or horizontally to achieve the best possible signal reception.

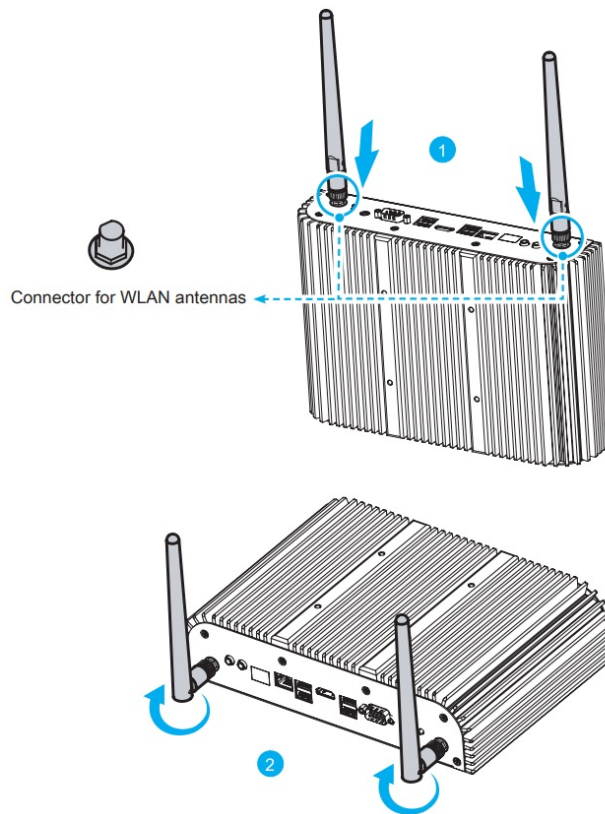

CAUTION: Make sure the two antennas are aligned in the correct direction.

3.6 VESA mounting it to the wall (optional)


 
The standard VESA openings show where an arm/wall mount kit which is available separately can be attached.

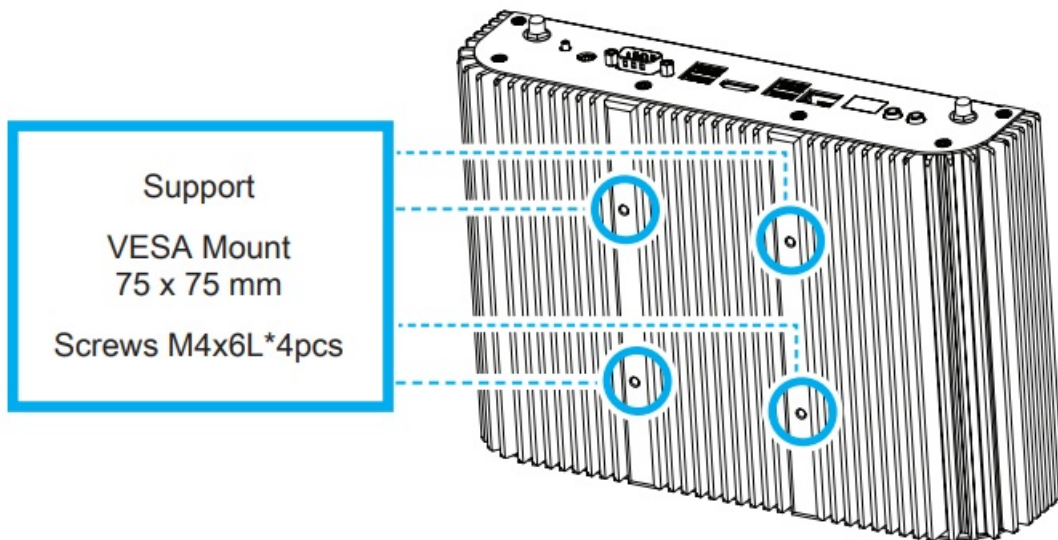

NOTE: The Box-PC can be wall-mounted using a VESA compatible 75 mm x 75 mm wall/arm bracket. The maximum load capacity is 10 kg and mounting suitable in heights of ≤ 2 m only. The metal thickness of the VESA mount must be between 1.6 and 2.0 mm.


3.7 Ear mounting to the wall (optional)

  Follow steps 1-2 to install the ear mount.

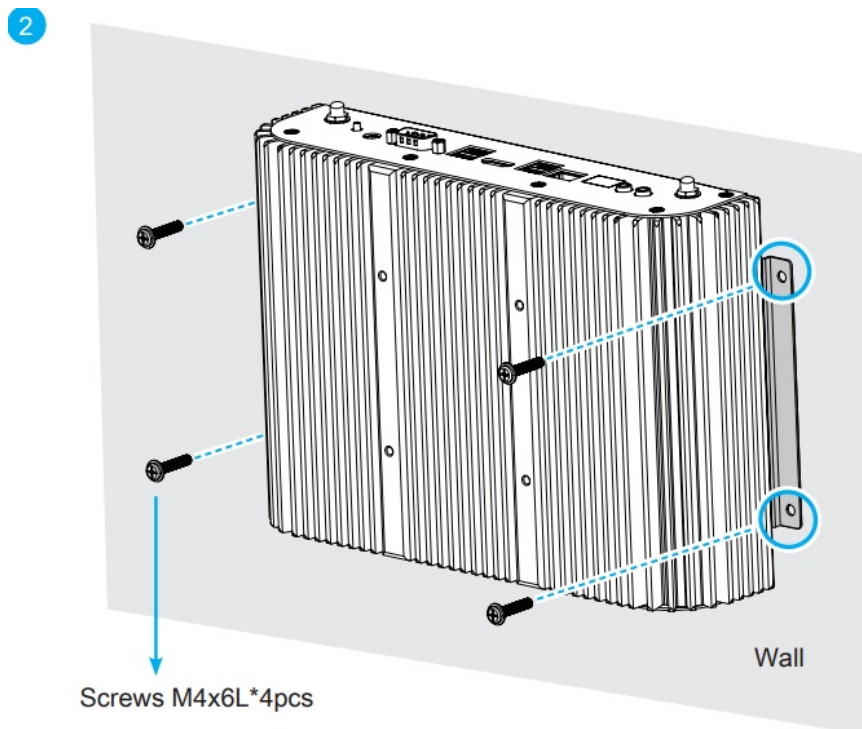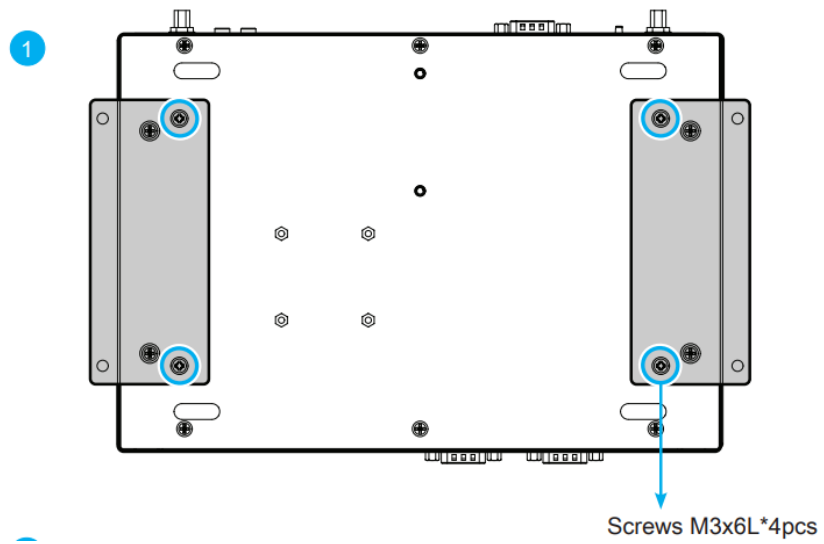

3.8 Using the Din Rail (optional)

 Follow steps 1-5 to affix the Box-PC on a DIN rail.

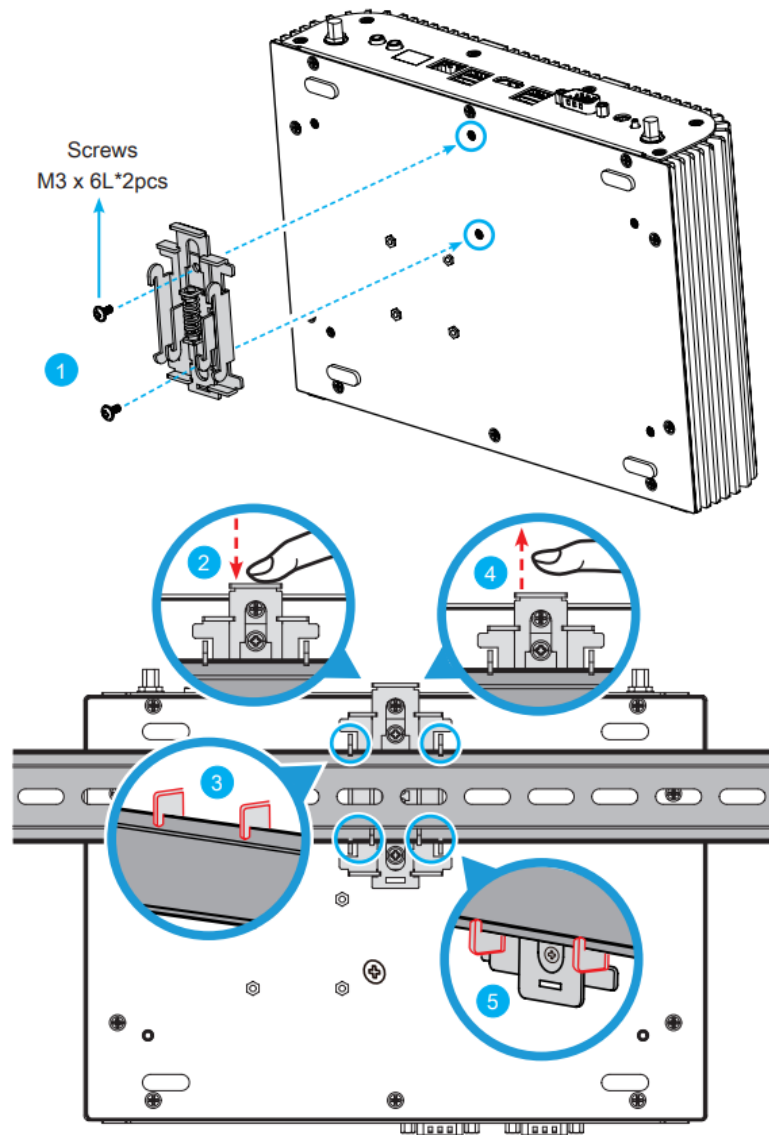

BIOS Setup

4.1 About BIOS Setup

The default BIOS (Basic Input/Output System) is already properly configured and optimized, there is normally no need to run this utility.

4.1.1 When to Use BIOS Setup?

You may need to run the BIOS Setup when:

- An error message appears on the screen during the system booting up and is requested to run SETUP.
- You want to change the default settings for customized features.
- You want to reload the default BIOS settings.




CAUTION! We strongly recommend that you change the BIOS settings only with the help of trained service personnel.

4.1.2 How to run BIOS Setup?


To run the BIOS Setup Utility, turn on the Box-PC and press the [Del] or [F2] key during the POST procedure. If the message disappears before you respond and you still wish to enter Setup, either restart the system by turning it OFF and ON or simultaneously pressing the [Ctrl]+[Alt]+[Del] keys to restart. The setup function only can be invoked by pressing the [Del] or [F2] key during POST which provide an approach to change some setting and configuration the user prefers, and the changed values will save in the NVRAM and will take effect after the

system rebooted. Press the [F7] key for Boot Menu.

When OS support is Windows 10 :

1. Click the Start  menu and select Settings.
2. Select Update and Security.
3. Click Recovery
4. Under Advanced startup, click Restart now.
The system will restart and show the Windows 10 boot menu.
5. Select Troubleshoot.
6. Choose Advanced options.
7. Select UEFI Firmware Settings.
8. Click Restart to restart the system and enter UEFI (BIOS).

Documents / Resources
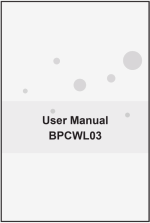
| | |
|--|---|
|  | Shuttle BPCWL03 Computer Group [pdf] User Manual BPCWL03 Computer Group, BPCWL03, Computer Group |
|--|---|