



SHXCHD24101 Dancing and Singing Christmas Instruction Manual

[Home](#) » [SHX](#) » SHXCHD24101 Dancing and Singing Christmas Instruction Manual 

SHXCHD24101 Dancing and Singing Christmas



Contents

- [1 Introduction](#)
- [2 Safety Notes](#)
- [3 Battery Notice](#)
- [4 Inserting Batteries](#)
- [5 Operation](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Introduction

Thank you for purchasing this dancing Christmas figure. With this Christmas decoration, you will surely create the perfect atmosphere on Christmas Eve. Please take the time to carefully read the instruction manual and follow the provided instructions and advice to ensure that you will enjoy your new Christmas figure for a long time ..

Current User Manuals

Download the latest user manuals via the link www.shx.at/downloads or scan the QR code shown. Follow the instructions on the website.



The scope of delivery

- Dancing and singing christmas figure
- Instruction Manual

Additionally required: 3 Batteries of type AA

Safety Notes

Dispose of packaging materials thoughtfully, as they could pose a danger to children.

Modifying or altering the product affects product safety.

Never open the product on your own, except for battery replacement. Never attempt repairs yourself! Keep the product away from moisture and extreme heat.

Never immerse the product in water or other liquids.

Avoid subjecting the product to mechanical stress.

Protect the product from extreme temperatures, severe impacts, as well as flammable gases, vapors, and solvents.

If safe operation is no longer possible, take the product out of service and protect it from unintended use.

ABSOLUTELY refrain from attempting to repair the product yourself. Safe operation is no longer guaranteed if the product: a) exhibits visible damage, b) no longer functions properly, c) has been stored under unfavorable environmental conditions for an extended period, or d) has been subjected to significant transportation stress.

Battery Notice

Ensure correct insertion of batteries according to polarity.

If the product will not be used for an extended period, remove the batteries to prevent leakage and resulting damage.

Contact with leaking or damaged batteries may cause skin burns. Use protective gloves when handling damaged batteries.

Store batteries out of reach of children and pets, and avoid leaving them lying around to minimize the risk of ingestion.

When replacing batteries, all should be replaced simultaneously. A combination of old and new batteries may cause leaks and damage the product.


Batteries should not be disassembled, short-circuited, or thrown into fire. Non-rechargeable batteries should not be charged, as this poses an explosion risk!

Inserting Batteries

Open the battery compartment on the back of the figure and insert 3 AA batteries as shown in the illustration. Close the compartment again.

Operation

With the sliding switch on the back of the figure, you can turn it on and off.
Then, place the figure on a flat, smooth surface.
Press the button (see illustration) to activate the figure.

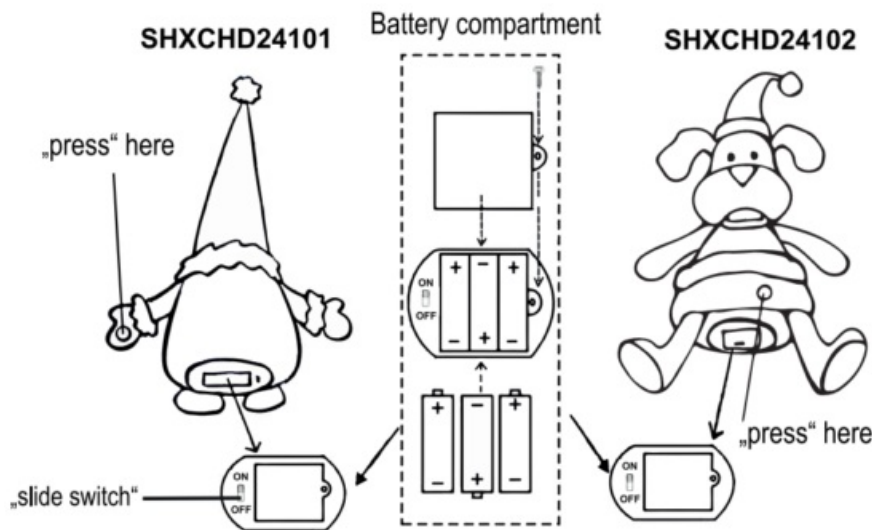

Recycling, Disposal, Declaration of Conformity

RECYCLING

The packaging materials can be recycled. Therefore, it is recommended to dispose of them in sorted waste.

DISPOSAL



The symbol "crossed-out wheeled bin" requires the separate disposal of waste electrical and electronic equipment (WEEE). Electrical and electronic devices may contain hazardous and environmentally harmful substances. Therefore, do not dispose of them in unsorted residual waste, but at designated collection points for electrical and electronic waste. This contributes to the protection of resources and the environment. For further information, please contact your dealer or local authorities. Directive 2012/19/EU.

DECLARATION OF CONFORMITY C E




We hereby confirm that this product complies with the basic requirements, regulations, and directives of the EU.

You can view the detailed declaration of conformity at any time via the following link: <https://www.schuss-home.at/downloads>

Errors and technical changes reserved.



Documents / Resources

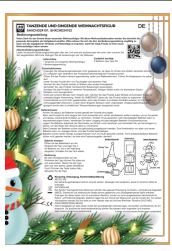

[SHX SHXCHD24101 Dancing and Singing Christmas](#) [pdf] Instruction Manual
SHXCHD24101, SHXCHD24101 Dancing and Singing Christmas, Dancing and Singing Christmas, Singing Christmas, Christmas

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.