



**CT180CM  
Artificial  
Christmas  
Tree**



## SHXCT180CM Artificial Christmas Tree User Manual

[Home](#) » [SHX](#) » SHXCT180CM Artificial Christmas Tree User Manual 

### Contents

- [1 SHXCT180CM Artificial Christmas Tree](#)
- [2 Specifications](#)
- [3 FAQs](#)
- [4 PRODUCT INFORMATION](#)
- [5 Scope of delivery](#)
- [6 Safety note](#)
- [7 Assembly instructions](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)



**SHXCT180CM Artificial Christmas Tree**



## Specifications

- Model: SHXCT180CM
- Type: Artificial Christmas Tree
- Height: 180cm

## FAQs

### **Q: Can I leave the tree assembled year-round?**

A: While it is possible, we recommend disassembling and storing the tree in a cool, dry place when not in use to prolong its lifespan.

### **Q: Are replacement parts available for this tree?**

A: Yes, replacement parts may be available through our customer service or authorized retailers. Please contact us for more information.

## PRODUCT INFORMATION

Thank you for purchasing this artificial Christmas tree. With proper use and care, your tree will provide years of

trouble-free enjoyment. Carefully follow the instructions below to assemble and disassemble your tree.

### Current operating instructions

Download the latest operating instructions via the link [www.shx.at/downloads](http://www.shx.at/downloads) or scan the QR code shown. Follow the instructions on the website




### Scope of delivery



Base



Fixing screws  
for the stand

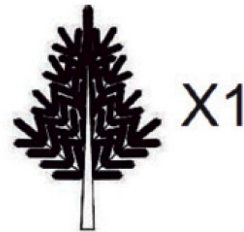

Upper part of the  
Christmas tree



Lower parts of the  
Christmas tree

### Safety note

- Do not dispose of packaging materials thoughtlessly, as they could pose a danger to children.
- Read the assembly instructions carefully to set up the tree safely and ensure that all parts are connected correctly.
- Make sure the tree is stable and cannot easily tip over, especially if it is decorated with heavy decorations.
- Although artificial trees are less susceptible to fire than real trees, you should still make sure that the tree is kept away from heat sources such as fireplaces, heaters, or open flames.
- Keep small children and pets from climbing the tree or pulling on the branches to prevent decorations from toppling or falling.
- Check the tree for sharp edges or pointed parts and make sure that these are positioned so that no one is accidentally injured.
- Check the stability of the tree regularly, especially after adding decorations, and correct any instabilities immediately.

### Assembly instructions

- Open the base to form an “X”. Align the holes for inserting the 3 fixing screws. Insert each screw and turn it clockwise for a few turns.
- Place the stand on a level floor.
- Place the lowest part of the tree on the base and tighten the 3 screws firmly so that the lower part of the tree

cannot be detached from the base.

- Unfold the branches to give the Christmas tree a nice shape.
- Now place the middle part of the Christmas tree on the lower part and unfold the branches until they have a nice shape.
- Finally, place the top part of the Christmas tree on the center part of the Christmas tree and unfold the branches.



Recycling, Declaration of Conformity

## RECYCLING

The packaging materials can be recycled. It is therefore recommended to dispose of them in sorted waste

## DECLARATION OF CONFORMITY

We hereby confirm that this product complies with the essential requirements, regulations, and directives of the EU. You can view the detailed declaration of conformity at any time under the following link: <https://www.schuss-home.at/downloads>

## Documents / Resources



[SHX SHXCT180CM Artificial Christmas Tree](#) [pdf] User Manual  
SHXCT180CM, SHXCT180CM Artificial Christmas Tree, Artificial Christmas Tree, Christmas Tree, Tree

## References

- [Home » Schuss Home Electronic](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.