



# SIEMENS QFA3150 Humidity and Temperature Sensor Instruction Manual

[Home](#) » [SIEMENS](#) » SIEMENS QFA3150 Humidity and Temperature Sensor Instruction Manual 

## Contents


- [1 SIEMENS QFA3150 Humidity and Temperature Sensor](#)
- [2 Mounting Instructions](#)
- [3 Connecting Terminals](#)
- [4 Dimensions](#)
- [5 Open Source Software \(OSS\)](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)


# SIEMENS

**SIEMENS QFA3150 Humidity and Temperature Sensor**




## Mounting Instructions

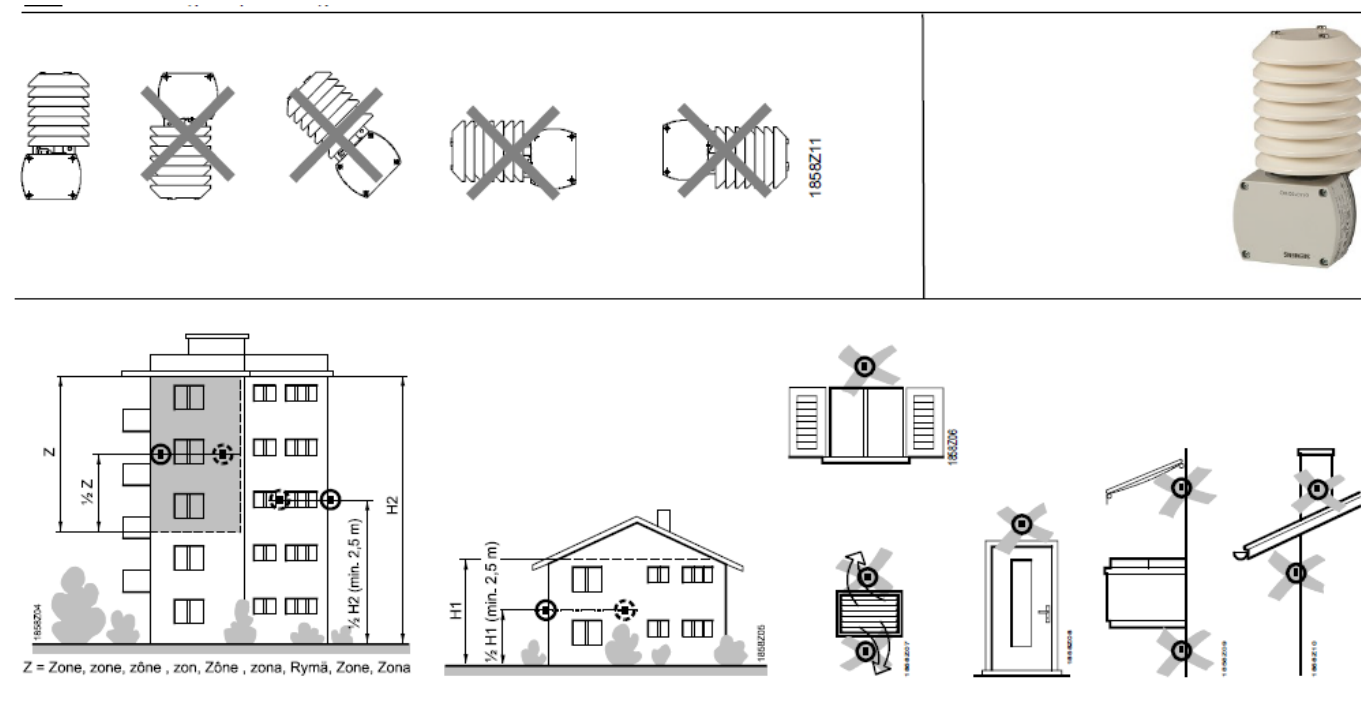

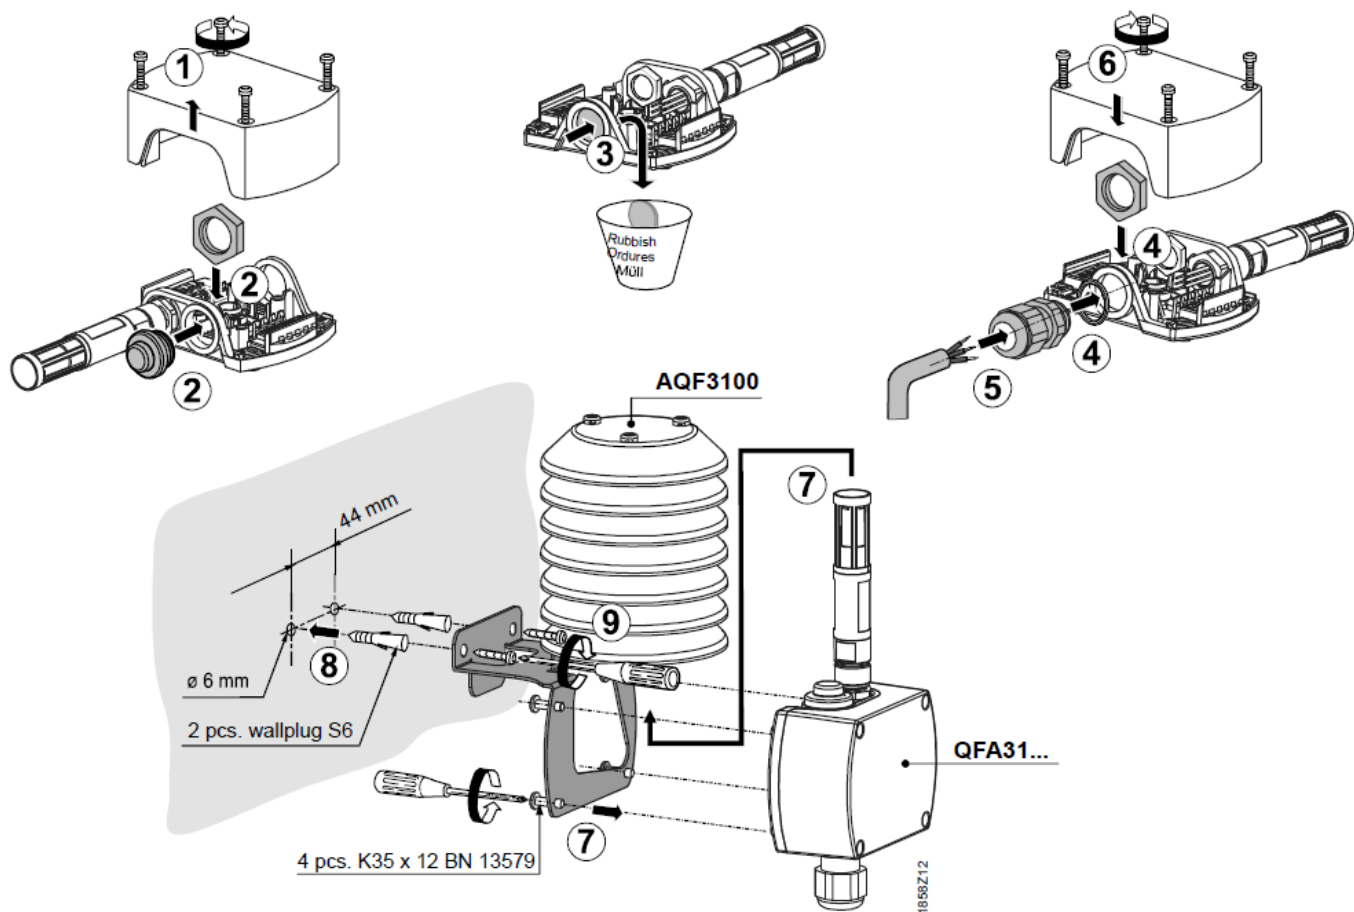


## Connecting Terminals

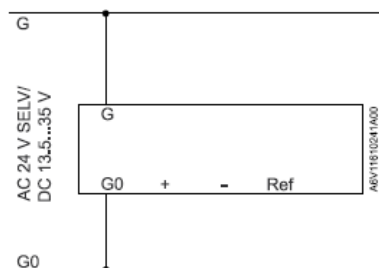


|            |                                     |
|------------|-------------------------------------|
| <b>G</b>   | AC 24 V $\pm 20\%$ / DC 13.5...35 V |
| <b>G0</b>  | GND                                 |
| <b>+</b>   | RS485 Modbus A                      |
| <b>-</b>   | RS485 Modbus B                      |
| <b>Ref</b> | GND_ISO                             |

A6V11610241202

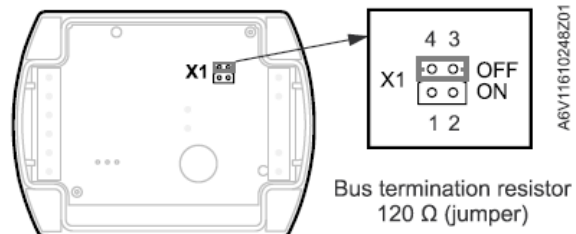

## Dimensions

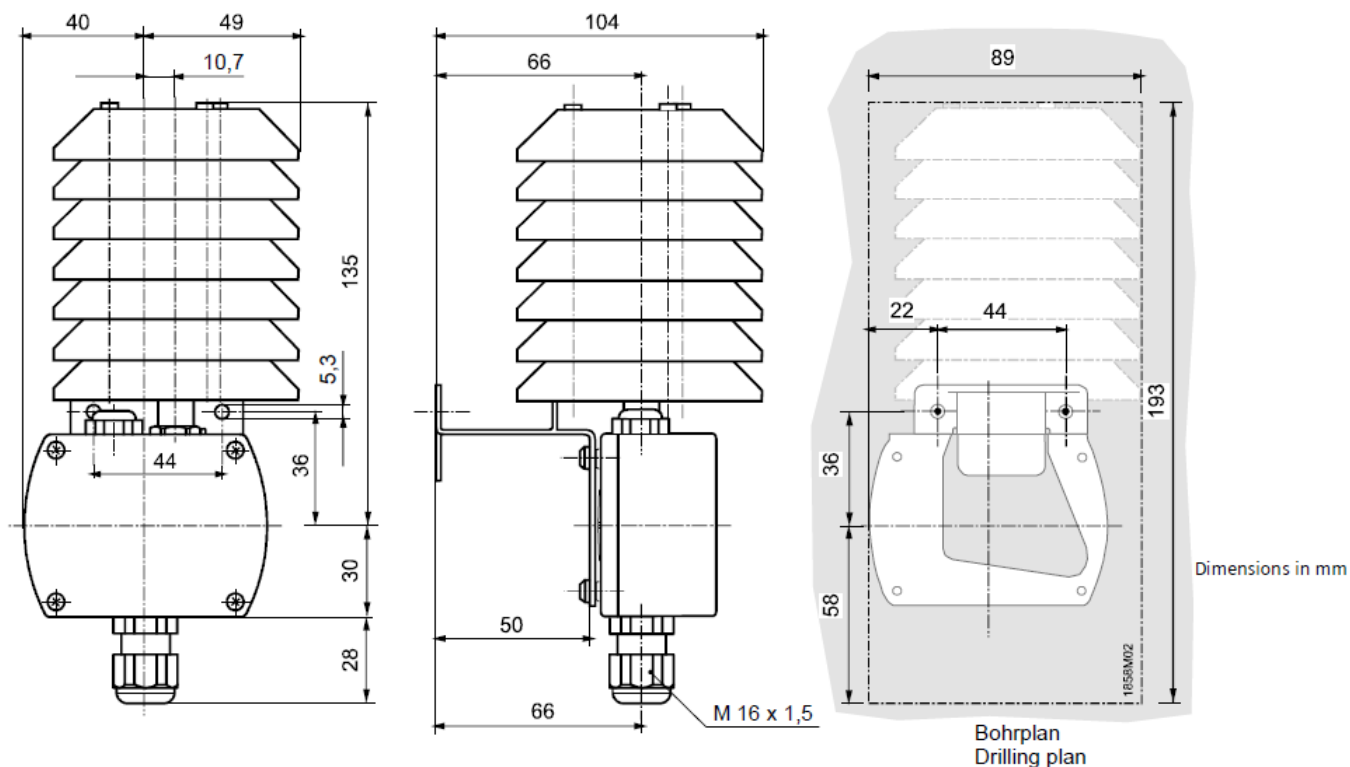

## Open Source Software (OSS)

All open-source software components used within the product (including their copyright holders and the license conditions) can be found on the website <http://www.siemens.com/download?A6V11698658>.

## Issued by

Siemens Switzerland Ltd Smart Infrastructure Global Headquarters Theilerstrasse 1a CH-6300 Zug.  
Tel. +41 58 724 2424 [www.siemens.com/buildingtechnologies](http://www.siemens.com/buildingtechnologies).

© Siemens Switzerland Ltd, 2021

Technical specifications and availability are subject to change without notice.

## Documents / Resources

|  |  |
|--|--|
|  | <p><b>SIEMENS QFA3150 Humidity and Temperature Sensor</b> [pdf] Instruction Manual<br/>QFA3150 Humidity and Temperature Sensor, QFA3150, Humidity and Temperature Sensor, Temperature Sensor, Sensor</p> |
|--|--|

## References

- [S Building technology - Products & Services - Global](#)
- [S Smart Information Delivery](#)