

SIEMENS RR-35 Remote Reset Module and Remote Reset Station Instruction Manual

Home » SIEMENS » SIEMENS RR-35 Remote Reset Module and Remote Reset Station Instruction Manual



SIEMENS

Installation Instructions Models RR-35 and RRS **Remote Reset Module and Remote Reset Station** (for use with System 3)

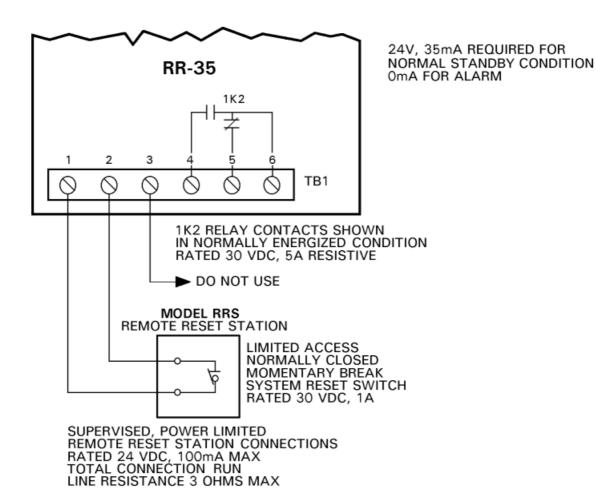


Figure 1

Contents

- 1 OPERATION
- 2 INSTALLATION AND WIRING
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**

OPERATION

The Model RR-35 Remote Reset module from Siemens Industry, Inc. allows a System 3 alarm condition to be reset to Standby from a remote location. (An alarm condition can also be reset by using the CP-35 Control Panel RESET switch.)

System 3 uses a BC-35 battery backup configuration.


Use the interconnecting cable, P/N 600-191771, that is supplied. (See Figure 2.)

The Model RRS Remote Reset station includes a labeled single gang plate and a normally closed, key operated, spring return reset switch.

INSTALLATION AND WIRING

Follow the Connection Diagram (Figure 1) and Figure 2 to install and wire the RR-35/RRS into a System 3 configuration.

Refer to System 3 Wiring Information Field Assembly of Modules, P/N 315-085178.

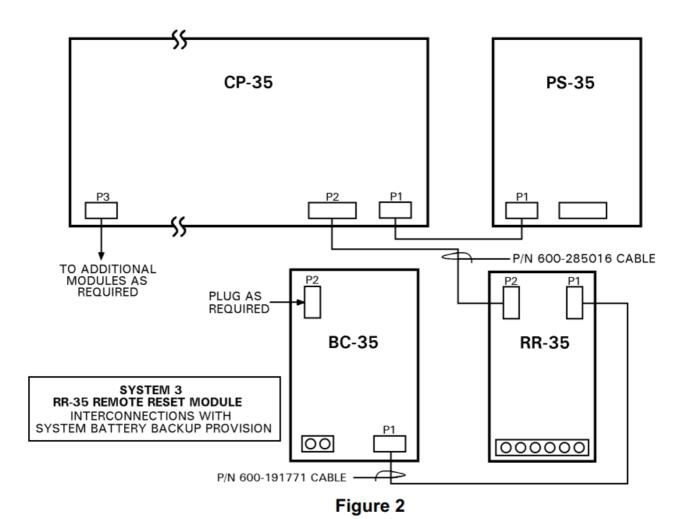

Siemens Industry, Inc.
Building Technologies Division
Florham Park, NJ
P/N 315-091469-7
Siemens Canada Limited
Building Technologies Division
2 Kenview Boulevard
Brampton, Ontario L6T 5E4 Canada

Documents / Resources



SIEMENS RR-35 Remote Reset Module and Remote Reset Station [pdf] Instruction Manual RRS, RR-35, RR-35 Remote Reset Module and Remote Reset Station, Remote Reset Module and Remote Reset Station, Remote Reset Station, Reset Station, Reset Station, Reset Station, Reset Station

References

• M Fire Alarm Resources | Download fire alarm documents

Manuals+,