

SIEMENS

TP715D01 EQ.700 Classic TP7



SIEMENS TP715D01 EQ.700 Classic TP7 Instructions

[Home](#) » [SIEMENS](#) » SIEMENS TP715D01 EQ.700 Classic TP7 Instructions 

Contents

- [1 SIEMENS TP715D01 EQ.700 Classic TP7](#)
- [2 Specifications](#)
- [3 Before First Use](#)
- [4 General Operation](#)
- [5 Preparing Coffee Beverages](#)
- [6 Maintenance](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

SIEMENS

SIEMENS TP715D01 EQ.700 Classic TP7



Specifications

- Brand: Siemens
- Model: EQ.700 classic TP7
- Type: Fully automatic espresso machine

Product Information

The Siemens EQ.700 classic TP7 is a fully automatic espresso machine designed to deliver high-quality coffee beverages with ease. It features a touch display for intuitive operation, a milk system for preparing milk-based drinks, and a customizable aroma setting to suit your preferences.

Before First Use

Prior to using the espresso machine for the first time, it is recommended to follow these steps:

1. Check the water hardness level using the test strip provided.
2. Set up the water filter to reduce limescale buildup and impurities.
3. Perform the initial setup following the instructions on the display.

General Operation

When using the espresso machine, keep the following in mind:

- Avoid direct contact with steam when operating the machine.
- Follow the display instructions for different brewing options like doubleShot, tripleShot, Slow Brew, and Cold Brew.

Preparing Coffee Beverages

To make a Latte Macchiato or other coffee beverages:

1. Follow the step-by-step instructions on the display.
2. Adjust settings such as milk portion, aroma intensity, and temperature to your liking.

Maintenance

Regularly maintain your espresso machine by:

- Replacing the water filter every 2 months or as indicated on the display.
- Following descaling procedures as needed.

FAQs


Q: How do I activate the child lock feature?

A: To activate the child lock feature, navigate to the settings menu and follow the instructions to enable it.

Q: How often should I replace the water filter?

A: It is recommended to replace the water filter every 2 months or as prompted by the display messages.

Documents / Resources

	<p>SIEMENS TP715D01 EQ.700 Classic TP7 [pdf] Instructions TP715D01 EQ.700 Classic TP7, TP715D01, EQ.700 Classic TP7, Classic TP7, TP7</p>
---	---

References

- [G Group Publishing](#)
- [Nect | Home](#)
- [S Welcome to Siemens Home Appliances International](#)
- [Q Connect your household | Home Connect](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.