

[Home](#) » [siena GARDEN](#) » **Siena GARDEN C31057 Sincro Extending Table Angular Installation Guide** 




## C31057 Sincro Extending Table Angular Installation Guide

### Contents [ [hide](#) ]

- [1 C31057 Sincro Extending Table Angular](#)
- [2 Technical specifications](#)
- [3 Part list](#)
- [4 Assembly instruction](#)
- [5 Features](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)

## C31057 Sincro Extending Table Angular

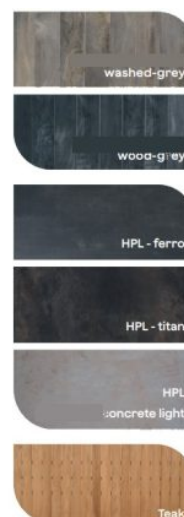

You can find these Assembly instruction in other languages at:




[www.sienagarden.de/aufbauanleitungen](http://www.sienagarden.de/aufbauanleitungen)

Please read all general instructions (attached document) carefully before starting assembly.

## Technical specifications

Chart for an overview of the products.


Size	160/200 x 90 cm	200/260 x 100 cm
ceramic	V28547 P40522 P40521	V28549 M29423 C31057 H48017 S83270
HPL	W08564 S08831 W08574 S08830	W08566 S08835 S08834 W08575
Teak FSC® 100 %	V28548 P40520	V32163 P37184

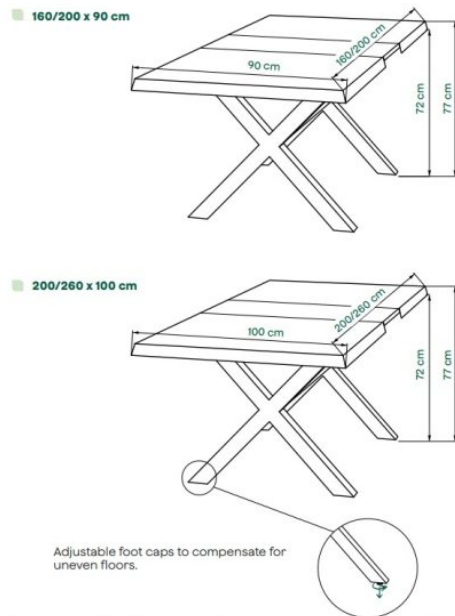


## Part list

These parts should be included in the package.


Please check the parts for completeness and integrity.

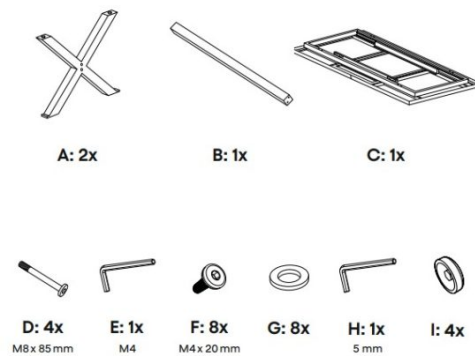

## Assembly instruction

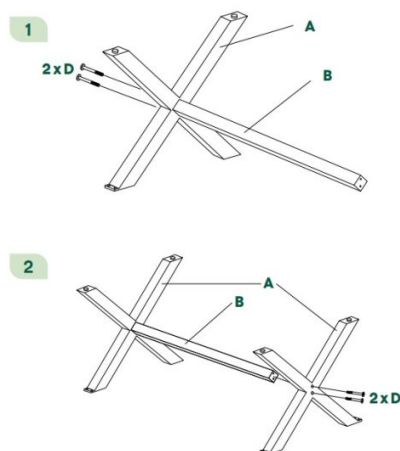


3

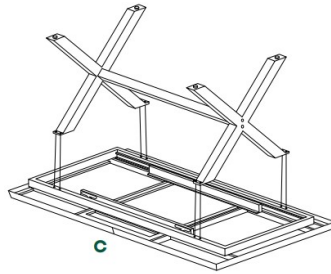

4

Use this bar for rotating or moving table.

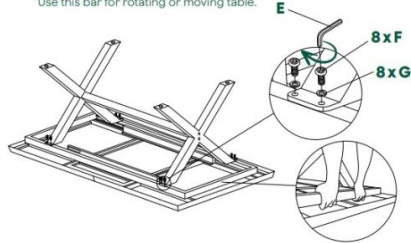

5

Tighten the screws.




6




## Features


Release both locks.

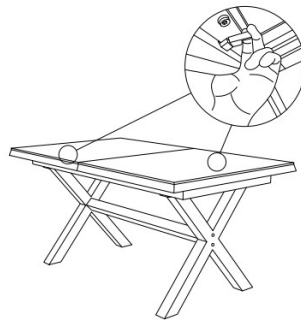


Pull one side of the tabletop outwards.

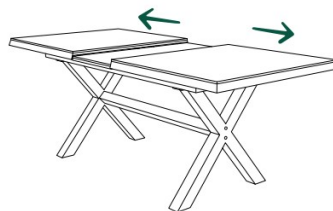


Pull until the center piece is completely raised.

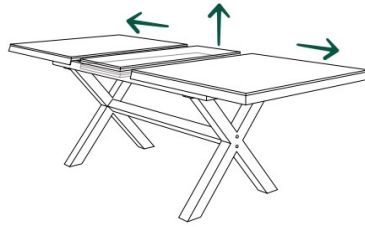


Push one side inwards and close the safety clips.

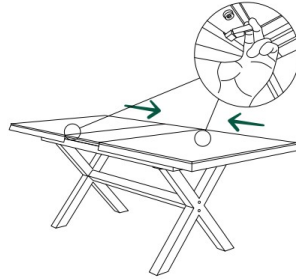


Release both locks.

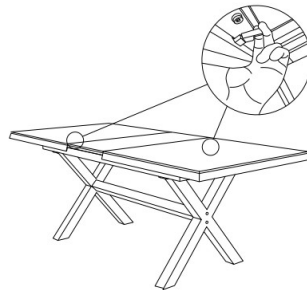


Pull one side of the tabletop slowly outwards until the center piece lowers itself.

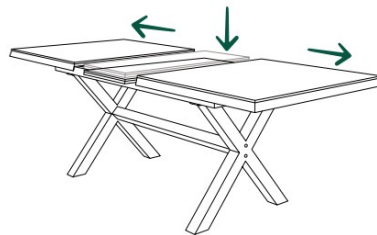

Pull one side of the tabletop inwards.

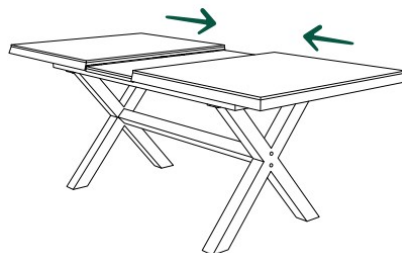

Close the safety clips.

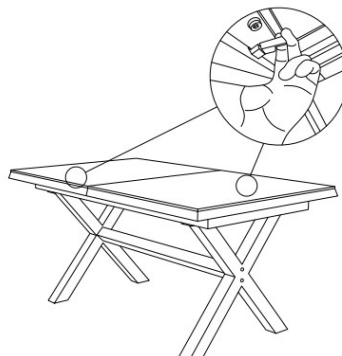

## **How to take care of your new table.**

To keep the tabletop of your choice shining for a long time, use coasters for glasses, cups and co. This will help you avoid high temperature differences, which can affect the tabletop and lead to discoloration.

Ceramic tiles: material characteristics easy to maintain | scratch resistant | weather resistant | resistant against dirt and liquids Ceramic tiles: maintenance and care

Simply wipe off any dirt with a cloth and a mild cleaner. Soft materials such as are the best choice here. Please do not use abrasive or pot sponges for cleaning, as this can lead to scratches and dull spots.

HPL top: material characteristics

scratch resistant | frost-resisting | heat resistant | weather and UV resistant HPL top: maintenance and care

Simply wipe off any dirt with a cloth and a mild cleaner. Soft materials such as are the best choice here. Please do not use abrasive or pot sponges for cleaning, as this can lead to scratches and dull spots.

Teaktop: material characteristics high density | strongly weather resistant because of it's own high content of oil | resistant against parasites | just a very small number of knotholes

Teaktop: maintenance and care

As a natural product, wood greys over time. If the original warm wood tone is to be retained, regular cleaning and oiling is necessary. Special products such as teak cleaner, teak oil and teak sealer are available for cleaning. Oiling and cleaning can significantly slow down the formation of patina and protect against verdigris and other discoloration. Without regular treatment (1 – 2 times a year), the typical silver-grey patina will develop over time.

### **Please note:**

The furniture must be absolutely dry before oiling with teak oil.

For a long life of our garden furniture, we recommend breathable eather protection covers that protect your furniture from the weather during the winter or when not in use.

TIP: The protective cover should not be in contactwith the table surface for a long period of time to avoid discoloration. Spacers provide ideal support here.

Important, to keep for future reference: read carefully. Outdoor furniture for domestic use



SIENA GARDEN GmbH & Co. KG

Dornierweg 12 | 48155 Münster

Germany | [service@sienagarden.de](mailto:service@sienagarden.de)


Stand | State 03/2025

[www.sienagarden.de](http://www.sienagarden.de)



<https://www.sienagarden.de/recycling/>

## Documents / Resources

	<p><a href="#">Siena GARDEN C31057 Sincro Extending Table Angular [pdf]</a> Installation Guide</p> <p>C31057, V28547, P40522, P40521, V28549, M29423, H48017, S83270, C31057 Sincro Extending Table Angular, Sincro Extending Table Angular, Extending Table Angular, Table Angular</p>
--	---

## References

- [User Manual](#)

■ siena

GARDEN

🔍 C31057, C31057 Sincro Extending Table Angular, Extending Table Angular, H48017, M29423, P40521, P40522, S83270, siena GARDEN, Sincro Extending Table Angular, Table Angular, V28547, V28549

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.