



SIERRA 810C MassTrak Mass Flow Controller User Guide

[Home](#) » [SIERRA](#) » SIERRA 810C MassTrak Mass Flow Controller User Guide 

SIERRA 810C MassTrak Mass Flow Controller



Contents

- [1 Quick Installation Instructions](#)
- [2 Limited Warranty Policy Register Online](#)
- [3 Contact Us](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)


Quick Installation Instructions

This is the Quick Start Guide for the MassTrak 810C mass flow meter for installation and set up instructions. To get more technical information on the 810C, refer to the MassTrak 810C Instruction Manual at <http://www.sierrainstruments.com/products/downloads/masstrak-810-mass-flow-controller>


1. **Do not overtighten** your fittings or pipes when installing into the hexed-portions of the flow body. Use two wraps of Teflon tape on each of your fittings, hold the plastic hexagonal nuts with a wrench, and tighten your fittings no more than one (1) turn past hand tight.
2. **NEVER TEST FOR LEAKS WITH LIQUID LEAK DETECTOR.** If liquid seeps into the electronics or the sensor compartment below, the instrument may be damaged. Use a pressure-decay test instead.
3. **Install an appropriate in-line filter upstream** if the gas contains any particulate matter or condensed moisture. Note: A 15-micron particulate filter for full-scale flows up to 30 liters/minute is recommended, 30 micron for flows above 30.
4. **Mount with a horizontal gas-flow.** This orientation is preferable unless the factory calibration was specifically performed for a vertical flow. Consult the "Comment" section of your calibration certificate. Note: Horizontal flow is assumed unless vertical flow upward or downward is specified
5. **DO NOT APPLY POWER TO THE OUTPUT LOOP** on units equipped and calibrated for a 4-20 mA output signal. This is NOT a loop-powered device. Damage will occur.
6. **Confirm that the DIP Switch settings** are in the correct position for your chosen setpoint source by removing the front access panel. Note: The DIP switches are located in =the left of the opening see the Figure 1 on the back of this card or Chapter 3 of the Instruction manual for a diagram.
7. **Wire the instrument** per the diagram on the back of this card, or the Instruction manual Chapter 2. Connect the Setpoint signal wire if an external source is to be used to control flow. Note: In External Source mode, if no wire is connected to the Setpoint pin, the valve may float open.
8. **Apply the gas** to the inlet at the recommended inlet pressure as listed on the label and the calibration certificate. On a controller, confirm that there is no gas flowing through it with a zero setpoint and under the operating pressure. Note: If there is a flow, consult the valve adjustment procedure found in the Instruction manual, Chapter 4).
9. **Apply power and verify or adjust the zero setting** after allowing a 15-minute warm-up period. The zero adjustment potentiometer is accessed through the upper-right hole in the front panel. Adjust until the reading on the display is within 0.5% of the full-scale value. For instruments without a display, monitor the output signal and adjust DOWNWARD from a positive output, stopping at 4 mA (a V4 instruments) or 15 mV (V1instruments). See the Instruction manual, Chapter 3.
10. **Apply power, allow a 30-minute warm-up period**, and verify or adjust the zero setting. This adjustment can be made by sliding the door open on the side of the instrument, inserting a small screwdriver, and turning the potentiometer. On models without displays, monitor the output signal and always adjust DOWN from a positive

output, stopping at 4.05 mA (V4 instruments) or 15 mV (V1 instruments). See the Instruction manual, Chapter 3.

11. An annual factory evaluation and calibration is recommended.

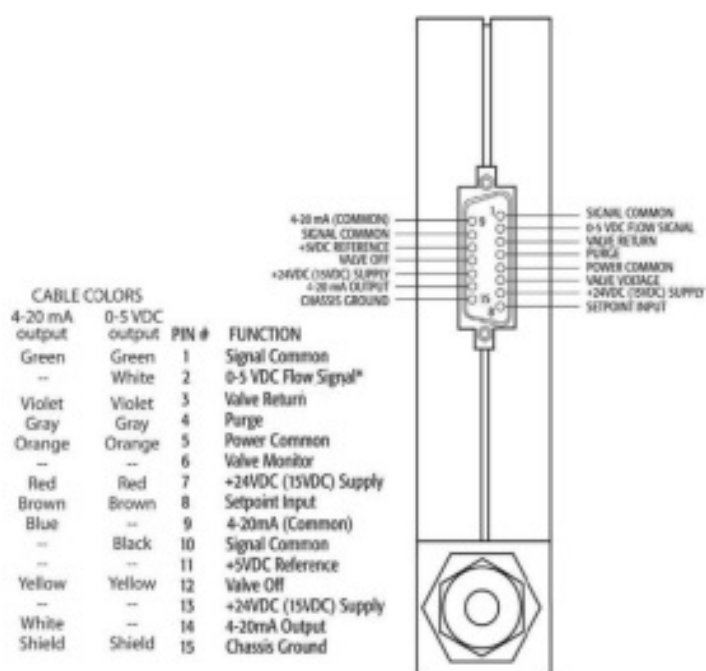

Note: Pins 1, 3, 5, 9 and 10 are all tied together internally. However it is highly recommended that at least one "signal common", one "power common" and the "valve return" pins be connected to the power supply common via separate wires, so that no ground loops are introduced, (especially on cables longer than ten feet)

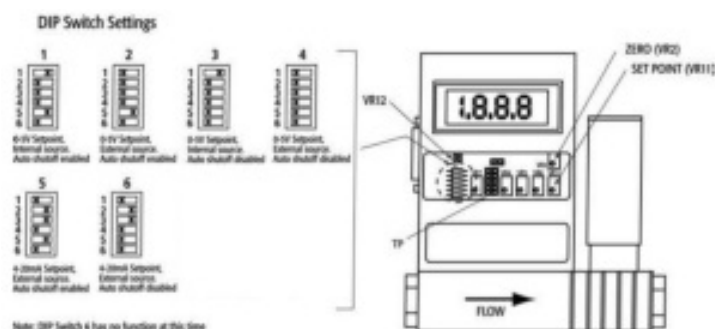

Limited Warranty Policy Register Online

All Sierra products are warranted to be free from defects in material and workmanship and will be repaired or replaced at no charge to Buyer, provided return or rejection of product is made within a reasonable period but no longer than one (1) year for calibration and non-calibration defects, from date of delivery. To assure warranty service, customers must register their products online on Sierra's website. Online registration of all of your Sierra products is required for our warranty process. Register now at www.sierrainstruments.com/register. Learn more about Sierra's warranty policy at <http://www.sierrainstruments.com/warranty>.

Contact Us

Email Technical Support: service@sierrainstruments.com


24 Hour Live Help Online: www.sierrainstruments.com/livehelp

Telephone Technical Support- North America: 800-866-0200 or 831-373-0200

Europe, Middle East, Africa + 31 72 5071 400 · Asia 8621 5879 8521 47-0387 E



Documents / Resources

	<p>SIERRA 810C MassTrak Mass Flow Controller [pdf] User Guide 810C, MassTrak Mass Flow Controller</p>
---	---

[Manuals+](#).