

SierraTeck B01M70GV41 Smart Sound Motion Activated Sound Player



SierraTeck B01M70GV41 Smart Sound Motion Activated Sound Player User Guide

[Home](#) » [SierraTeck](#) » SierraTeck B01M70GV41 Smart Sound Motion Activated Sound Player User Guide 

Contents

- [1 SierraTeck B01M70GV41 Smart Sound Motion Activated Sound Player](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Red LED Indicator](#)
- [5 Button Function](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



SierraTeck B01M70GV41 Smart Sound Motion Activated Sound Player



Product Information

Specifications:

- **LED Indicator:** Red
- **Working Mode:** Playing
- **Charge/Power Status:**
 - On (steady) while playing audio
 - Flashes 4 times after audio playback
 - Flashes slowly
 - Flashes 2 times every 5 seconds (when connected to power)

Product Usage Instructions

Step 1: Charging

Use the USB power cord to recharge the device. It can also be kept plugged in to use directly from an outlet. Recharging from empty will take up to 4 hours.

Step 2: Adding Audio

- Use a Windows-based PC to write MP3 audio files to the device. Ensure only MP3 files are used, as non-MP3 files will prevent proper operation. All files must be in the root directory and not in folders/subfolders.
- Do not use MACs/iOS devices to avoid hidden non-MP3 files on memory. The total size of audio files must be less than 4MB to fit onto the device.

Step 3: Select Playback Mode

- To play a single file every time, press and hold button B until the indicator light starts flashing. Use buttons A and B to navigate to the desired file. The selected file will play back every time.
- To play multiple files in sequence, press and hold button A until the indicator starts flashing. The playback will follow the sequence as written to memory.

Step 5: Attach to Wall

- Attach the unit to the wall using the provided screws or ball mount. Only the bottom 2 screw holes at the back of the unit should be used.
- Avoid installing in areas with direct sunlight, large temperature variations, or near air conditioners/heaters. For indoor use only to prevent moisture damage.

Important: All units are tested after manufacturing by pre-placing audio onto the device. This is normal and does not indicate that the unit is used.

If you encounter any issues or need assistance, please contact us via email. We are here to ensure your satisfaction.

Frequently Asked Questions (FAQ):

- **Q: Can I use this device with MACs or iOS devices?**

A: No, it is recommended to use a Windows-based PC only for writing MP3 audio files to the device to prevent issues with hidden non-MP3 files.

• **Q: How long does it take to recharge the device?**

A: Recharging from empty will take up to 4 hours using the USB power cord provided.

This guide will help you hit the ground running in no time!

Red LED Indicator

Working Mode	Status
Playing	On (steady) while playing audio
Low charge/power	Flashes 4 times after audio playback
Charging or connecting to the computer	Flashes slowly
Full Charge	Flashed 2 times every 5 seconds (when connected to power)

Button Function

Button Name	Operation	Function
On/Off Button	Pull Up/Down	Turn on/off
Button A	Short Press	Previous
	Hold for 3 seconds	Sequence Play Back Mode
Button B	Short Press	Next
	Hold for 3 seconds	Single File Play Back Mode
Volume Dial	Dial-up or down	Increase or decrease volume

STEP 1: Charging:

Use a USB power cord to recharge or keep plugged in to use directly from the outlet. Recharge from empty will take up to 4 hours

STEP 2: Adding Audio

- Use a Windows-based PC only to write MP3 audio to the device. Ensure only MP3 files are used. Non-MP3 files will prevent proper operation. All files must be in the root directory and not in folders/subfolders.
- Do not use MACs/iOS devices, as they often leave hidden non-MP3 files on memory, which will prevent the device from functioning properly

Important:

- Total size of audio file(s) must be less than 4MB to fit onto the device
- To transfer audio files, use the USB cable provided or any other micro-USB data cable.
- There is approximately a 1-second lag between motion detection and playback

STEP 3: Select Playback Mode

Play a single file every time

- With the device on, press and hold button “B” and release when the indicator light starts flashing
- Now, use buttons “A” and “B” to go to the file you want and stop there. The file you stop at is the one selected to be played back every time.
- If you later press “A” or “B” again, it will select a new file to playback again

Play multiple files in sequence

- With the device on, press and hold the button “A” until the indicator starts flashing
- Playback will now be in the same sequence as written to memory, see the full user guide for more details


STEP 5: Attach to Wall

- Using the 2 screws provided, attach the unit to wall either directly or using the ball mount supplied
- Regardless of the method chosen, only the bottom 2 screw holes at the back of the unit are used, upper ones are unused

IMPORTANT:

- We test all units after manufacturing by pre-placing audio onto the device. This is normal and does not indicate the unit is used
- To avoid false triggers, do not install in areas that have direct sunlight, areas with large temperature variations, or near air conditioners and heaters.
- For indoor use. External use may result in moisture damaging the internals of the device and voiding the warranty

If there is any way we can assist you or if you've encountered any issues whatsoever, please email us, we are here to help and make sure you are 100% satisfied.



SierraTeck B01M70GV41 Smart Sound Motion Activated Sound Player [pdf] User Guide

B01M70GV41 Smart Sound Motion Activated Sound Player, B01M70GV41, Smart Sound Motion Activated Sound Player, Activated Sound Player, Sound Player

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.