



SIGMA 18552 Nugget II Flash Taillight Instruction Manual

[Home](#) » [SIGMA](#) » SIGMA 18552 Nugget II Flash Taillight Instruction Manual 




Contents

- 1 MOUNTING
- 2 CE INFORMATION
- 3 ALIGNMENT
- 4 BUTTON
- 5 BATTERY INDICATOR
- 6 CHARGING
- 7 ACCESSORIES
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

MOUNTING

Do not cover the rear light!

Mounting height between 250 -1200 mm.

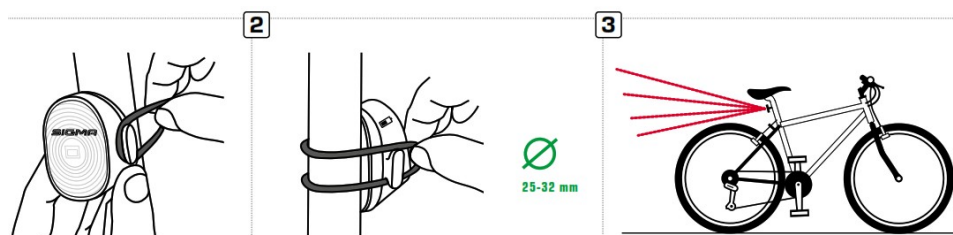


CE INFORMATION


SIGMA-ELEKTRO GmbH hereby declares that the NUGGET II FLASH complies with the fundamental requirements and other relevant regulations of Directive 2014/30/EU and RoHS Directive 2011/65/EU. You can find the CE declaration at: ce.sigmasport.com/nuggetIIflash

ALIGNMENT


Final side of the tail lamp perpendicular to the roadway and at right angles to the vehicle center axis.

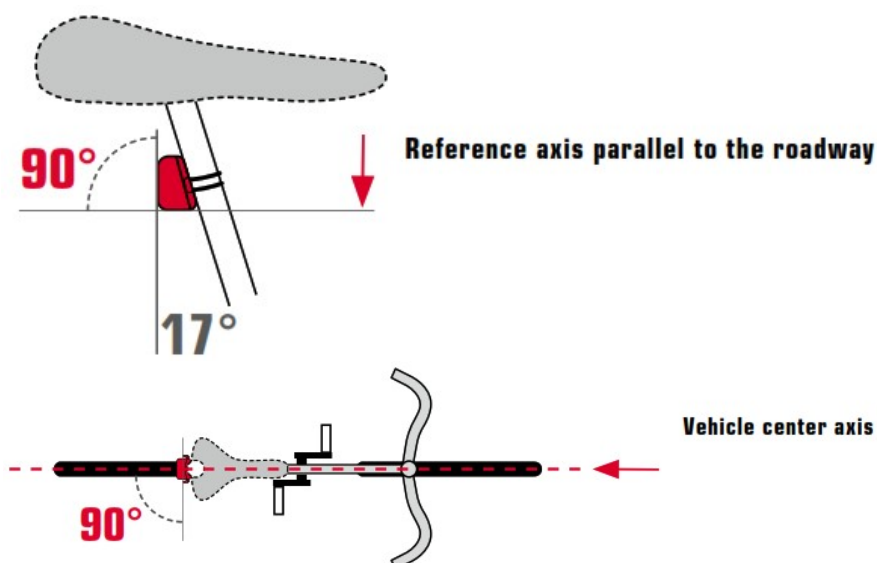

BUTTON

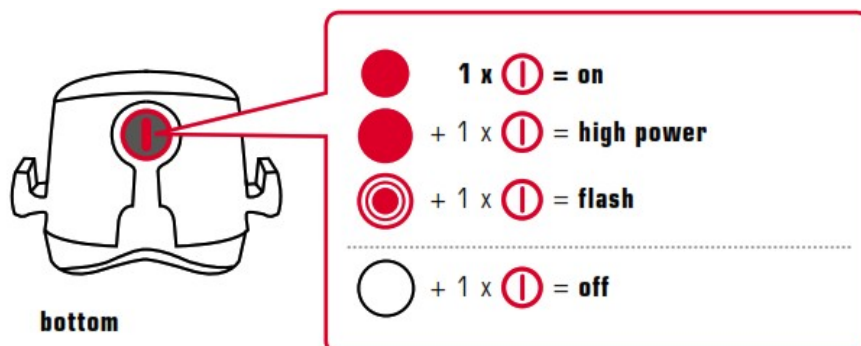


BATTERY INDICATOR

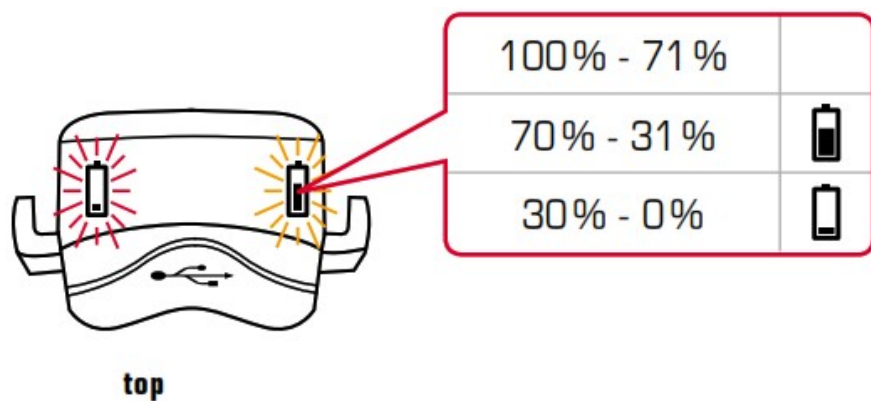


The battery needs to be charged immediately if the monitoring device/red indicator has been activated. The LEDs are not replaceable. If an LED fails, replace the tail light.

CHARGING

Please always keep the silicone plug closed after charging.

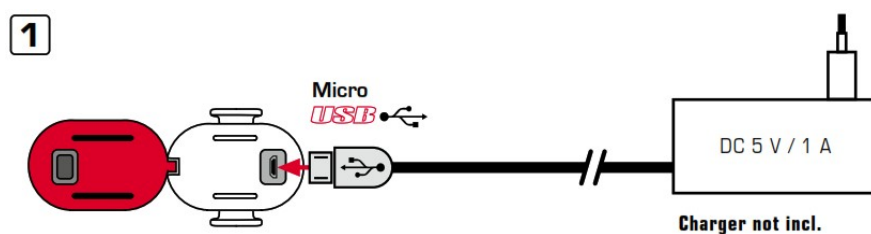

Energy extraction through the Micro USB port is not possible. These lamp needs to be replaced in case of defective light source.

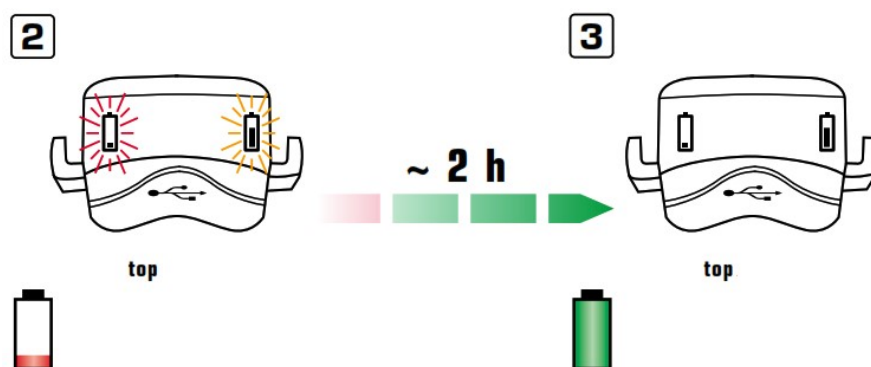

During charging, the battery monitoring system lights up.
If the battery is ready for use again, both indicators will go out after charging.

ACCESSORIES

Ref. No. 18552



**Charger +
Charging cable Micro-USB**

Ref. No. 18553



Charging cable Micro-USB

Ref. No. 00468



O-ring bracket

sigma.bike

SIGMA-ELEKTRO GmbH
Dr.-Julius-Leber-Straße 15
67433 Neustadt/Wstr. Germany
service@sigma.bike



Documents / Resources

	SIGMA 18552 Nugget II Flash Taillight [pdf] Instruction Manual 18552, 18553, 00468, 18552 Nugget II Flash Taillight, 18552, Nugget II Flash Taillight, Flash Tai llight, Taillight
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.