



SIGURO AD-F500W Aroma Diffuser User Guide

[Home](#) » [SIGURO](#) » SIGURO AD-F500W Aroma Diffuser User Guide 

Contents

- [1 SIGURO AD-F500W Aroma Diffuser](#)
- [2 SAFETY INFORMATION](#)
- [3 Clean the water tank every 3 days](#)
- [4 USE](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 TROUBLESHOOTING](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

SIGURO

SIGURO AD-F500W Aroma Diffuser



Thank you for purchasing a SIGURO appliance. We are grateful for your trust and are pleased to introduce the device to you on the following pages and introduce you to all its functions and uses. We believe in a fair and


responsible company, and therefore we only work with suppliers who meet our strict criteria to protect the interests of employees, prevent their abuse, and fair working conditions. If you need help with extensive maintenance or repair of the product that requires intervention in its internal parts, our authorized service is available to you at the e-mail address siguro@alza.cz or the operator on the vendor's helpline. For your convenience, in solving any problems with the product, we have unified these contact points and the above contacts can be used in case of any complaints or post-warranty service.

SAFETY INFORMATION

Please read this manual carefully before use and keep it for future reference.

1. This appliance is intended for use by children 8 years of age and older and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, provided they have been given supervision or instruction concerning the use of the appliance in a safe manner and understand the potential hazards.
2. Children must not play with the device.
3. Cleaning and user maintenance must not be performed by children without supervision.
4. Before connecting the appliance to the mains, make sure that the mains voltage corresponds to the values on the type plate of the product. Only connect the appliance to a properly grounded outlet.
5. If the power cord, plug, or any other part of the product malfunctions, or if any part of the product has been dropped or otherwise damaged, repair may only be performed by a qualified electrician. Improper repairs can put users at risk of injury.
6. To reduce the risk of electric shock, do not immerse the cord, plug or body of the appliance in water or any other liquid. Do not wash the appliance in the sink or dishwasher.
7. Always unplug the appliance when not in use, when filling and/or when cleaning.
8. The appliance is intended for domestic use only. It is not intended for commercial purposes.
9. Use the appliance only for its intended purpose.
10. Do not place the appliance on window sills, counter drip tray or on unstable surfaces. Always place it on a stable, level and dry surface.
11. Do not place the appliance near a washbasin or sink, on appliances and equipment that are a source of heat or close to them.
12. Do not cover the air inlets or the outlets.
13. Do not touch the device with wet hands.
14. Never use the appliance in a damp place.
15. Never use the appliance close to a source of heat.
16. Never place anything on or in the appliance.
17. Do not use the appliance near flammable objects or products (curtains, aerosols, solvents, etc.).
18. Switch off and disconnect the appliance before moving, during installation and cleaning.
19. When using, leave at least 30 cm of free space on the back and sides of the product and at least 50 cm of free space above the product.
20. Always make sure that the appliance and power cable are in good condition before use. Do not pull on the power cord or appliance, even when unplugging the adapter (not included).
21. Pay attention because the appliance produces water vapor.

Clean the water tank every 3 days

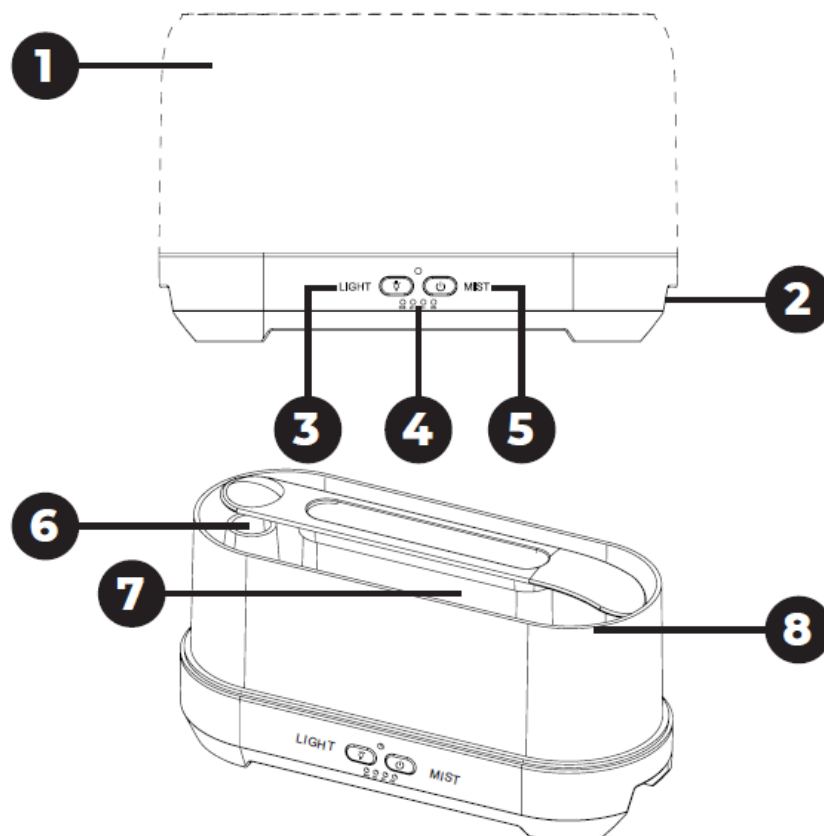

1. Outer cover
2. Socket for connecting the power cable (at the back)
3. Button 1 (backlight setting)
4. Light indicators
5. Button 2 (steam setting)
6. Air outlet
7. Water tank with MAX line
8. Side for pouring water out from the tank
9. Power cable (not shown)

Power	5 W
Humidification capacity	5–20 ml/h
Noise level	30–36 dB
Recommended room area	10–30 m ²
Water tank capacity	200 ml
Working time (full tank, minimum power)	10–20 hours
Power cable length	100 cm
Dimensions	129 × 79 × 200 mm
Weight	388 g

USE



Before first use

Remove the aroma diffuser from the box and remove all protective foils and packaging materials. Check it is not damaged. Before disposing of the packaging, be sure to remove all components. Filling the water tank

1. Remove the outer cover.
2. Pour enough clean water (water must not exceed the MAX line).
3. Add approximately 5 drops of essential oil to the water as desired.
4. Attach the outer cover on the base and make sure it is tight.

Place the aroma diffuser on a flat, stable surface and plug the cable connector into the socket at the aroma diffuser. Plug the adapter into the grounded socket (the adapter is not included in the package). Steam output mode: Press button 2 once briefly and the aroma diffuser will start to emit steam. Press the button 2 repeatedly to switch the duration of the steam discharge operation: continuous steam discharge – 30 sec (intermittent steam discharge: 30 seconds steam discharge and 30 seconds interruption) – 2h (steam discharge time 2 hours) – 4h (steam discharge time 4 hours) – switching off the aroma diffuser. Each press will illuminate the corresponding light on the control panel.

CLEANING AND MAINTENANCE

Before cleaning or any maintenance, always turn the aroma diffuser off, unplug the connecting cable, and let it cool down completely.

Warning

Never immerse the aroma diffuser or the power cable in water or any other liquid. Do not use plastic or metal scrapers, harsh cleaners, chemicals, petrol, solvents, or other similar substances to clean any parts of the appliance. The surface finish could be seriously damaged. Use only a soft, slightly dampened sponge to clean the outer surface. Wipe dry with a clean cloth. Carefully rinse the water tank and wipe dry. Regularly remove the limescale deposits. That can negatively affect the operation of the aroma diffuser. Use a solution of white vinegar and water in the 1: 3 ratio and leave on for a few minutes. Then pour out the water tank content, carefully rinse with clean water, and wipe dry. If your water is hard, or very hard, it is recommended to use distilled water.

Regularly clean the ultrasonic transducer (inside the aroma diffuser) with a soft sponge, slightly moistened in warm water with a little detergent. Use a lukewarm solution with citric acid or vinegar to remove limescale from the ultrasonic transducer. If you use the appliance frequently, we recommend cleaning it at least once a week. Note that a clogged ultrasonic transducer will not function properly! Storage Make sure that the appliance is cool and clean before storing. Keep it in a dry and well-ventilated place out of the reach of children or pets. Do not place any objects on it.

TROUBLESHOOTING

Problem	Cause	Solution
The aroma diffuser switched off automatically shortly after switching on.	There is an insufficient amount of water in the water tank.	Fill the tank with water up to the max line. Be careful not to exceed the max line.
	The cable is not connected properly.	Disconnect the cable and reconnect it.

Problem	Cause	Solution
The aroma diffuser does not produce mist, or mist volume is very low.	There is an insufficient amount of water in the water tank.	Fill the tank with water up to the max line. Be careful not to exceed the max line.
	The water level in the tank is above the maximum level.	Pour off the excess water.
	The outer cover is inserted incorrectly.	Check the fit of the outer cover.
	The ultrasonic transducer is dirty.	Clean the ultrasonic transducer.
	The entrance holes at the bottom are dusty.	Clean the inlet openings.

Problem	Cause	Solution
Water is leaking from the aroma diffuser.	The outer cover is inserted incorrectly.	Check the fit of the outer cover.
	When the water was poured, the water passed through the air outlet.	Follow the chapter "Tipping over". Do not pour water through the air outlet. Pour the water out from the designated side.
	The temperature is low or there is high humidity.	Under these conditions, the mist may condense quickly into water droplets.

If the problem is not listed in the table above or if the problem persists, switch off the appliance, disconnect the plug from the electrical outlet, and contact an authorized service center.

Alza.cz a.s., Jankovcova 1522/53, 170 00 Prague 7, Czech Republic

2023 Alza. cz a.s. All Rights Reserved. www.siguro.net

Documents / Resources

References

- User Manual