




## SIGURO SCR-SC-J640B Digital Scale Instruction Manual

[Home](#) » [SIGURO](#) » SIGURO SCR-SC-J640B Digital Scale Instruction Manual 

# SIGURO


Digital Scale



Translation of the operating instructions from the original language.

### Contents

- [1 SCR-SC-J640B Digital Scale](#)
- [2 SAFETY INFORMATION](#)
- [3 USE](#)
- [4 CLEANING AND MAINTENANCE](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

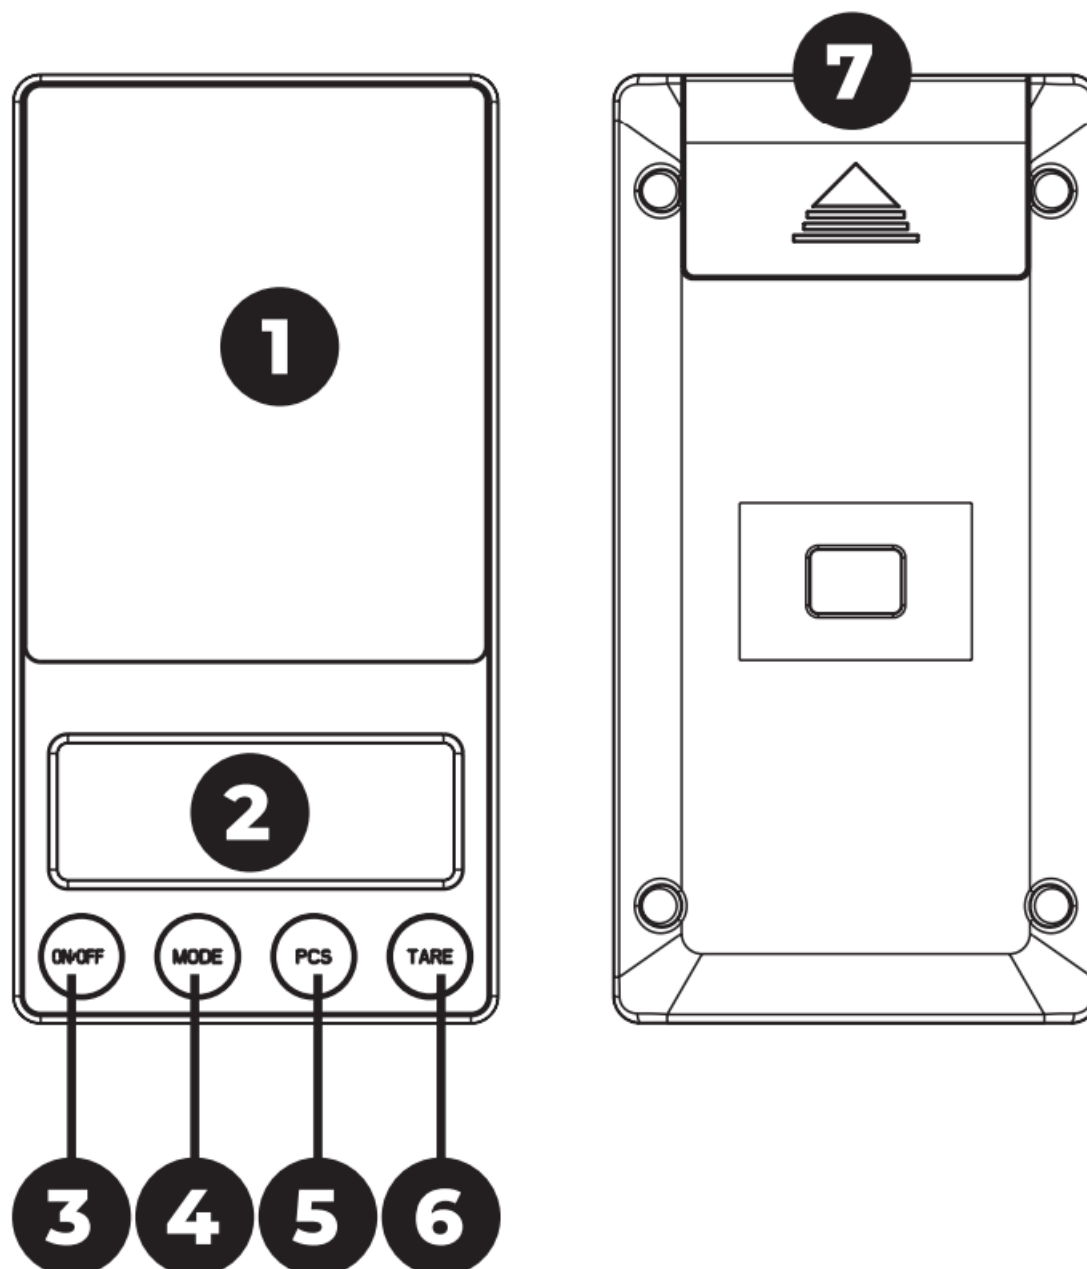

### **Thank you for purchasing a SIGURO appliance.**

We are grateful for your trust and it is our pleasure to introduce you to the device on the following pages and to acquaint you with all its functions and uses.

We believe in being a fair and responsible company and therefore only work with suppliers who meet our strict criteria of protecting the interests of em employees, preventing employee abuse, and providing fair working conditions.

If you need help with extensive maintenance or repair of the product that requires intervention in its internal parts, our authorized service team at [siguro@alza.cz](mailto:siguro@alza.cz) or operators on the dealer hotline are available to assist you. For your convenience in dealing with any problems with the product, we have consolidated these contact points and the above contacts can also be used for any complaints or after-sales service.

### **SAFETY INFORMATION**



**Please read this manual carefully before use and keep it for future reference.**

1. This product is intended for household use. Do not use it outdoors.
2. This product may be used by children and persons with reduced physical, sensory or mental capabilities, or

lack of experience and knowledge, when supervised.

3. Children should be supervised to ensure that they do not play with the product.
4. Always place it on a stable, level and firm surface. Do not place it on unstable surfaces, carpets, etc.
5. Do not place the product on or near an electric or gas stove, open flame, or another heat source.
6. Do not expose the product to direct sunlight.
7. Do not use the product in an environment with high humidity or in a very dusty environment.
8. Do not place any objects on the product. Store in a horizontal position.
9. Remove the batteries if you will not be using the product for an extended period of time. There is a risk of damage by electrolyte leakage.
10. Always use new batteries of the same type. Never mix old and new batteries or batteries of different types. Never put batteries in fire, short circuit or damage them in any way. After the end of their lifetime, discard them in an environmentally friendly manner. Never dispose of batteries in household waste.
11. Keep batteries out of the reach of children, as they can be dangerous to them. If a child swallows a battery, seek medical attention immediately.
12. Keep the product clean. Follow the instructions in this manual.
13. Do not immerse the product in water or any other liquids or rinse it under running water.
14. The product does not contain parts that can be serviced by a user. Have all repairs or adjustments carried out by an authorized service center.



1. Weighing area
2. Display
3. ON/OFF button
4. MODE button (select weight units)
5. PCS button (piece counting)
6. TARE button
7. Battery compartment cover

Power	2x 1.5 V AAA batteries
Weighing	500 g
Weighing accuracy	± 0,01 g
Units of mass	g, oz, ct, dwt, gn, tl, ort
Display	LCD
Automatic shutoff	After 3 minutes of inactivity
Operating temperature	10-30 °C
Dimensions	2.4 x 7.4 x 14.2 cm
Weight	0.137 kg (including batteries)

## USE

### Inserting and replacing batteries

The batteries are supplied with the scale. The bat series must be inserted into the scale before use.

1. Remove the batteries from the protective packaging.
2. Turn the scale upside down and remove the battery compartment cover.
3. Insert two AAA batteries (2x 1.5 V) into the compartment. Observe the correct polarity, which is marked on the bottom of the battery compartment.
4. Replace the cover.

When replacing the batteries, always replace both batteries at the same time. First, remove the empty batteries and then insert new ones. Do not use alkaline and rechargeable batteries at the same time.

### **Warning:**

Never put batteries in fire, short circuit, or damage them in any way. After the end of their lifetime, discard them in an environmentally friendly manner.

Keep batteries out of the reach of children.

### **Note:**

If you will not be using the scale for a long time, remove the batteries to prevent electrolyte leakage and damage to the scale.

### Weighing

1. Place the scale on a dry, flat and firm surface.
2. Press the ON/OFF button briefly to switch the scale on.
3. Wait until the display shows "O" and then press the MODE button repeatedly to select the unit of weight.
4. Place the object to be weighed on the weighing surface and the display will show the weight of the object.
5. If you will no longer be using the scale, press the ON/OFF button to turn the scale off.

**Note:** The scale automatically switches off after 3 minutes of inactivity.

### **TARE function**

This function is used to reset the weight of e.g. a container if it is not to be added to the total weight of the object or raw materials during weighing. This function is also used to weigh items or raw materials one by one.

1. Press the ON/OFF button briefly to switch the scale on.
2. Wait until the display shows "O" and then press the MODE button repeatedly to select the unit of weight.
3. Place the container whose weight is not to be included in the total weight on the weighing surface and press the TARE button.
4. Wait until the display shows "O" and place the object or raw materials you want to weigh into the container.
5. Press the TARE button repeatedly to reset the display value and add more items or resources.
6. If you will no longer be using the scale, press the ON/OFF button to turn the scale off.

### **Piece count function**

1. Place the scale on a dry, flat and firm surface.
2. Press the ON/OFF button briefly to switch the scale on.
3. Calibration must be carried out first. Prepare a sample quantity of 25, 50, 75, or 700 pieces of the item you want to count to pieces.
4. Place a sample quantity of pieces on the weighing surface. Press and hold the PCS button. Press the MODE button repeatedly to select 25, 50, 75 or 700. It is important that the value on the display corresponds to the number of pieces that are placed on the weighing surface.
5. Then press the PCS button and "pcs" will appear in the lower-left corner of the display. The calibration has been completed (the scale stores the average weight of one piece in memory).
6. Now place the pieces you want to count one by one on the weighing surface and the display will show the number of pieces.

#### **Note:**

The scale remembers the last saved calibration. If you want to count other items, you need to repro gram the scale.

We recommend calibration with 700 pcs if possible.

### **Display reports**

"Lo" -if the display shows "Lo", the batteries are almost dead and need to be replaced. Follow the instructions in "Inserting and replacing batteries".

"O-Ld" -if the display shows "O-Ld", the scale is overloaded. Remove objects or raw materials from the weighing area. If the scale is overloaded for a long period of time, there is a risk of damage.

## **CLEANING AND MAINTENANCE**

Before cleaning, make sure the scale is switched off and the display is off.

### **Warning:**

Never immerse the scale in water or any other liquid.

Do not use plastic or metal wire, harsh cleaning agents, chemicals, petrol, solvents or other similar substances to clean the scale. The surface finish could be seriously damaged.

Wipe the scale with a clean, dry cloth. If the weighing surface is dirty, use a clean sponge slightly dampened in warm water. Wipe dry.

### **Storage**

Make sure that the scale is clean before you store it.

If you are not going to use the scale for a long period of time, remove the batteries from the scale to avoid possible electrolyte leakage and subsequent damage to the scale.

Store the scale in a dry and well-ventilated place away from children or pets.

Do not place any objects on the scale.

### **DISPOSAL OF USED BATTERIES**



Batteries contain materials harmful to the environment. Do not dispose of batteries in a regular community

waste. Dispose of used batteries properly at collection points.

The use of the WEEE Symbol indicates that this product should not be treated as household waste. By ensuring this product is disposed of correctly, you will help protect the environment. For more detailed information about the recycling of this product, please contact your local authority, your household waste disposal service provider, or the shop

where you purchased the item. This product meets all of the related basic EU regulatory requirements. The EU declaration of conformity is available on [www.alzashop.com/doc](http://www.alzashop.com/doc).

This product sold in the European Union meets the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (ROHS).



Alza.cz, a. s., Jankovcova 1522/53, 170 00 Prague 7,  
Czech Republic

© 2022 Alza.cz, a. s. All Rights Reserved.  
[www.siguro.net](http://www.siguro.net)

Documents / Resources

<div></div> <div><div>Digital Scale</div><div><small>EN Translation of the operating instructions from the original language. FR Traduction des instructions d'utilisation de la langue originale. DE Bedienungsanleitung in deutscher Sprache. HU Használati útmutató magyar nyelven. PL Instrukcja obsługi w języku polskim. PT Manual de instruções em português. RU Инструкция по эксплуатации на русском языке. SK Návod na použitie v slovenskom jazyku. SR Uputstvo za upotrebu na srpskom jeziku. TR Kullanım kılavuzu Türkçe'de. UK Інструкція з експлуатації українською мовою. CZ Provozní návod v češtině. SIGURO SCR-SC-J640B</small></div></div>	<div><a href="#">SIGURO SCR-SC-J640B Digital Scale</a> [pdf] Instruction Manual SCR-SC-J640B Digital Scale, SCR-SC-J640B, Digital Scale, Scale</div>
--	--