



# SIGURO SGR-AD-N300DW USB Aroma Diffuser Instruction Manual

[Home](#) » [SIGURO](#) » SIGURO SGR-AD-N300DW USB Aroma Diffuser Instruction Manual 

SIGURO SGR-AD-N300DW USB Aroma  
Diffuser Instruction Manual



 
 
## **USB Aroma Diffuser**

USB-Aroma Diffuser



Translation of the operating instructions from the original language.

SGR-AD-N300DW

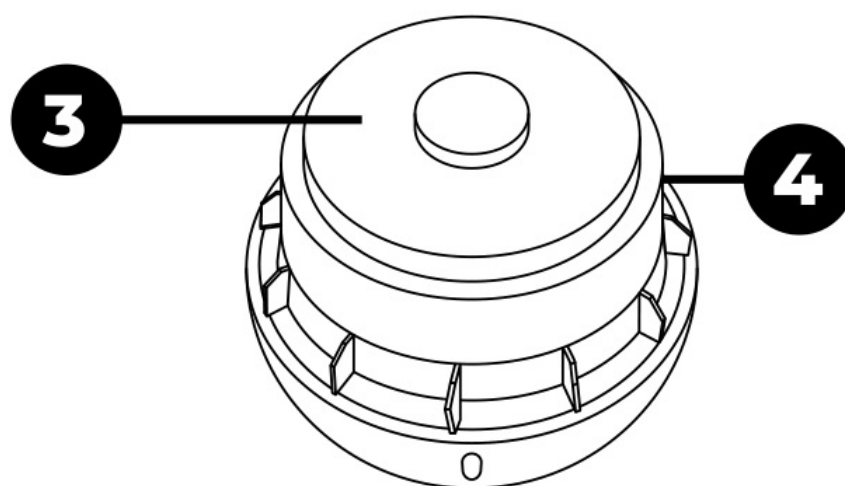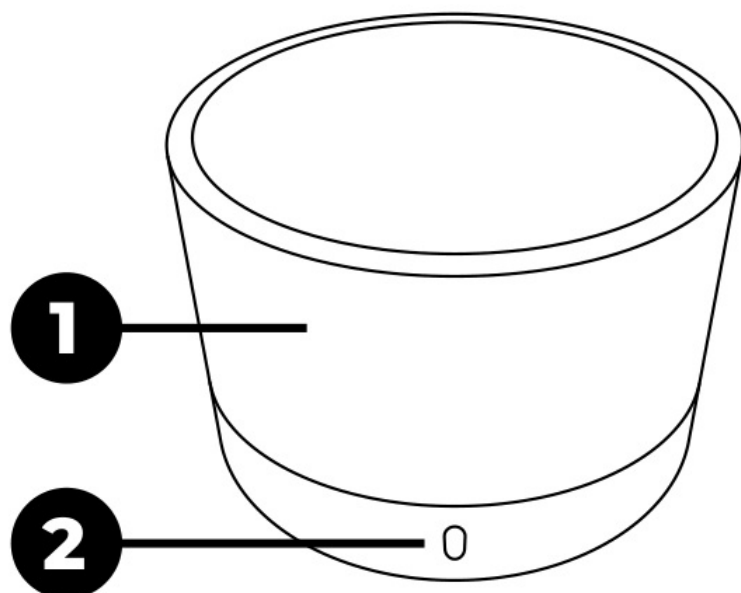

**Thank you for purchasing a SIGURO appliance. We are grateful for your trust and we are pleased to introduce to you the appliance on the following pages and acquaint you with all its functions and uses.**

We believe in a fair and responsible company, and therefore we only work with suppliers who meet our strict criteria to protect the interests of employees, prevent their abuse and fair working conditions.

If you need help with extensive maintenance or repair of the product, which requires intervention in its internal parts, our authorized service is available to you at the email address [siguro@alza.cz](mailto:siguro@alza.cz) or operators at the seller's infoline. For your convenience in solving any problems with the product, we have unified these contact points and the above contacts can be used in the event of any complaints or post-warranty service.

## Contents

**1 SAFETY INFORMATION**

**2 USE**

**3 CLEANING AND  
MAINTENANCE**

**4 Documents / Resources**

**4.1 References**

**5 Related Posts**

## SAFETY INFORMATION



**Please read this manual carefully before use and keep it for future reference.**

1. This appliance is intended for use by children 8 years of age and older and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, provided they have been given supervision or instruction concerning use of the appliance in a safe manner and understand the potential hazards.
2. Children must not play with the device.
3. Cleaning and user maintenance must not be performed by children without supervision.
4. Before connecting the appliance to the mains, make sure that the mains voltage corresponds to the values on the type plate of the product. Only connect the appliance to a properly grounded outlet.
5. If the power cord, plug, or any other part of the product malfunctions, or if any part of the product has been dropped or otherwise damaged, repair may only be performed by a qualified electrician. Improper repairs can put users at risk of injury.
6. To reduce the risk of electric shock, do not immerse the cord, plug or body of the appliance in water or any other liquid. Do not wash the appliance in the sink or dishwasher.
7. Always unplug the appliance when not in use, when filling and/or when cleaning.
8. The appliance is intended for domestic use only. It is not intended for commercial purposes.
9. Use the appliance only for its intended purpose.
10. Do not place the appliance on window sills, counter drip tray or on unstable surfaces. Always place it on a stable, level and dry surface.
11. Do not place the appliance near a washbasin or sink, on appliances and equipment that are a source of heat or close to them.
12. Do not cover the air inlets or the outlets.
13. Do not touch the device with wet or damp hands.
14. Never use the appliance in a damp place.
15. Never use the appliance close to a source of heat.
16. Never place anything on or in the appliance.
17. Do not use the appliance near flammable objects or products (curtains, aerosols, solvents, etc.).
18. Switch off and disconnect the appliance before moving, during installation and cleaning.
19. When using, leave at least 30 cm of free space on the back and sides of the product and at least 50 cm of free space above the product.
20. Always make sure that the appliance, plug, power cord and adapter are in good condition before use. Do not pull on the power cord or appliance, even when unplugging the adapter. The adapter is not supplied.
21. Pay attention because the appliance produces water vapor.

1. Outer cover
2. Switch

3. Essential oil sponge
4. Socket for connecting the USB power cable (at the back)



---

<b>Power</b>	2.5 W
<b>Noise</b>	<30 dB
<b>Recommended room area</b>	10 m <sup>2</sup>
<b>Connecting USB cable length</b>	50 cm
<b>Dimensions</b>	57 × 83 × 83 mm
<b>Weight</b>	142 g

## USE

### Before first use

Remove the aroma diffuser from the box and remove all protective foils and packaging materials. Check it is not damaged. Before disposing of the packaging, be sure to remove all components.

### Filling the essential oil

1. Remove the outer cover.
2. Add several drops of essential oil to sponge.
3. Attach the outer cover on the base and make sure it is tight.

### Use

1. Place the aroma diffuser on a flat, stable surface and plug the USB cable connector into the socket at the back of the aroma diffuser. Plug the USB-A connector into a socket in your PC or a suitable power adapter.
2. Long press the switch button and the aroma diffuser will start up and the backlight is on. Press the switch button once again to switch it off.
3. When you need to add the essential oil, press the switch button first to turn the aroma diffuser off and then unplug the USB cable. Then you can add the oil. Follow the instruction in the part “Filling the essential oil”.
4. When you do not use the aroma diffuser, press repeatedly the switch button to turn it off, and unplug the USB cable. Clean the aroma diffuser according to the instruction in part “Cleaning and maintenance”.



**Warning:**

Do not shake or move while in operation.

## **CLEANING AND MAINTENANCE**

Before cleaning or any maintenance, always turn the aroma diffuser off, unplug the USB cable and let it cool down completely.



**Warning:**

Never immerse the aroma diffuser, or the USB cable in water or any other liquid.

Do not use plastic or metal scrapers, harsh cleaners, chemicals, petrol, solvents, or other similar substances to clean any parts of the appliance. The surface finish could be seriously damaged.

 
Use only a soft, slightly dampened sponge to clean the outer surface. Wipe dry with a clean cloth.

## **Storage**

Make sure that the appliance is cool and clean before storing.

Keep it in a dry and well-ventilated place out of the reach of children or pets. Do not place any objects on it.

## **Level of protection against electric shock: II**

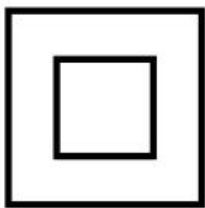

Protection against electric shock is provided by double or reinforced insulation.

**For indoor use only.**



The use of the WEEE Symbol indicates that this product should not be treated as household waste. By ensuring

this product is disposed of correctly, you will help protect the environment. For more detailed information about the recycling of this product, please contact your local authority, your household waste disposal service provider, or the shop where you purchased the item.

This product meets all of the related basic EU regulation requirements. The EU declaration of conformity is available on [www.alzashop.com/doc](http://www.alzashop.com/doc).

This product sold in the European Union meet the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS).



R20220714

# SIGURO

Alza.cz, a. s., Jankovcova 1522/53, 170 00 Prague 7, Czech Republic  
© 2022 Alza.cz, a. s. All Rights Reserved.

**Documents / Resources**



### USB Aroma Diffuser



EN Translation of the spreading instructions from the original language  
DE Übersetzung der Breitungsinstruktion aus der Originalsprache  
CS **Mávné k poslé v odgibánie jazyka.**  
SK Breitné náukou k poslé v zngibánie jazyka  
HU A lefordít a úatálfordításe a zngibánie nyelvét.

[SIGURO SGR-AD-N300DW USB Aroma Diffuser](#) [pdf] Instruction Manual  
SGR-AD-N300DW USB Aroma Diffuser, SGR-AD-N300DW, USB Aroma Diffuser, Aroma Diffuser, Diffuser

**Manuals+.**